

DANCOVER[®]

.com

Manual
for
Gazebo Santa Catalina
3,65x3,65m



Use the hex keys in the box.



You may need to use a drill for this step.



 
Three or more people are required at this stage.






 
 

 




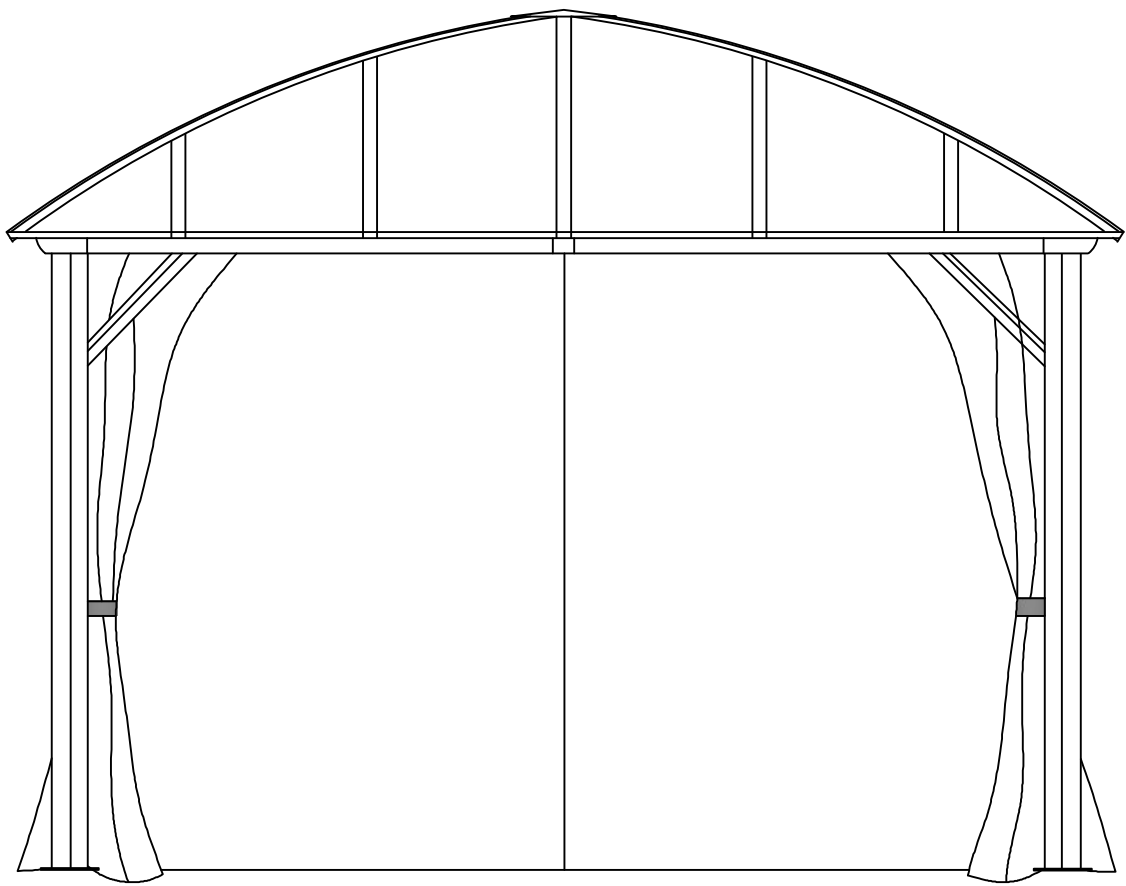



 
 


 
 
 
 



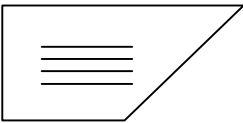 
 
 
 

 




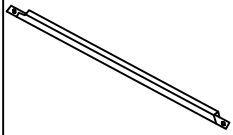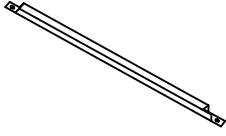


You may need a ladder.

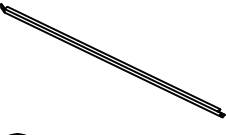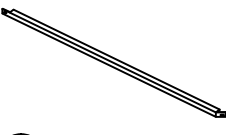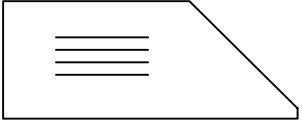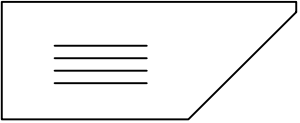 





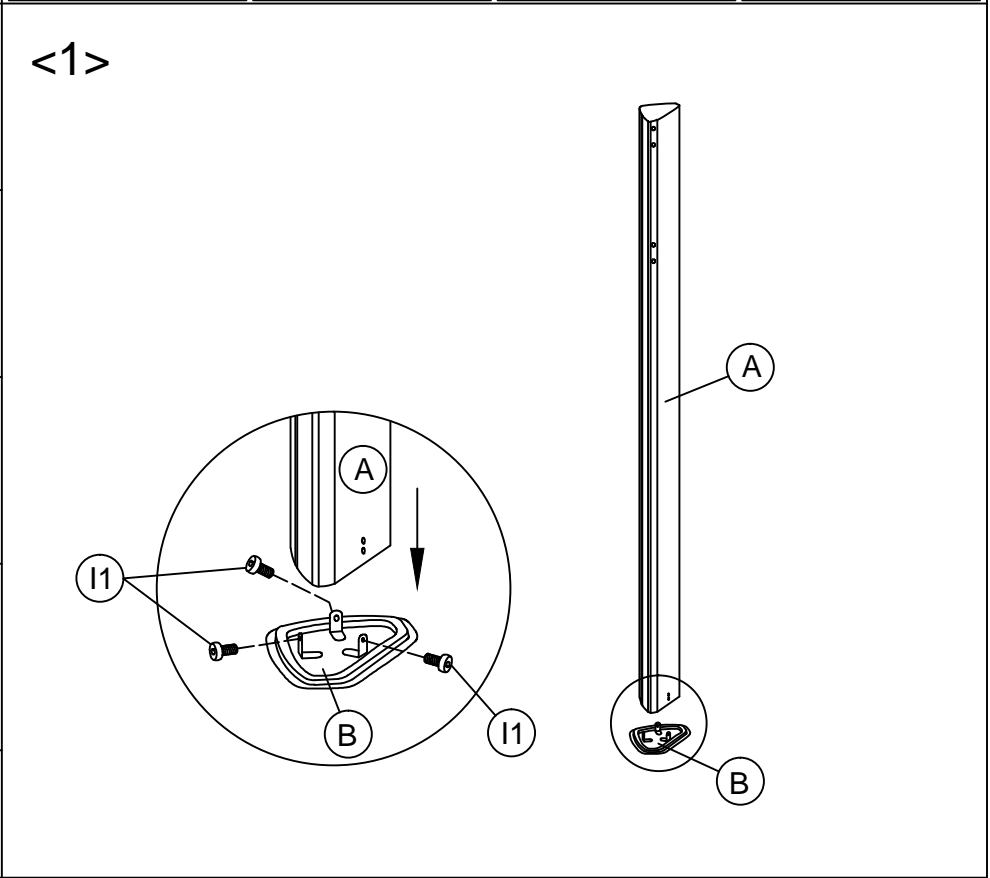 
Do not tighten screws all the way for now.



	 A 4x	 B 4x	 C 4x
	 D 4x	 E 4x	 F 4x
	 G 4x	 H 4x	 I 1x
			 J 1x
	 K 4x	 L 4x	 M 4x
	 N 4x		
	 O 4x	 P 4x	 Q 4x
	 R 4x		
	 S 4x	 T 4x	 U 4x
	 V 4x	 W 4x	 X 4x
	 Y 4x	 Z 4x	

		
(A1) 4x	(B1) 4x	(C1) 4x
		
(D1) 4x	(D2) 4x	(E1) 8x
		 M6x16
(G1) 4x	(H1) 128x	(I1) 145x
 M5x10	 ST4.8x10	 S4
(K1) 4x	(L1) 40x	(M1) 1x
 M6x25		(J1) 8x

- 
(A) 4x
- 
(B) 4x
- 
M6x16
(I1) 12x
- 
S4
(M1) 1x
- 3





(C) 4x

 


(D) 4x



M6x16

(I1) 16x





(M1) 1x



(H1) 128x
  
<2>

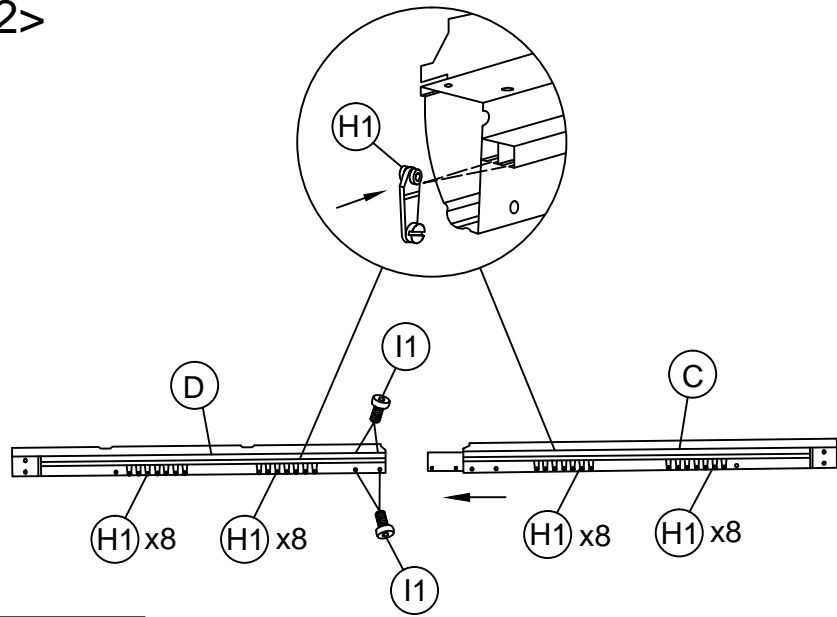


(E1) 8x



M6x16

 
(I1) 24x








(M1) 1x

  
4

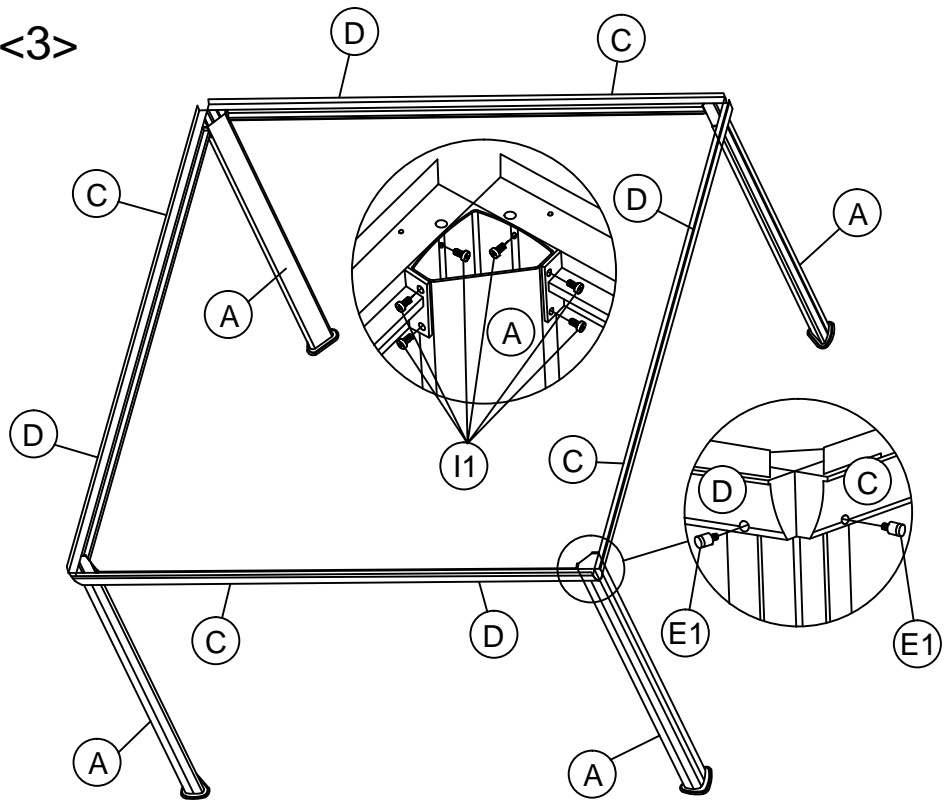


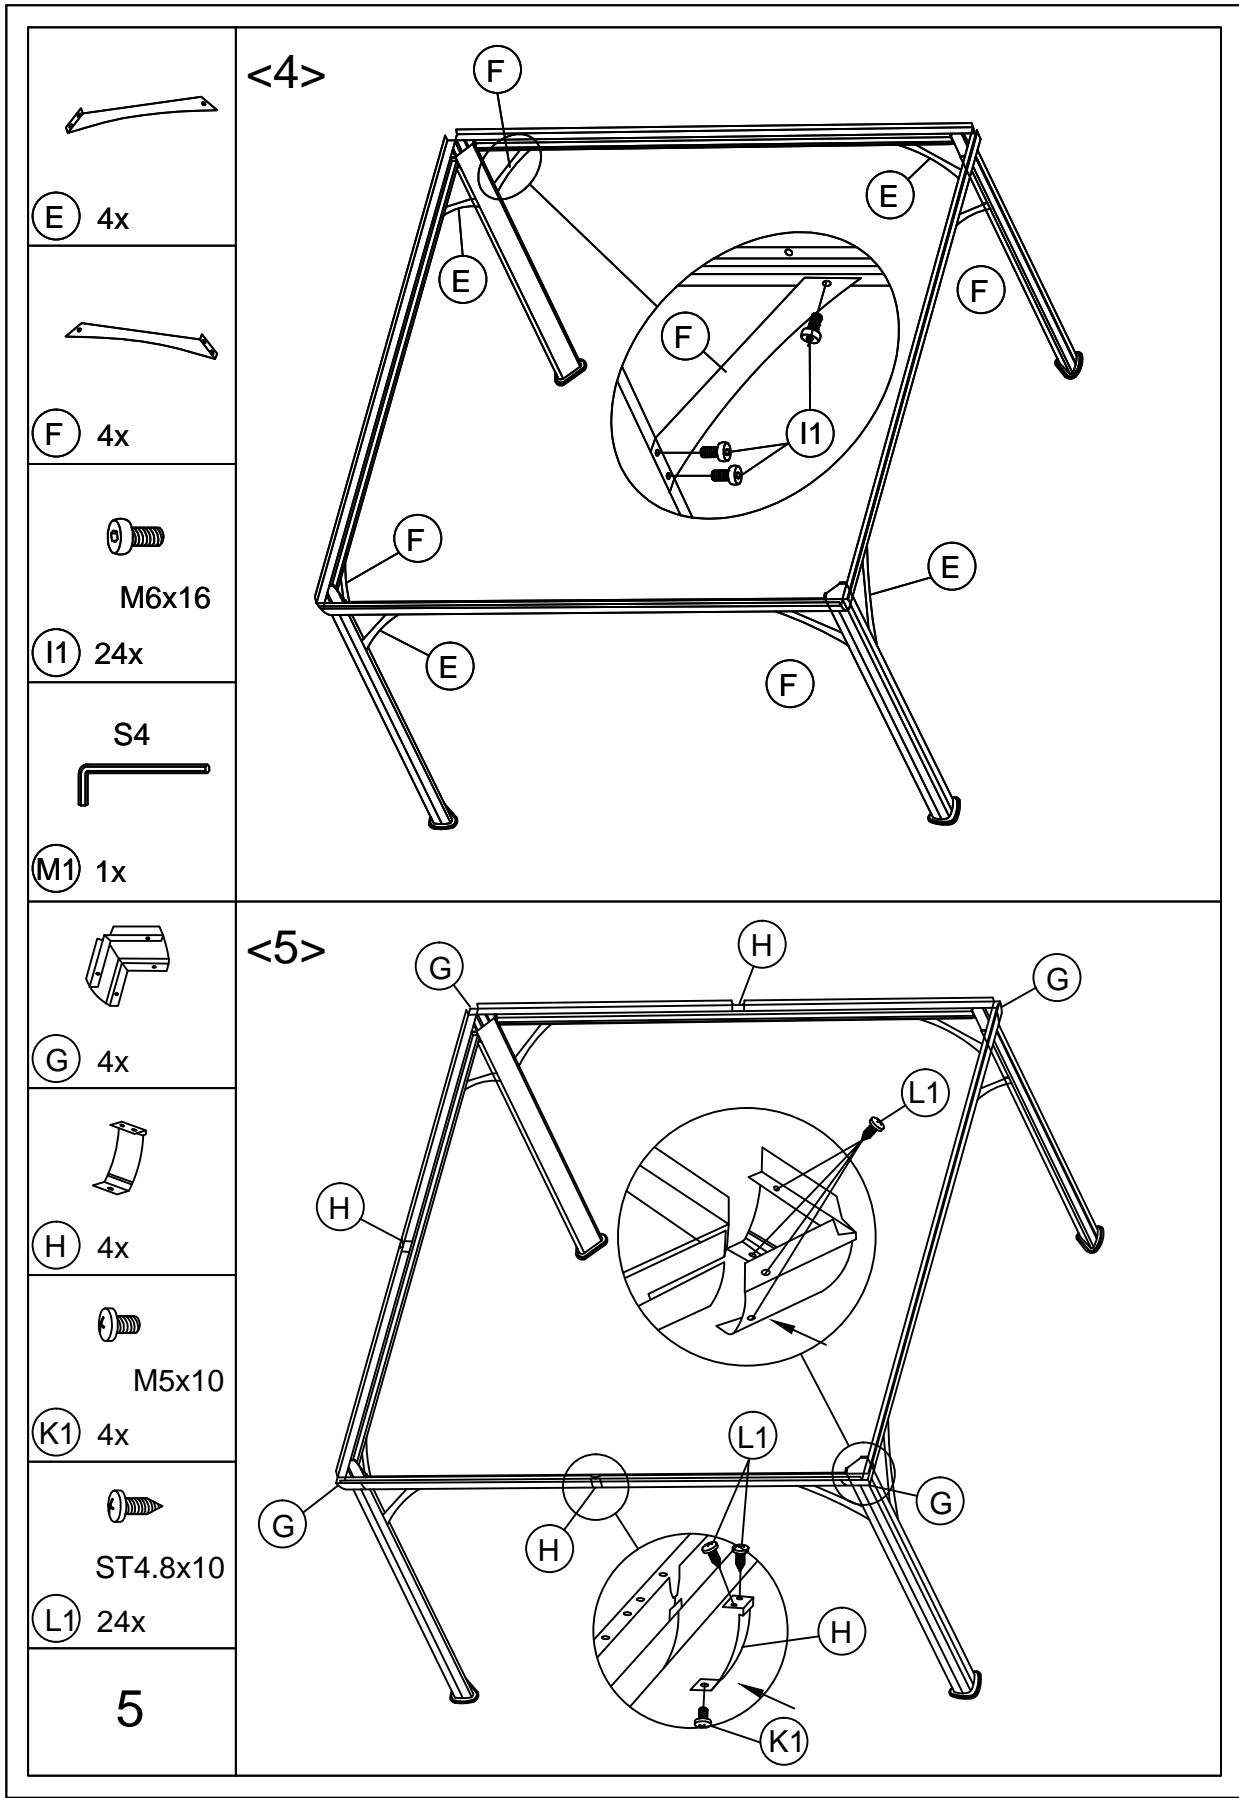
<3>

  


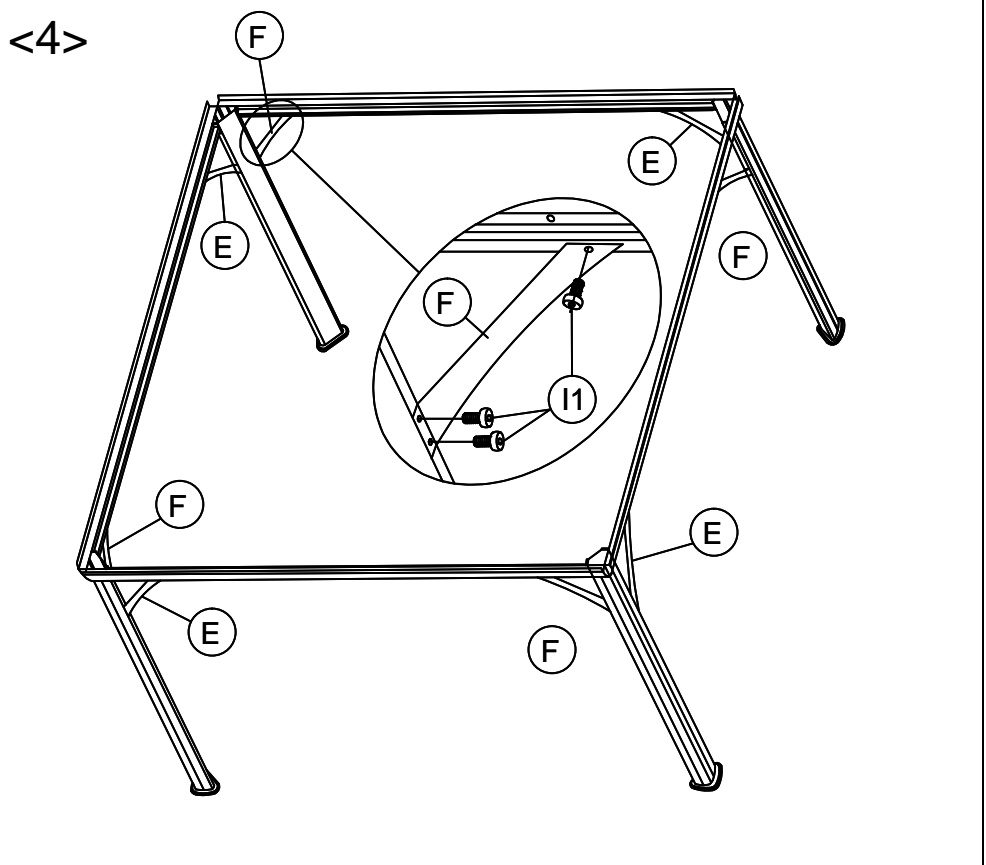 

 - <4>**
-  **(E)** 4x
 -  **(F)** 4x
 -  **(I1)** 24x
M6x16
 - S4**

 - (M1)** 1x

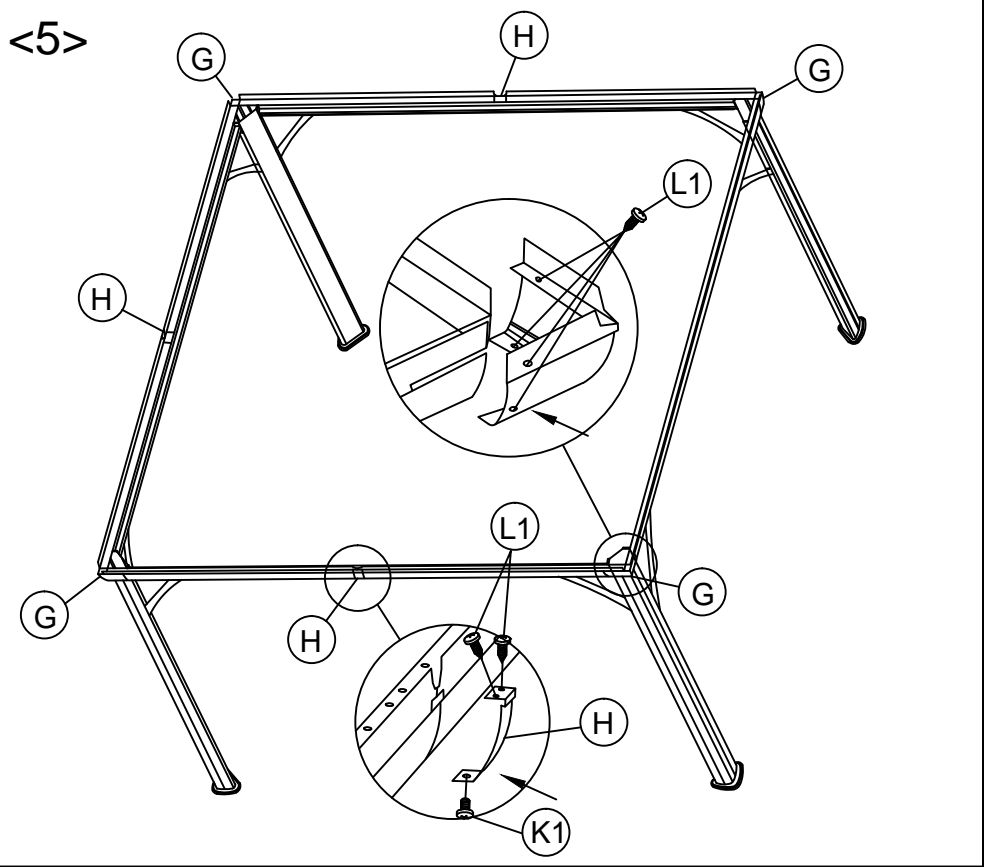 

- <5>**
-  **(G)** 4x
 -  **(H)** 4x
 -  **(K1)** 4x
M5x10
 -  **(L1)** 24x
ST4.8x10
 - 5**





<6>

(K) 4x



(M) 4x



 
M6x16

(I1) 4x

S4



(M1) 1x

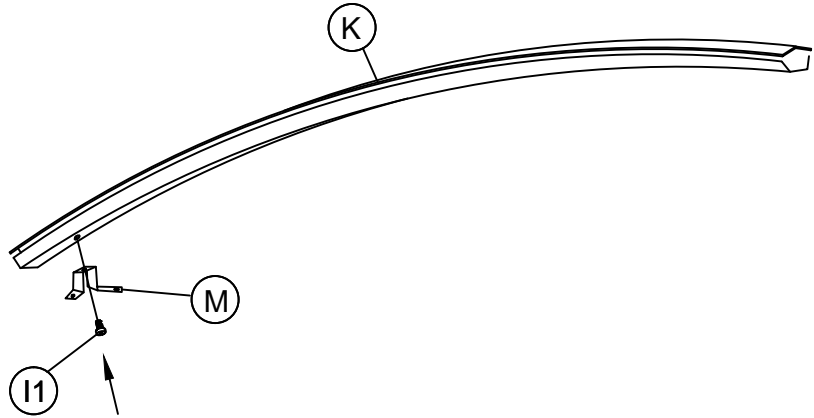

<7>

(I) 1x



(L) 4x



M6x16

 
(I1) 24x

 
S4



(M1) 1x

6

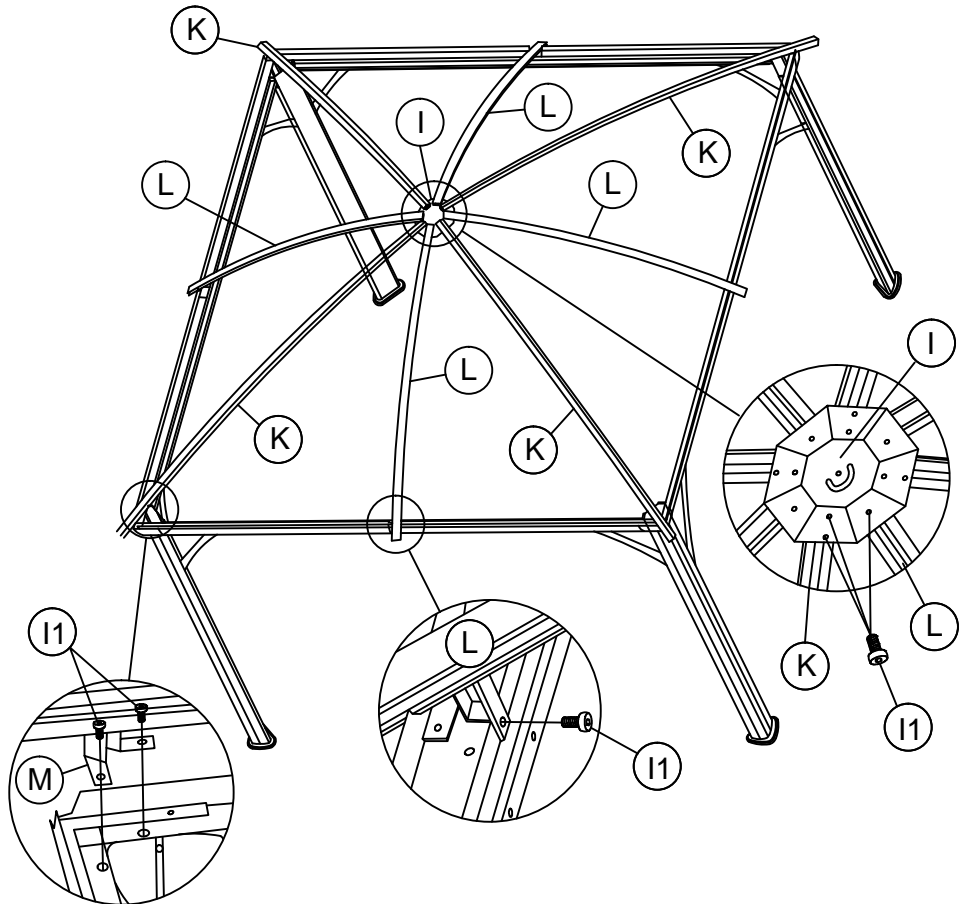



<8>

(J) 1x



(N) 4x



(O) 4x



(P) 4x



(Q) 4x



M6x16

 
(I1) 17x

 
S4




(M1) 1x

7

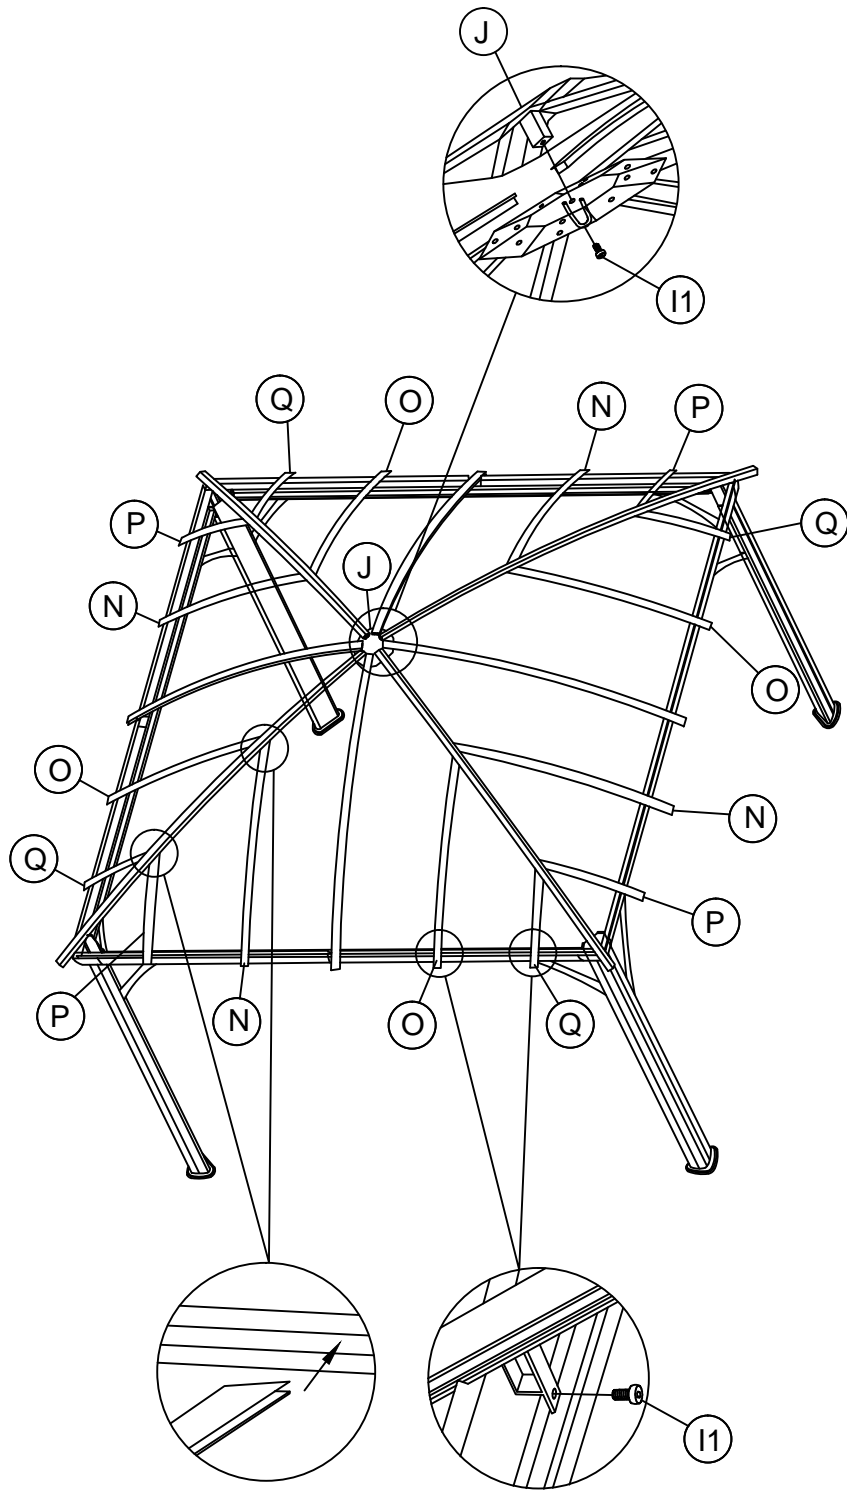



 (R) 4x



(S) 4x



(T) 4x



(U) 4x



M6x16

(I1) 16x



M6x25

(J1) 8x

 
S4

 


(M1) 1x

8


<9>

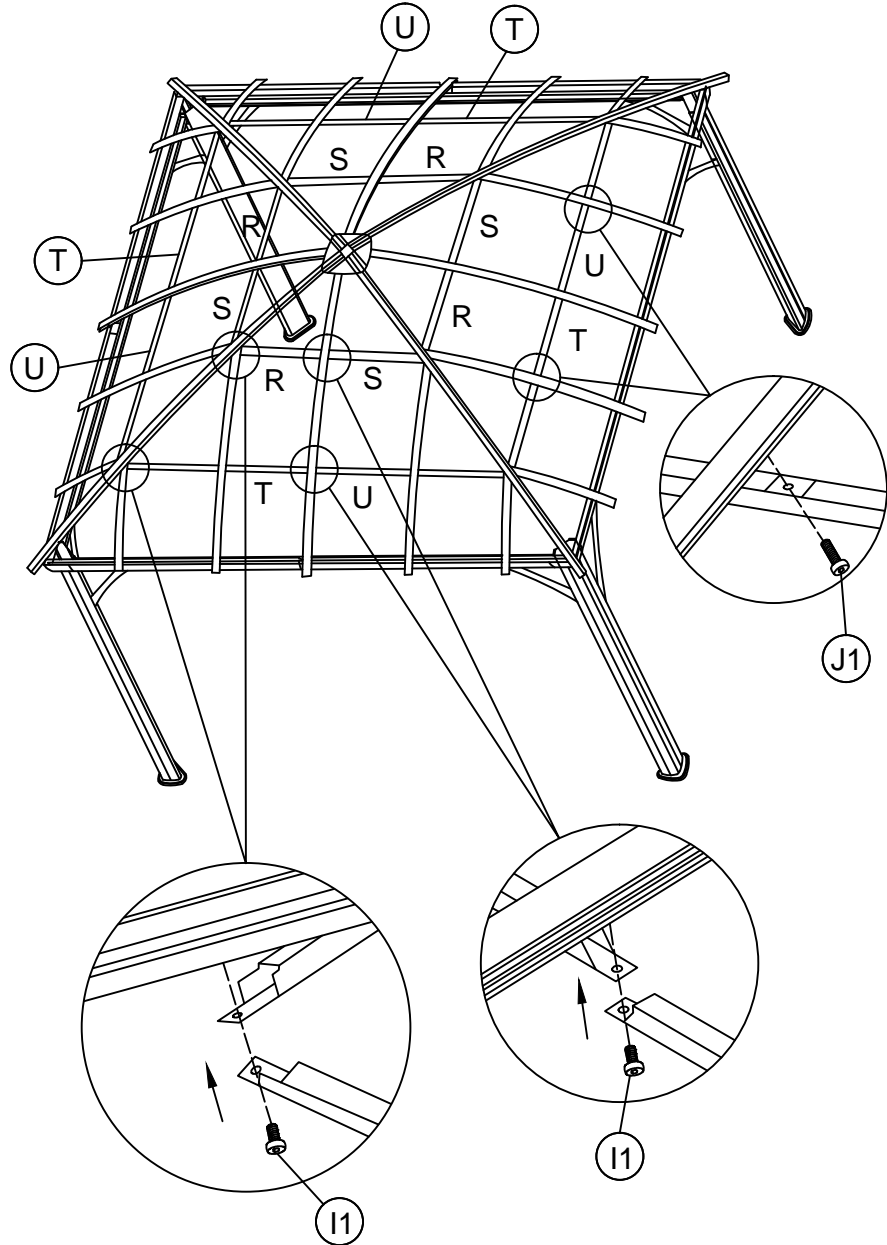




<10>

 
(X) 4x



 
(Y) 4x



 
(Z) 4x




(A1) 4x

 

(B1) 4x

 

(C1) 4x

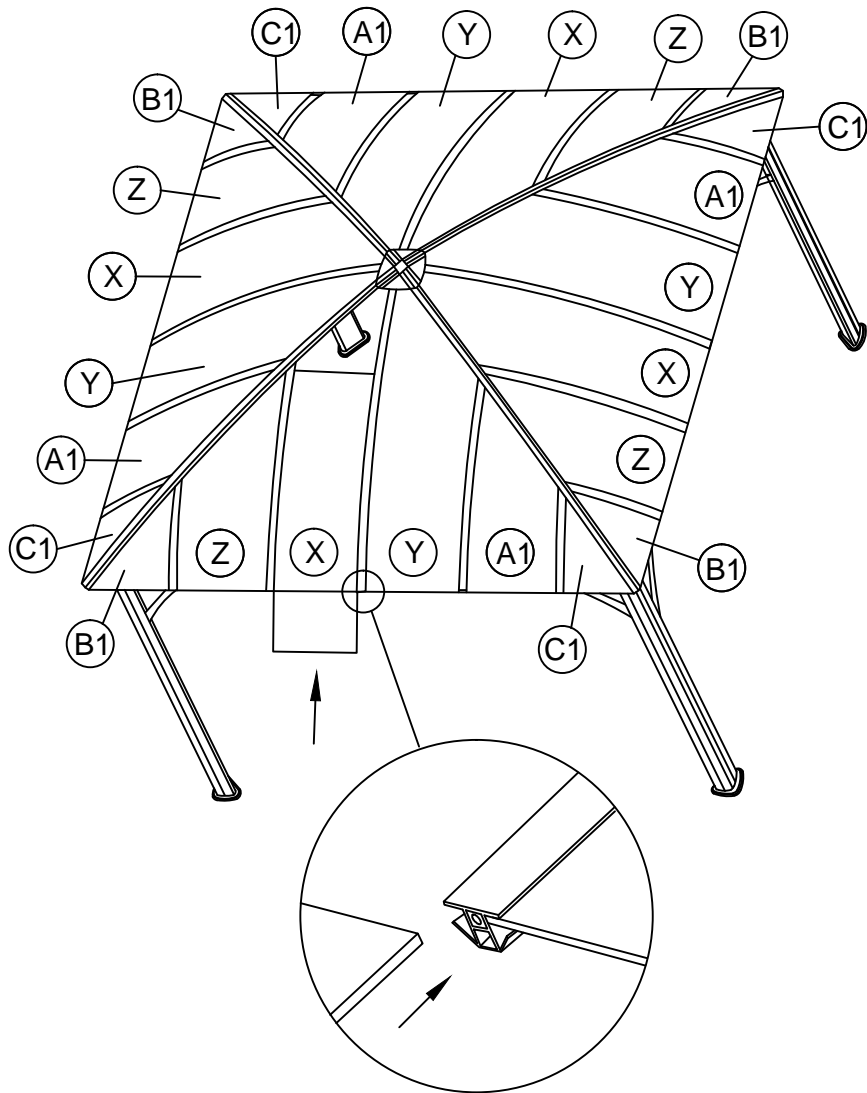 

<11>



(V) 4x



(W) 4x



(F1) 4x



(G1) 4x



M6x16

(I1) 8x



ST4.8x10

 
(L1) 16x

 
S4



(M1) 1x


10

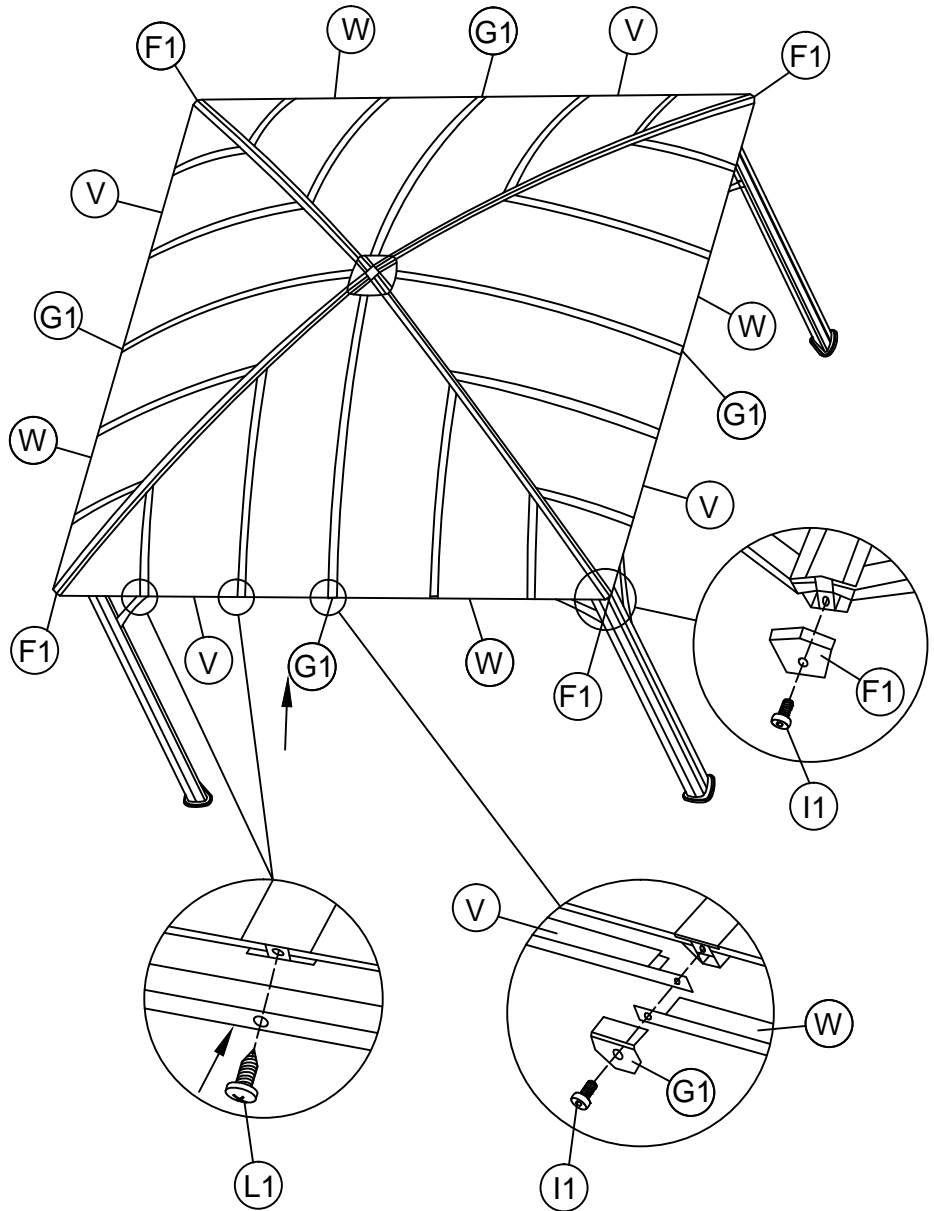







<12>

 D1 4x



D2 4x

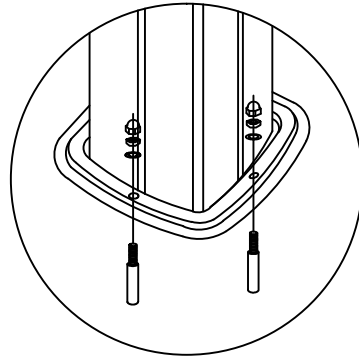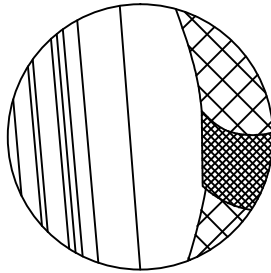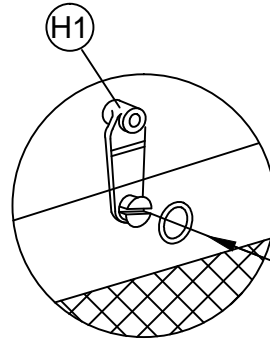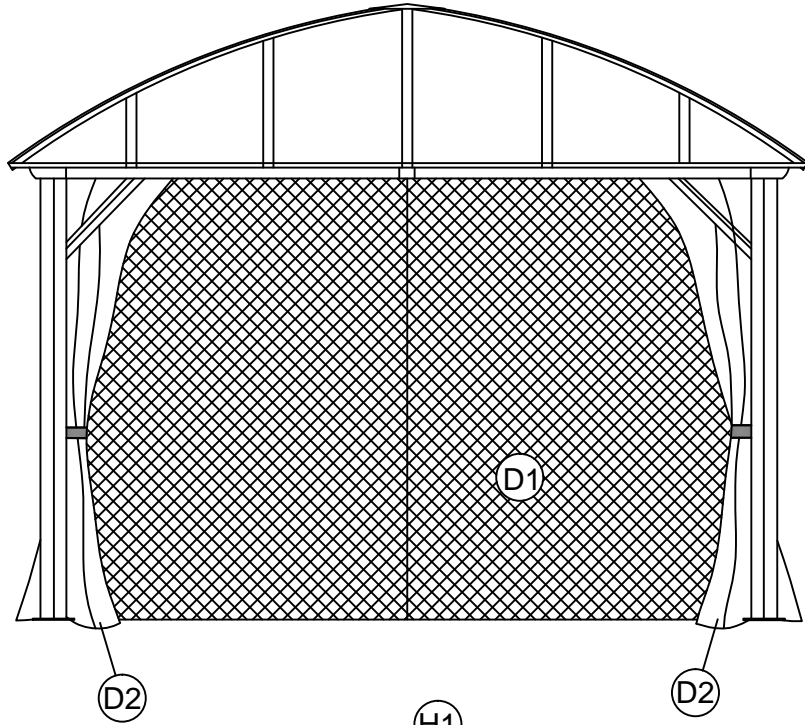    

11

NOTICE

Your proper assembly, installation and use of this structure will ensure many years of valued service from this unit. Please follow all instructions carefully and heed warnings on the carton, included in the box and sewn into the inner tent seams for your own protection and longevity of this unit.

It is built of high quality materials but must be used as intended or it's lifespan will be drastically reduced. Never climb on top of this structure. Do not rest heavy objects against the side of the structure. Failure to observe or comply with these instructions will void the manufacturer's warranty and dramatically reduce the lifespan of the unit.

Please utilize a minimum of three persons and a step ladder to erect this structure safely. Do not attempt to erect the structure during heavy winds or inclement weather. When the structure is erected, please use guy ropes and stakes to secure tightly at all times. If using on a solid surface such as hard ground or concrete/asphalt, be sure to use cinder blocks as anchors on each corner to which you can tie the support/guy ropes. If winds are heavier, it's a good idea to use cinder blocks in addition to ground stakes for extra anchoring support.

WARNING

Do not use candles, matches or open flames of any kind in or near a tent.

Do not cook inside a tent

Build campfires downwind and several metres away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night

Exercise extreme caution when using fuel-powdered lanterns on heaters inside a tent and use battery-operated and use battery-operated lanterns whenever possible

Do not refuel lamps, heaters or stoves inside a tent

Extinguish or turn off all lanterns before going to sleep

Do not smoke in a tent

Do not store flammable liquids inside a tent

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

