DANCOVER®

PARTY TENT SEMI PRO 5m series

DANCOVER®

Safety Advice

Attention

In some countries approval is needed to set up a tent larger than 75 m2.

The owner of the tent has the sole responsibility to make sure that these local rules are followed and that the mounting is correct.

In case of bad weather conditions, it is your responsibility to ensure that people inside are safe and that the tent does not cause damage to others.

Do not use open fire, welding equipment or other ignition sources in the tent. Though the fabric is made of flame retardant material it can still burn.

It is always recommended that you secure your tent properly with safety straps and augers when you put up the structure.

We recommend you to insure the tent, or check if it is covered by home contents insurance, in case of unplanned events, accidents or bad weather.

Tents are meant as temporary shelter and must be evacuated under extreme weather conditions.

This structure is not tested for specific snow and wind loads. That's why we always recommend to remove snow from the top.

Dimention		NO	5x6	5x8	5x10	5x12	5x14
Pipe 2188mm 50-50 with holes	() o o)	1	4	6	8	10	12
Pipe 1880mm 38-38	0.0	2	15	20	25	30	35
Pipe 1880mm 38-38 with hole	0)	3	4	4	4	4	4
Pipe 1940mm 50-50	() 0	4	8	10	12	14	16
Pipe435mm 50-50	0.000	5	8	10	12	14	16
Pipe 1174 mm 25-25	0	6	4	4	4	4	4
Pipe 880mm 38-38	() ~ ~ ~)	7	2	2	2	2	2
Pipe 2188mm 50-50 with holes and a hole	() • •	8	4	4	4	4	4
connector two way	() • • •)	9	8	10	12	14	16
connector Three way 110°54-42		10	4	4	4	4	4
connector Three way 140°54-42		11	2	2	2	2	2

connector four way 140 °54-42		12	2	3	4	5	6
connector four way 110 °54-42		13	4	6	8	10	12
Connector three way –foot for the corners 54-42		16	2	2	2	2	2
Connector three way –foot for the corners 54-42		17	2	2	2	2	2
Connector three way –foot for the sidewalls 54-42		18	4	6	8	10	12
Connector three way –foot for the endwalls 54-42		19	2	2	2	2	2
Groundpegs		20	4	6	8	10	10
Screw hook	2-0	21	4	4	4	4	4
Groundpeg 6x180mm		22	8	10	12	14	16
Groundpeg 4x180mm		23	36	42	48	54	60

Screw M8X45mm	24	38	48	58	68	78
Screw M8X60mm	25	36	50	64	78	92
Locknuts	26	82	106	130	154	178
Screw 45mm	27	4	4	4	4	4
Screw 60mm	28	4	4	4	4	4
Allen key	30	2	2	2	2	2


spanner	5-0	31	1	1	1	1	1
Cap nuts		32	8	8	8	8	8
Long bungeeball		33	88	106	124	142	160
Short bungeeball	0	34	22	22	22	22	22
rope		35	4	4	4	4	2
roof	Fully	37	1	1	1	1	1

_,	e	3111 -2.3 FAKTT TENT 3	LIVII I N	i.U				
	sidewall		38	6	8	10	12	14
	endwall		39	2	2	2	2	2
	DANCOVER® Big or Small we cover it all							
		Nordre Strandvej 119 G 3150 Hellebæk Denmark Tel.: (+45) 70 26 76 20						

Fax: (+45) 70 26 76 20


WWW.DANCOVERSHOP.COM

5m-2.3 PARTY TENT SEMI PRO

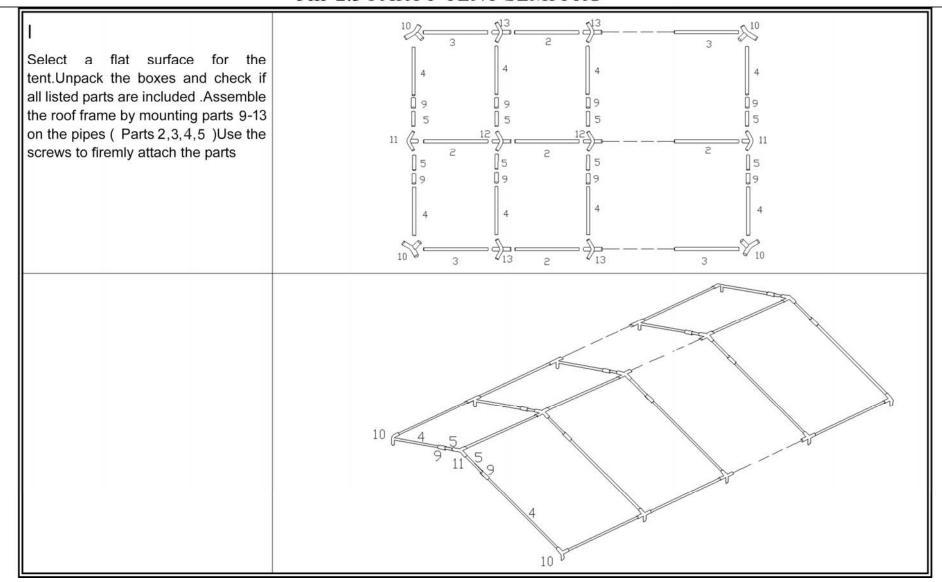


П

Lift one side of the tent frame and attach the legs(1). Attach the legs with part no. 8 to the outside in all four corners. Place the roof onto the frame and use the bungees to fasten it . Be sure not to put too much tension on the bungees in order not to make attaching the other side more difficult.

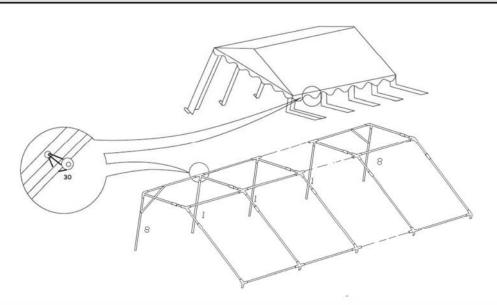


111

Attach the legs on the other side and install the feet(16,17,18,19)at the bottom. Use the long ground pegs to fasten the feet to the ground. Attached the side covers to the pipes(1,8) Connect leg cover with sidewall and endwall by velcro as shown. Reinforce the side frame by attaching the diagonmal pipes(6) to all four corners. Complete the bottom frame with the required pipes (2,7) and connector (16,17,18,19).

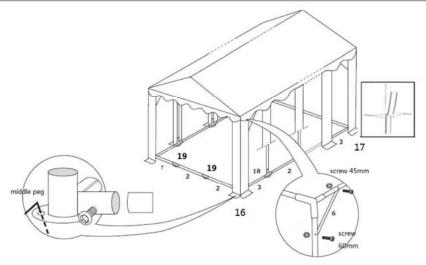

IV

Extend the sidewalls and the endwalls and attach the sidewalls to the frame using the bungees. Attach the endwall directly to the roof using the short bungees. Use the short ground pegs to fasten the end walls to the ground. The guy rope runs from every corner of the tent and is braced to the ground using the screw hooks. The professional ground pegs provide the tent with additional tension and stability

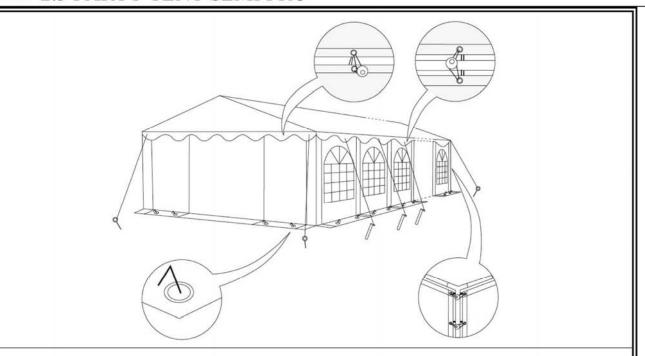

. Warning

- 1. In order to avoid being rusted by air ,oil is covered on the surface of the pipes ,before set up the tent ,please remove the oil carefully to keep the cover clean.
- 2. Take note that the tent needs to be handled carefully to avoid damage.
- 3. Do not force the frame as they may be damage in the process.
- 4. Tents are meant as temporary shelter and must be evacuated under extreme weather conditions.

Please select a suitable site for the tent to avoid the damage to underground sprinkler systems, water, gas or electrical lines.





Contact information

Head office:

Nordre Strandvej 119 G 3150 Hellebæk Dancover A/S **Denmark**

For more information please visit: www.dancovershop.com

National contact

denmark@dancover.com Denmark:

uk@dancover.com

Germany:

germany@dancover.com

France:

france@dancover.com

Sweden:

sverige@dancover.com

Finland:

suomi@dancover.com

Poland:

polska@dancover.com

Luxembourg:

luxembourg@dancover.com

espana@dancover.com Spain:

Italy:

italia@dancover.com

schweiz@dancover.com Switzerland:

Austria:

austria@dancover.com

Norway:

norge@dancover.com

Nederland:

nederland@dancover.com

Ireland:

ireland@dancover.com

Belgium:

belgique@dancover.com