

DANCOVER[®]



Manual
for
Storage Tent PRO
3,5 Series PVC/PE

DANCOVER[®]

.com

Safety Advice

Attention

In some countries approval is needed to set up a tent larger than 75 m². It is your responsibility to comply with local rules and regulations and to ensure that the tent is assembled correctly.

In case of bad weather conditions, it is your responsibility to ensure the tent is safely secured and that the tent does not cause damage to others.

Do not use open fire, welding equipment or other sources which can ignite, inside or close to the tent.

The tent must be safely secured. We recommend you secure your tent with straps and pegs as soon as it is assembled.

Make sure to check if the tent is covered by your home contents insurance.

Tents must be evacuated under extreme weather conditions.

In the event of snow, always remove snow from the roof of the tent regularly to prevent snow from building on the roof, as heavy snow can cause the tent to collapse.

In the event of rain, there is a risk of rain puddles building up on top of the roof of the tent. Heavy rain puddles can cause the roof to collapse. It is your responsibility to ensure rain puddles do not build up. As a precaution, make sure the roof of the tent is stretched out properly and adequately over the side frames of the tent and remove rain water regularly.

Do not unpack or repack your tent in freezing temperatures. In case of temperatures below zero, always unpack and repack your tent indoors to avoid the risk of cracking parts.

The tent must be totally dry before you repack and store it to avoid mildew.

Note: Dancover warranty applies only to the normal use of the Product, normal wear and tear excepted, in accordance with written use instructions or manual. The warranty does not apply to damage caused by accident, abuse, misuse, or modification of the Product.

Warranty Information

Please visit dancovershop.com for information on warranty.

Please always check our website for the latest safety advice and manual.

DANCOVER[®]



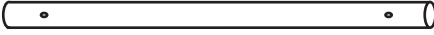
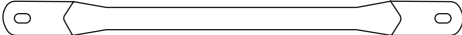

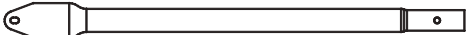
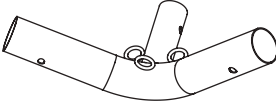
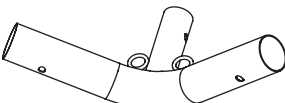
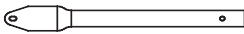
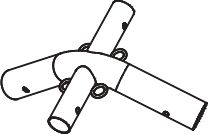

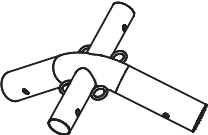
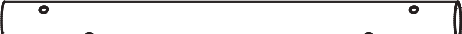
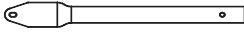










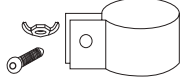

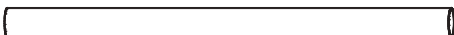
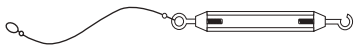
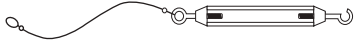
.com






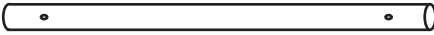

 
 

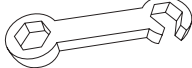


 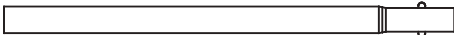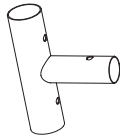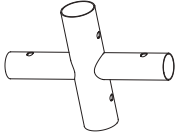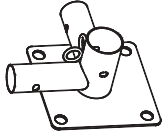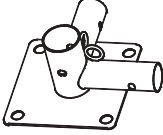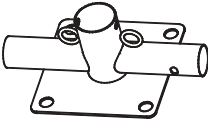
 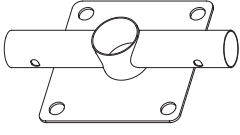


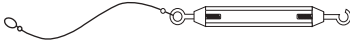Warning


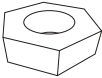






1. In order to avoid being rusted by air, oil is covered on the surface of the pipes. Before setting up the tent, please remove the oil carefully first to keep the cover clean.
2. Take note that the tent needs to be handled carefully to avoid damage.
3. Do not force the frames as they may be damage in the process.
4. Tents are meant as temporary shelter, and must be evacuated under extreme weather conditions.

Please, select a suitable site for the tent to avoid the damage of underground sprinkler systems, water, gas or electrical lines.

| Part no. | | | 3.5x8m | 3.5x10m |
|----------|----------------------------------|--|--------|---------|
| 1 | Frame pole 1600mm 50-50 |  | 18 | 24 |
| 2 | Frame pole 1880mm 38-38 |  | 30 | 37 |
| 3 | Groundbar 1380mm 38-38 |  | 2 | 2 |
| 4 | Roof support 1730mm 25-25 |  | 5 | 6 |
| 5 | Frame pole 1600mm 50-50 |  | 4 | 4 |
| 6 | Diagonal support 1720mm 32-32 |  | 8 | 8 |
| 7 | 3-way connector 54-42/3 rings |  | 4 | 4 |
| 8 | 3-way connector 54-42/2 rings |  | 2 | 2 |
| 9 | Diagonal support 800mm 32-32 |  | 4 | 4 |
| 9-1 | 4-way connector 54-42/4 rings |  | 3 | 4 |
| 10 | Female doorbar 1835mm 32-32 |  | 2 | 2 |
| 10-1 | 4-way connector 54-42/4 rings |  | 6 | 8 |
| 11 | Lower leg 1600mm 50-50 |  | 8 | 8 |
| 12 | Female doorbar 970mm 32-32 |  | 2 | 2 |

| Part no. | | | 3.5x8m | 3.5x10m |
|----------|---------------------------------|--|--------|---------|
| 13 | Strengthen bar 1845mm 32-32 |  | 2 | 2 |
| 14 | 3-way connector 54-42 |  | 4 | 4 |
| 15 | 4-way connector 54-42 |  | 6 | 8 |
| 16 | 3-way connector for corner |  | 2 | 2 |
| 17 | 3-way connector for corner |  | 2 | 2 |
| 18 | 3-way connector for sidewall |  | 6 | 8 |
| 19 | 2-way connector for endwall |  | 2 | 2 |
| 20 | Strengthen bar 980mm 32-32 |  | 2 | 2 |
| 21 | Bracket |  | 10 | 12 |
| 22 | Groundbracket |  | 8 | 10 |
| 23 | Strengthen bar 1855mm 25-25 |  | 16 | 20 |
| 24 | Turnbuckle for door 4610mm |  | 4 | 4 |
| 25 | Turnbuckle for roof 2550mm |  | 16 | 20 |

| Part no. | | | 3.5x8m | 3.5x10m |
|----------|----------------------------|---|--------|---------|
| 26 | Turnbuckle for side 3700mm |  | 16 | 20 |
| 27 | Peg 10x350mm |  | 16 | 20 |
| 28 | Spiral peg |  | 4 | 4 |
| 29 | Small peg |  | 38 | 42 |
| 30 | Bungeeball long |  | 56 | 56 |
| 31 | M6 wingnut |  | 22 | 24 |
| 32 | Screw M6x30mm |  | 10 | 12 |
| 33 | Screw M6x45mm |  | 10 | 10 |
| 34 | Screw M6x65mm |  | 2 | 2 |
| 35 | M6 nut |  | 4 | 4 |
| 36 | Spanner |  | 2 | 2 |
| 37 | Tie down |  | 4 | 4 |
| 38 | Steel clip |  | 34 | 40 |
| 39 | Screw M8x50mm |  | 64 | 78 |
| 40 | Screw M8x65mm |  | 68 | 80 |
| 41 | M8 nut |  | 132 | 158 |
| 42 | Peg 16x600mm |  | 16 | 18 |

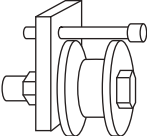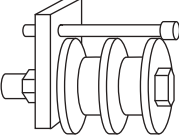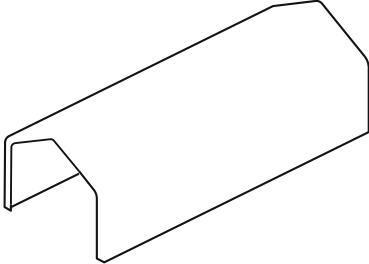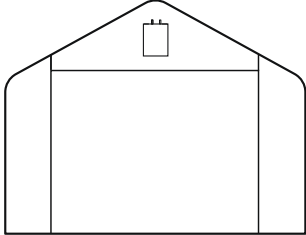
| Part no. | | | 3.5x8m | 3.5x10m |
|----------|--------------------------|--|--------|---------|
| 43 | M12 washer |  | 4 | 4 |
| 44 | M12 nut |  | 4 | 4 |
| 45 | Screw M12x48mm |  | 2 | 2 |
| 46 | Screw M12x65mm |  | 2 | 2 |
| 47 | Sheaved block 1 wheel |  | 2 | 2 |
| 48 | Sheaved block 2 wheel |  | 2 | 2 |
| 50 | Roof |  | 1 | 1 |
| 51 | Endwall |  | 2 | 2 |

| 3.5x8-10x3.3m storage pro | Part 31 | | Part 32 | | Part 33 | Part 34 | Part 35 | Part 39 | | Part 40 | | Part 41 | | Part 43 | Part 44 | Part 45 | Part 46 | |
|--|----------------|--------|----------------|--------|----------------|----------------|-----------|----------------------|--------|----------------------|--------|-----------|--------|---------------|------------|-----------------|-----------------|---|
| | M6 Wing nut | | M6x30 Screw | | M6x45 Screw | M6x65 Screw | M6 Nut | M8x50 Screw (Ø42) | | M8x65 Screw (Ø54) | | M8 Nut | | M12 Washer | M12 Nut | M12x48 Screw | M12x65 Screw | |
| | 3.5x8 | 3.5x10 | 3.5x8 | 3.5x10 | 3.5x8 | | | 3.5x8 | 3.5x10 | 3.5x8 | 3.5x10 | 3.5x8 | 3.5x10 | | | | | |
| Used for Part 4 and Part 21 | | | 10 | 12 | | | | | | | | | | | | | | |
| Used for Part 6 and Part 12 | | | | | 2 | | | | | | | | | | | | | |
| Used for Part 6 and Part 10 | | | | | 2 | | | | | | | | | | | | | |
| Used for Part 6 and Part 9 | | | | | 4 | | | | | | | | | | | | | |
| Used for Sheaved block 1wheel Part 47 | | | | | 2 | | 2 | | | | | | | | | 2 | | |
| Used for Sheaved block 2 wheel Part 48 | | | | | | 2 | 2 | | | | | | | | | | | 2 |
| Used for M6x30 | 10 | 12 | | | | | | | | | | | | | | | | |
| Used for M6x45 | 10 | 10 | | | | | | | | | | | | | | | | |
| Used for M6x65 | 2 | 2 | | | | | | | | | | | | | | | | |
| Used for 2-way connector 19 | | | | | | | | 4 | 4 | | | | | | | | | |
| Used for 3-way connector 7 | | | | | | | | 4 | 4 | 8 | 8 | | | | | | | |
| Used for 3-way connector 8 | | | | | | | | 2 | 2 | 4 | 4 | | | | | | | |
| Used for 3-way connector 14 | | | | | | | | 4 | 4 | 8 | 8 | | | | | | | |
| Used for 3-way connector 16 | | | | | | | | 4 | 4 | 2 | 2 | | | | | | | |
| Used for 3-way connector 17 | | | | | | | | 4 | 4 | 2 | 2 | | | | | | | |
| Used for 3-way connector 18 | | | | | | | | 12 | 16 | 6 | 8 | | | | | | | |
| Used for 4-way connector 9-1 | | | | | | | | 6 | 8 | 6 | 8 | | | | | | | |
| Used for 4-way connector 10-1 | | | | | | | | 12 | 16 | 12 | 16 | | | | | | | |
| Used for 4-way connector 15 | | | | | | | | 12 | 16 | 12 | 16 | | | | | | | |
| Used for Part 6 and Part 11 | | | | | | | | | | 4 | 4 | | | | | | | |
| Used for Part 9 and Part 11 | | | | | | | | | | 4 | 4 | | | | | | | |
| Used for M8x50 | | | | | | | | | | | | 64 | 78 | | | | | |
| Used for M8x65 | | | | | | | | | | | | 68 | 80 | | | | | |
| Used for M12x48 | | | | | | | | | | | | | | 2 | 2 | | | |
| Used for M12x65 | | | | | | | | | | | | | | 2 | 2 | | | |
| | 22 | 24 | 10 | 12 | 10 | 2 | 4 | 64 | 78 | 68 | 80 | 132 | 158 | 4 | 4 | 2 | 2 | |

I


Select a flat surface at ground for the tent, unpack the carton and check all the parts including tubes, tent and accessories... etc. are present and the same as the list.

Assemble the framework of rooftop by joining the portion (7, 8, 9-1, 10-1) together with poles (1, 2, 4, 5, 6, 12) NO. 11 is on four corners for diagonal pipe.

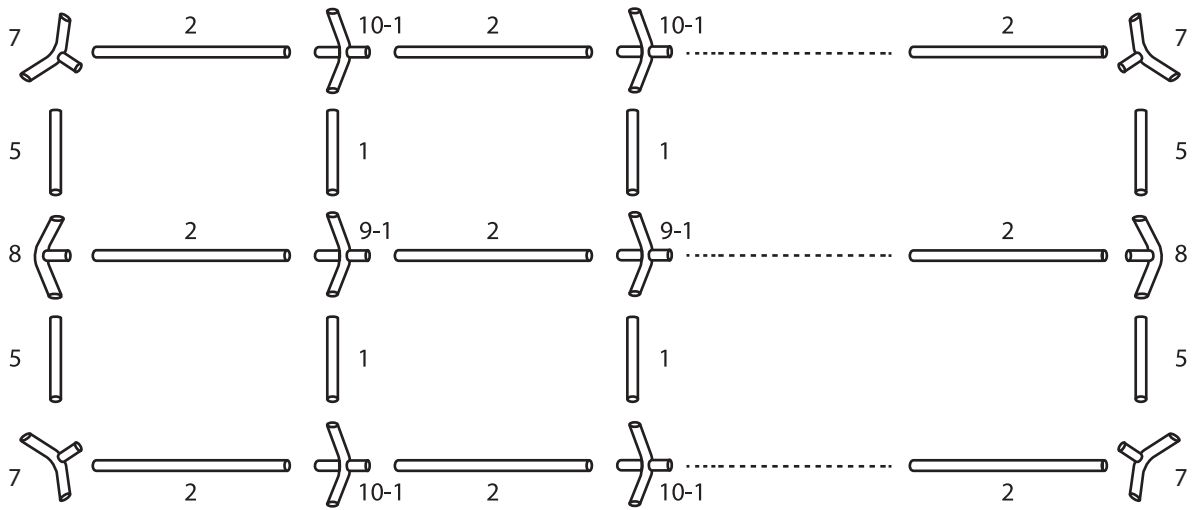

II


To ensure the screw fixed to every pole tightly. And then use the turnbuckle set which is diagonally across through each section as below.

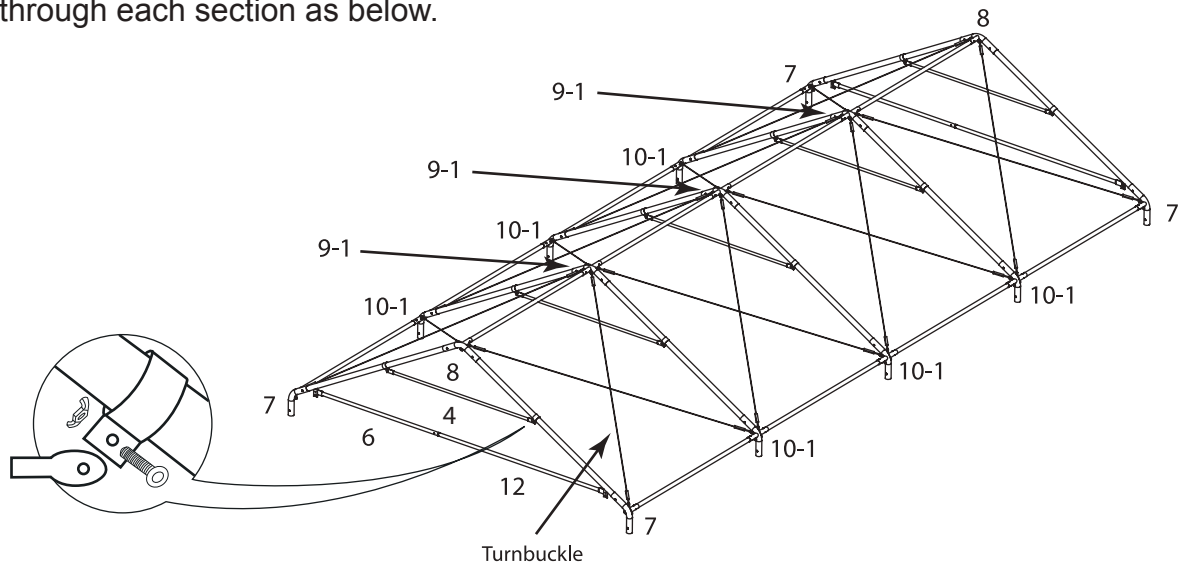

III


Attach one end of supported pole (1) to the joints.

If you want the rope pull at the opposite side than shown in the drawing then switch sheaved block (47) and (48)

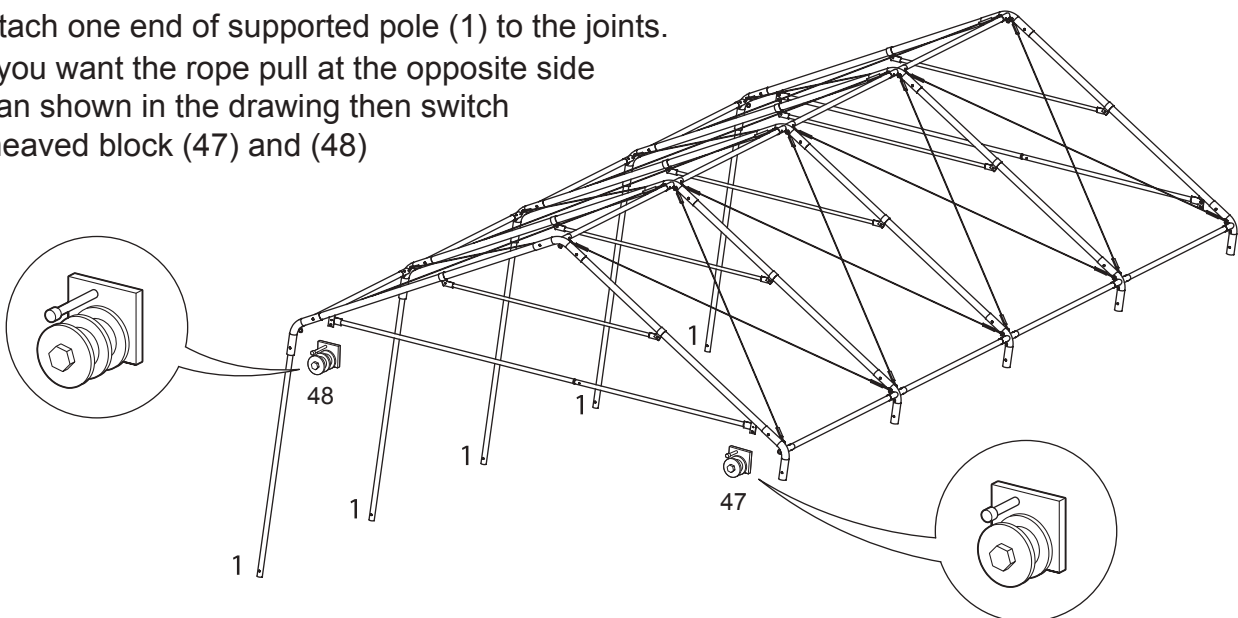


IV

Attach the other supported poles (1, 2, 11) to the joints, built-up the framework. NO. 11 is on four corners for diagonal pipe.

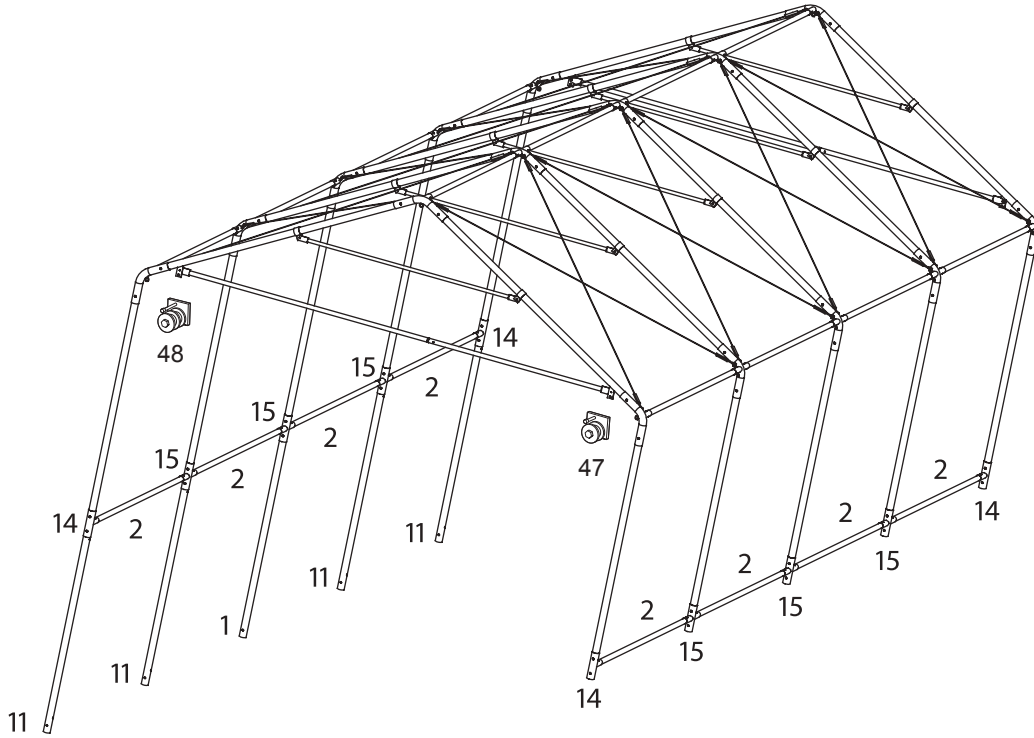


V

You facilitate the assembly and dismantling by pulling the roof with ropes on tent frame. Use the steel clips to fasten the cover to the frame. Each section we offer bracket and nail to fasten the frame to ground.

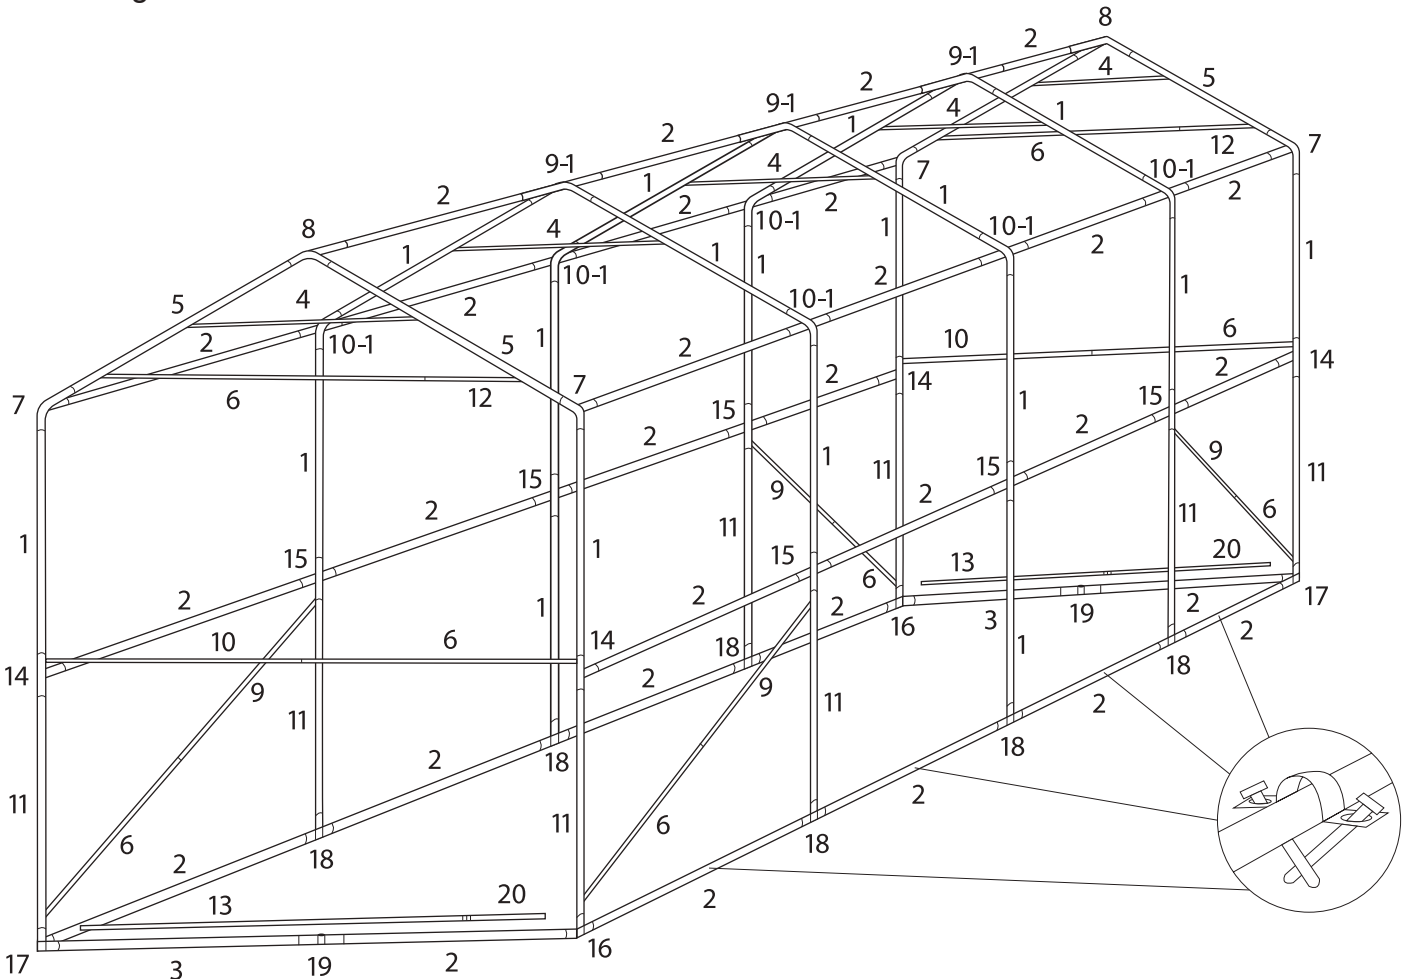

VI
Spread the wall panel and door panel attach to framework by using the bangee cords clasping the frame to grommets that is construct over the wall panel and door panel to ensure stability. Also use the short pegs to fix the doors to the ground.

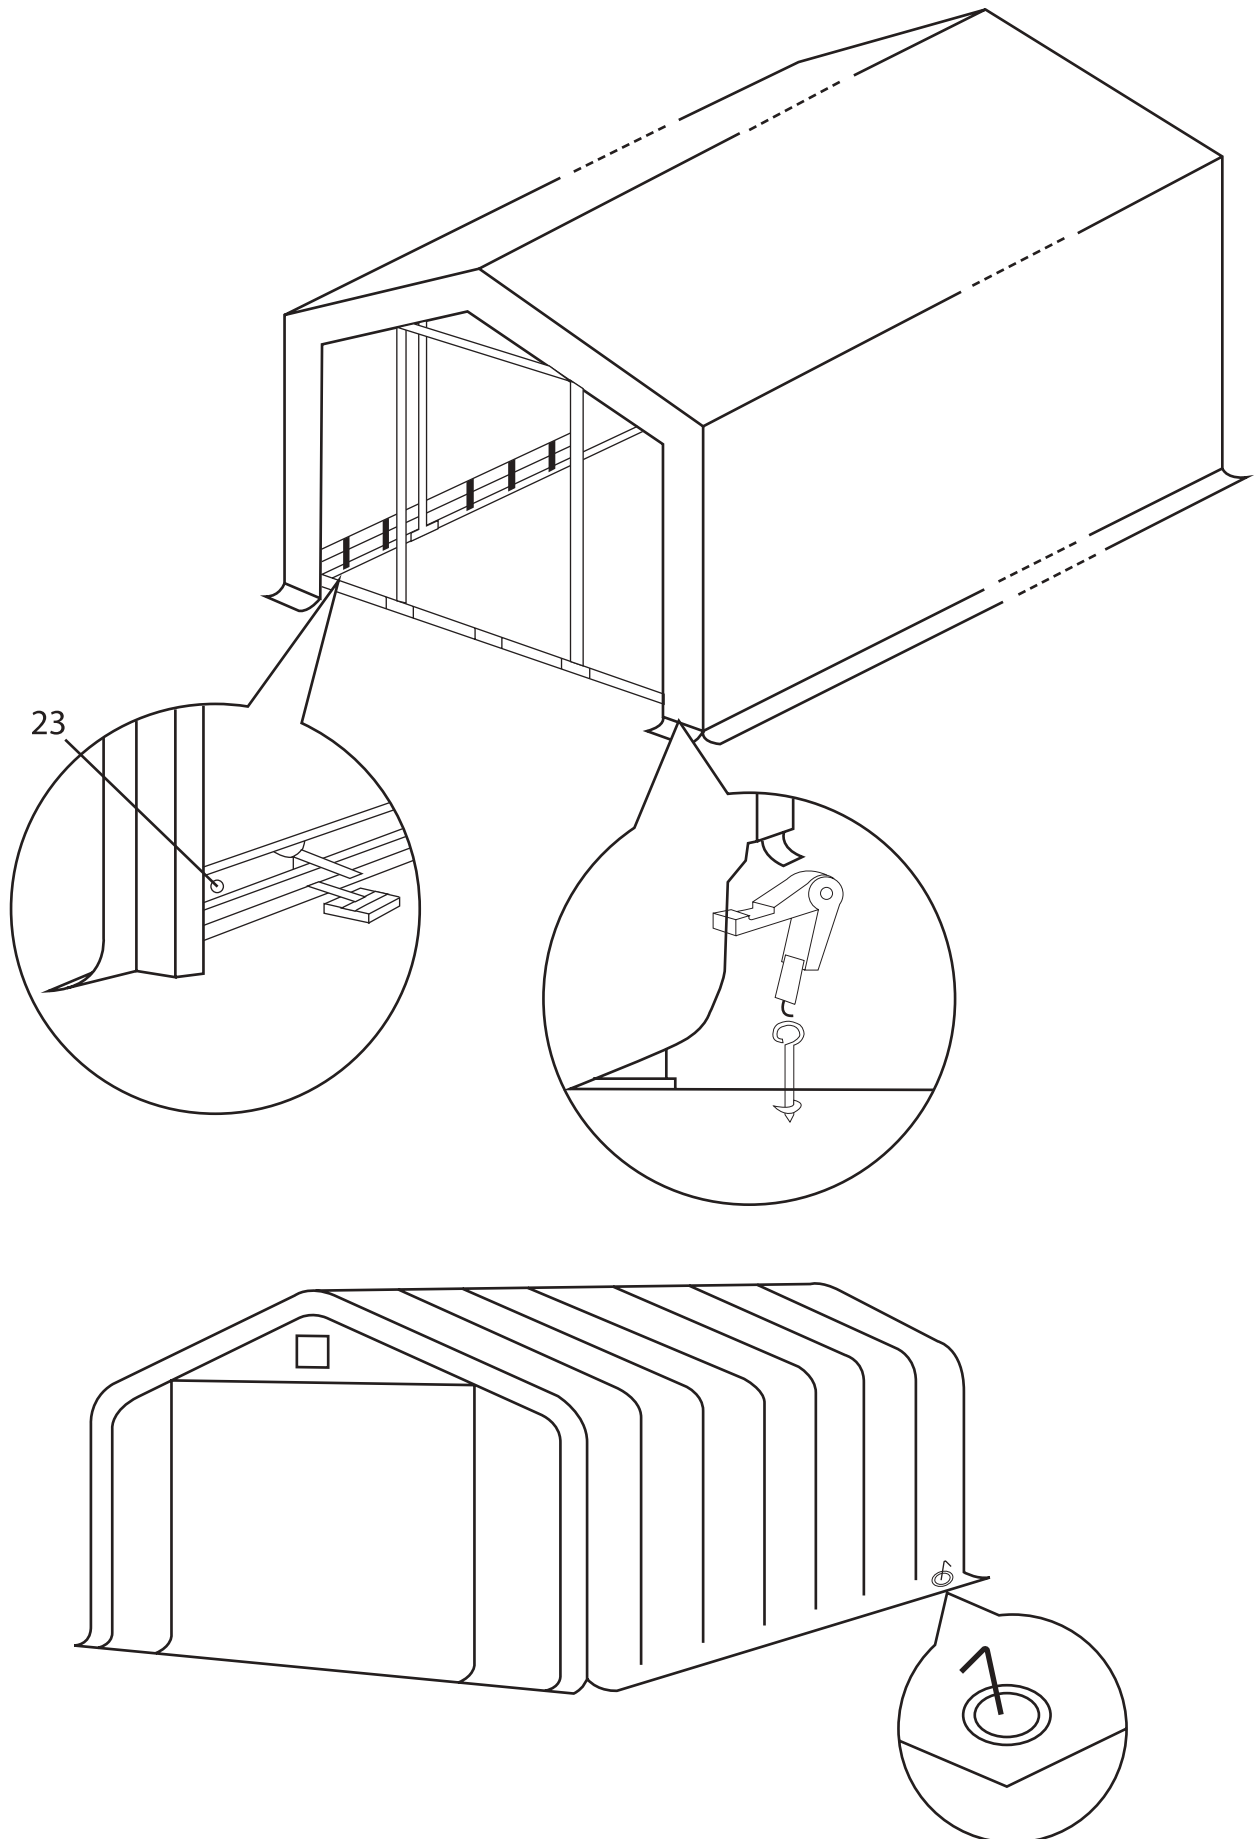

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

