


DANCOVER[®]




Manual
for
Greenhouse Strong NOVA
6m Series




Greenhouse Strong NOVA






Basic Kit 6x4m (+ 2m Extension Kit)




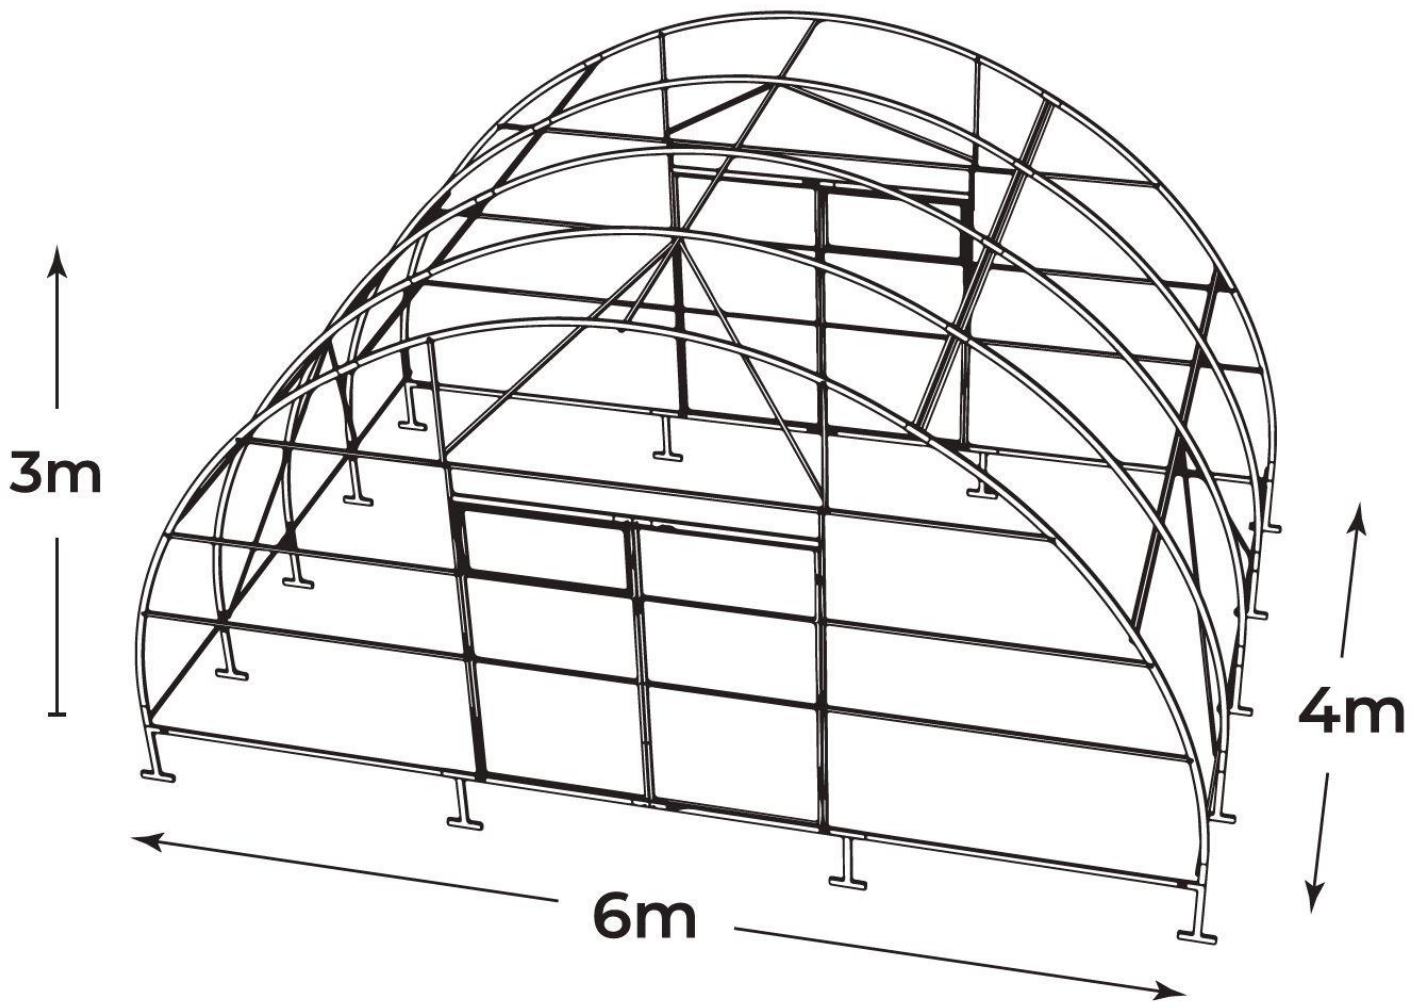


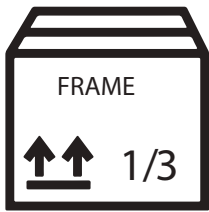




BASIC KIT 6x4m

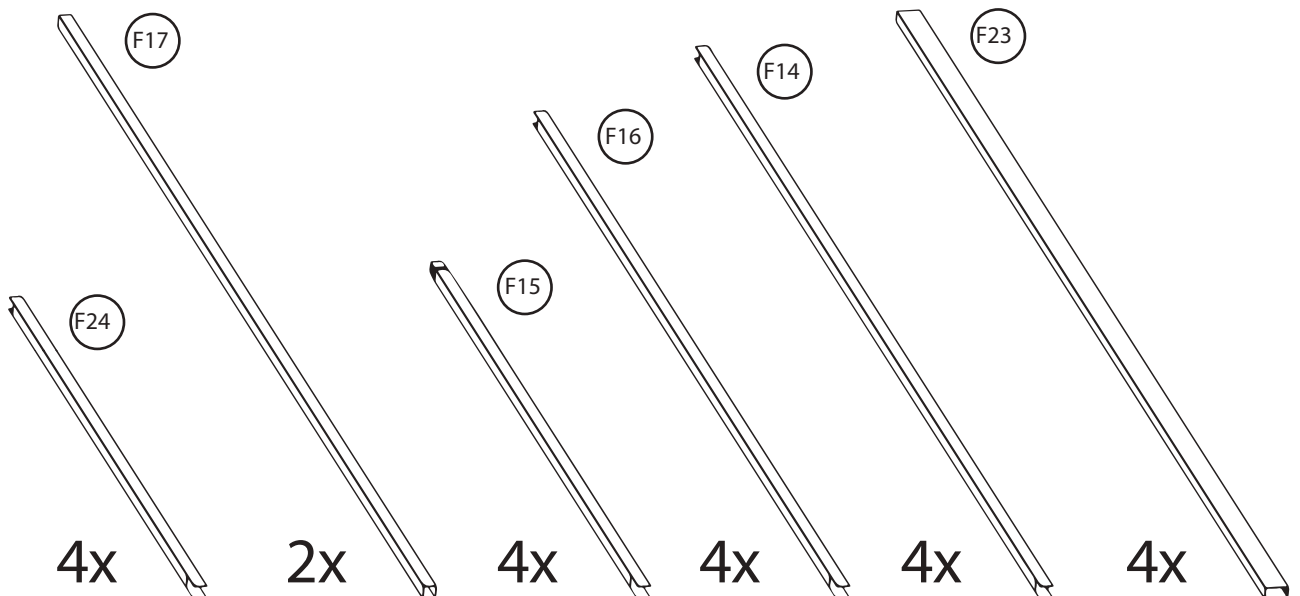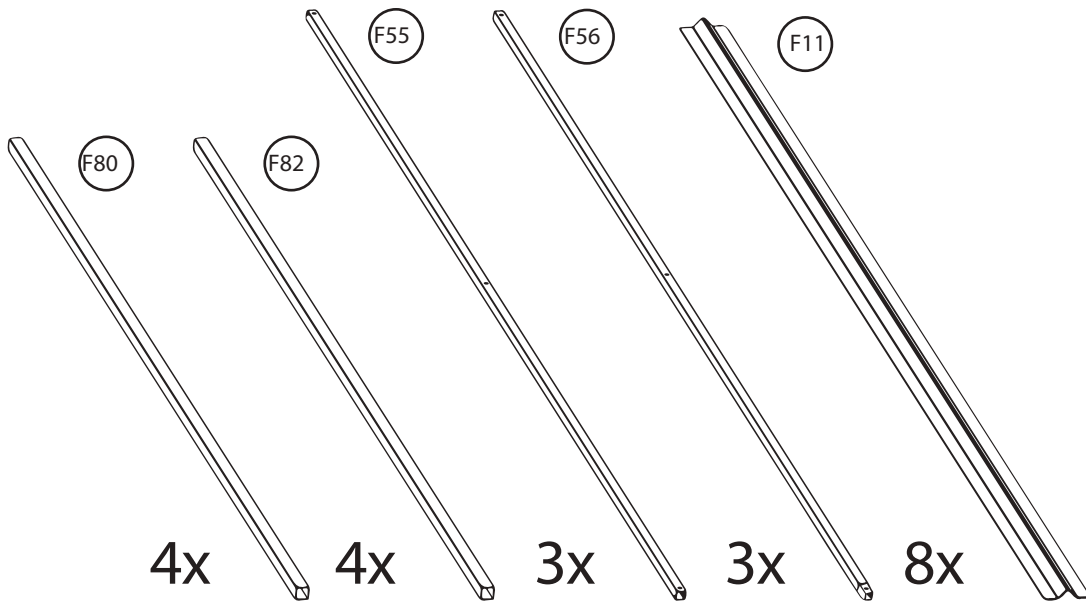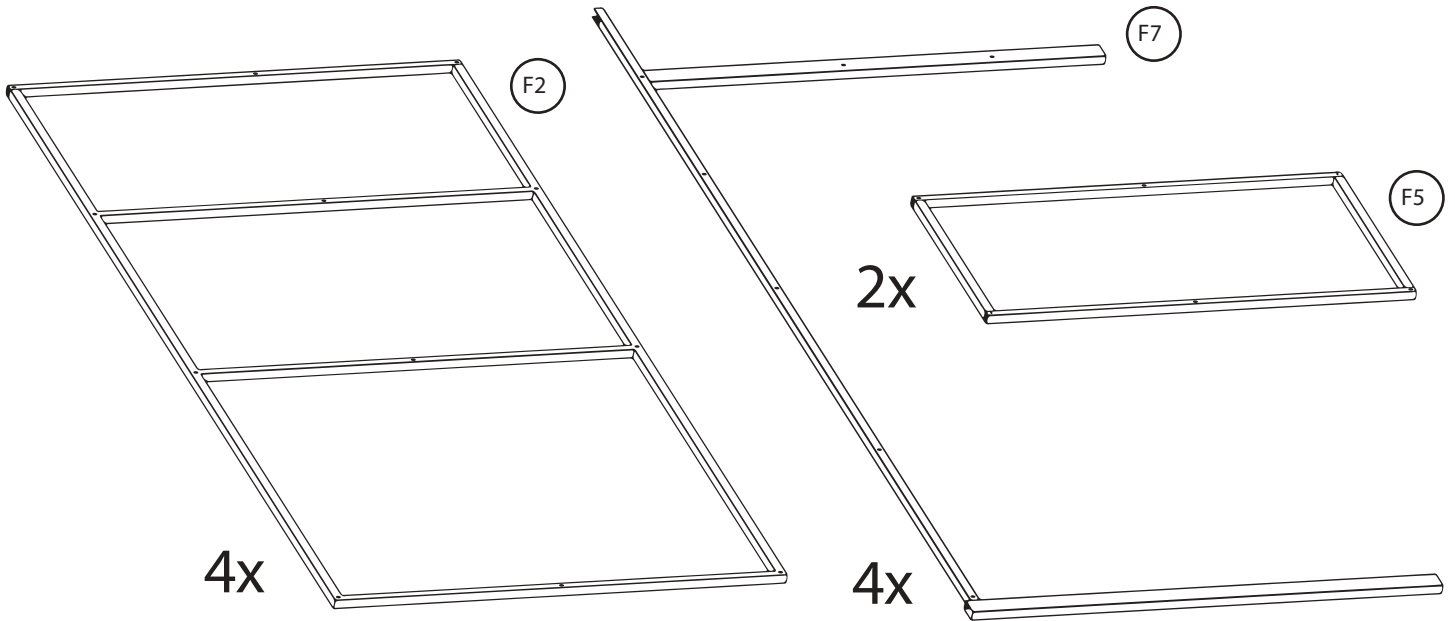

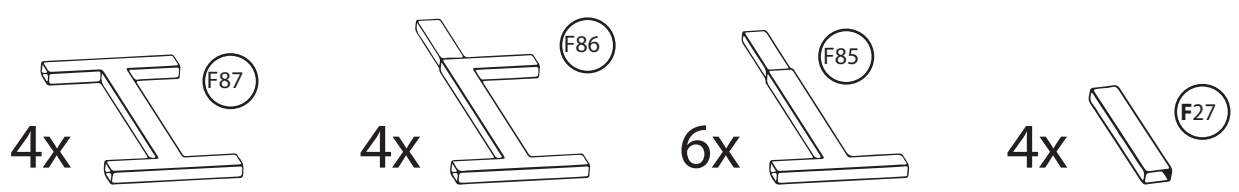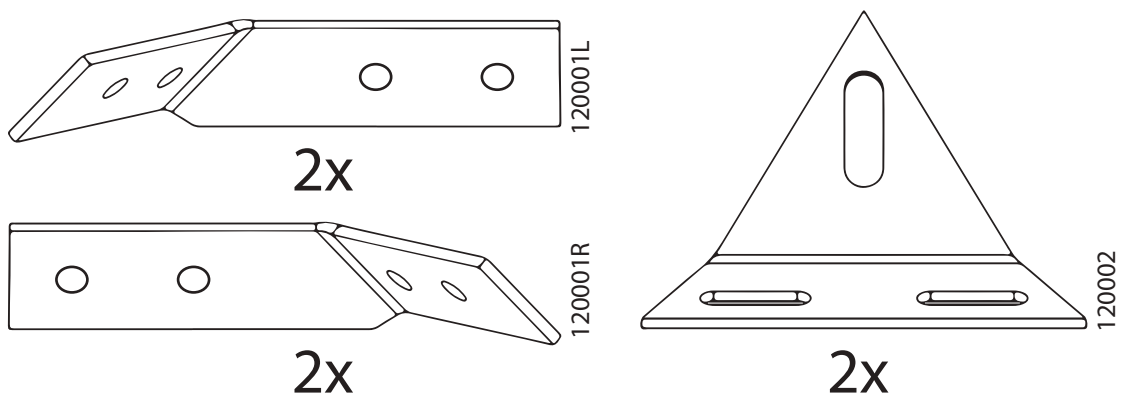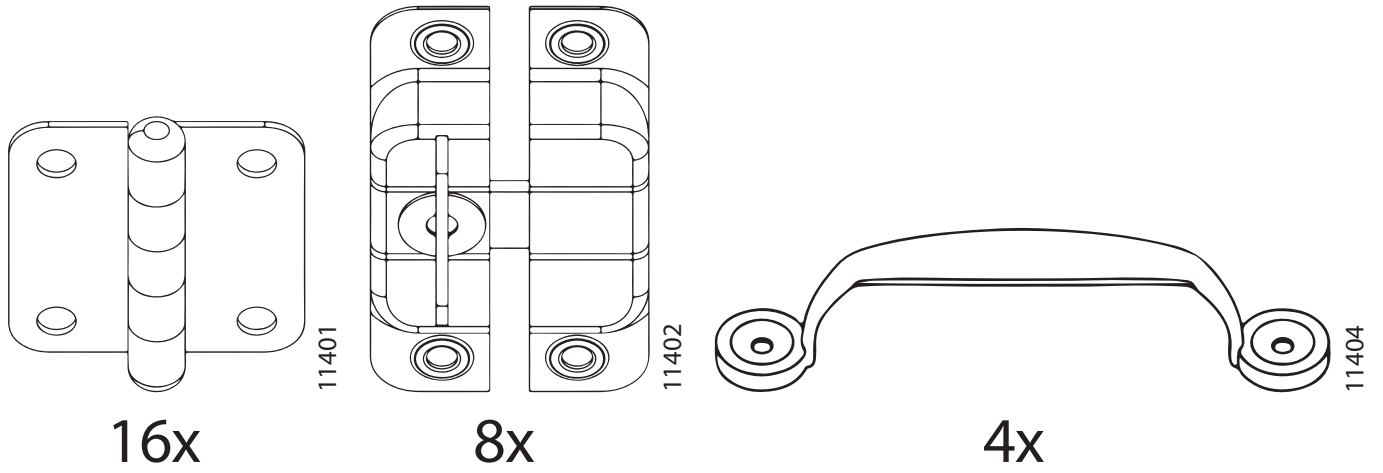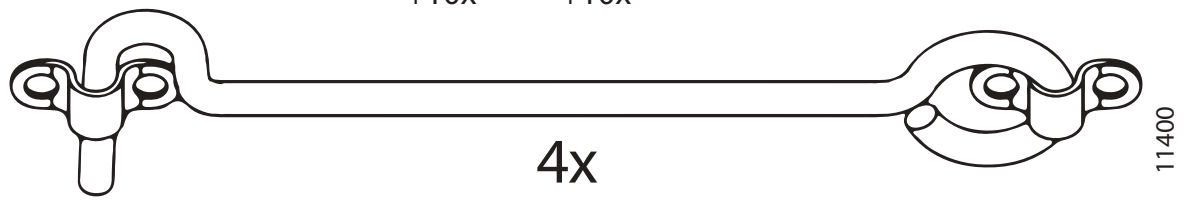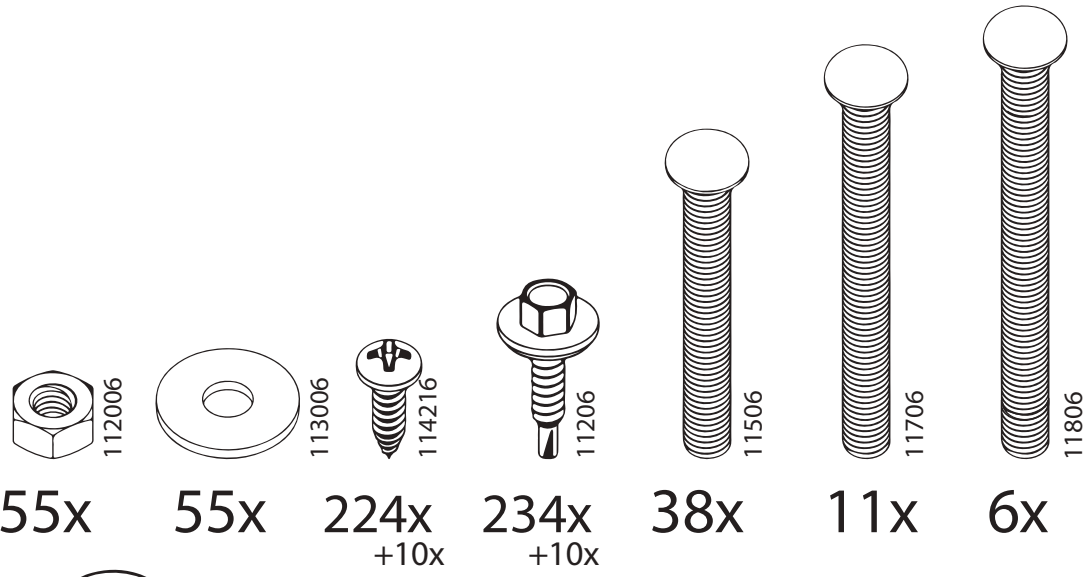

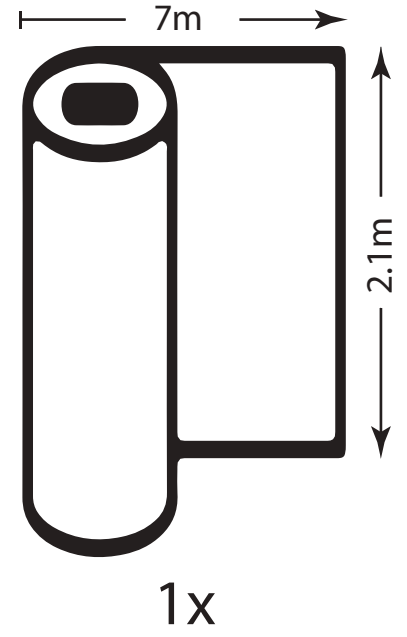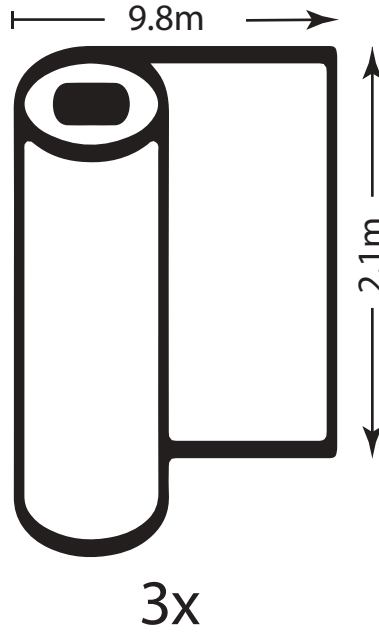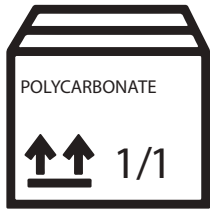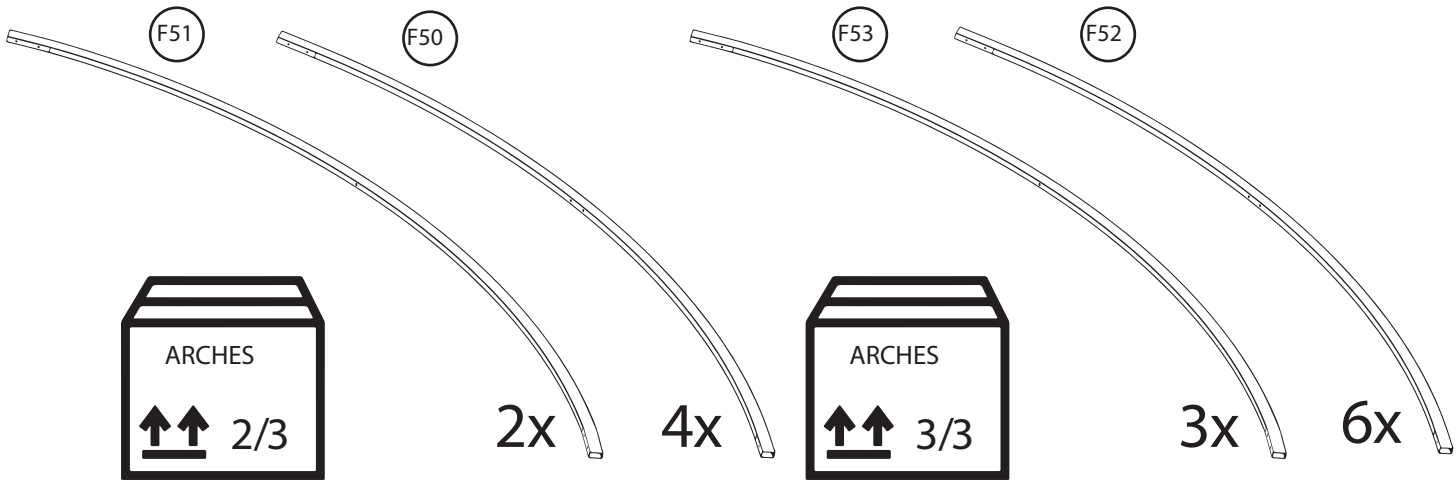


1

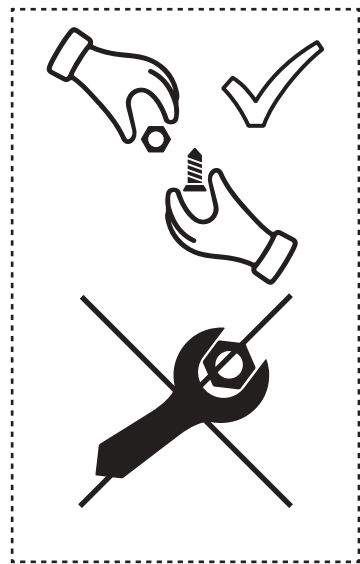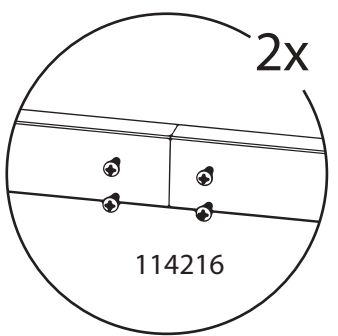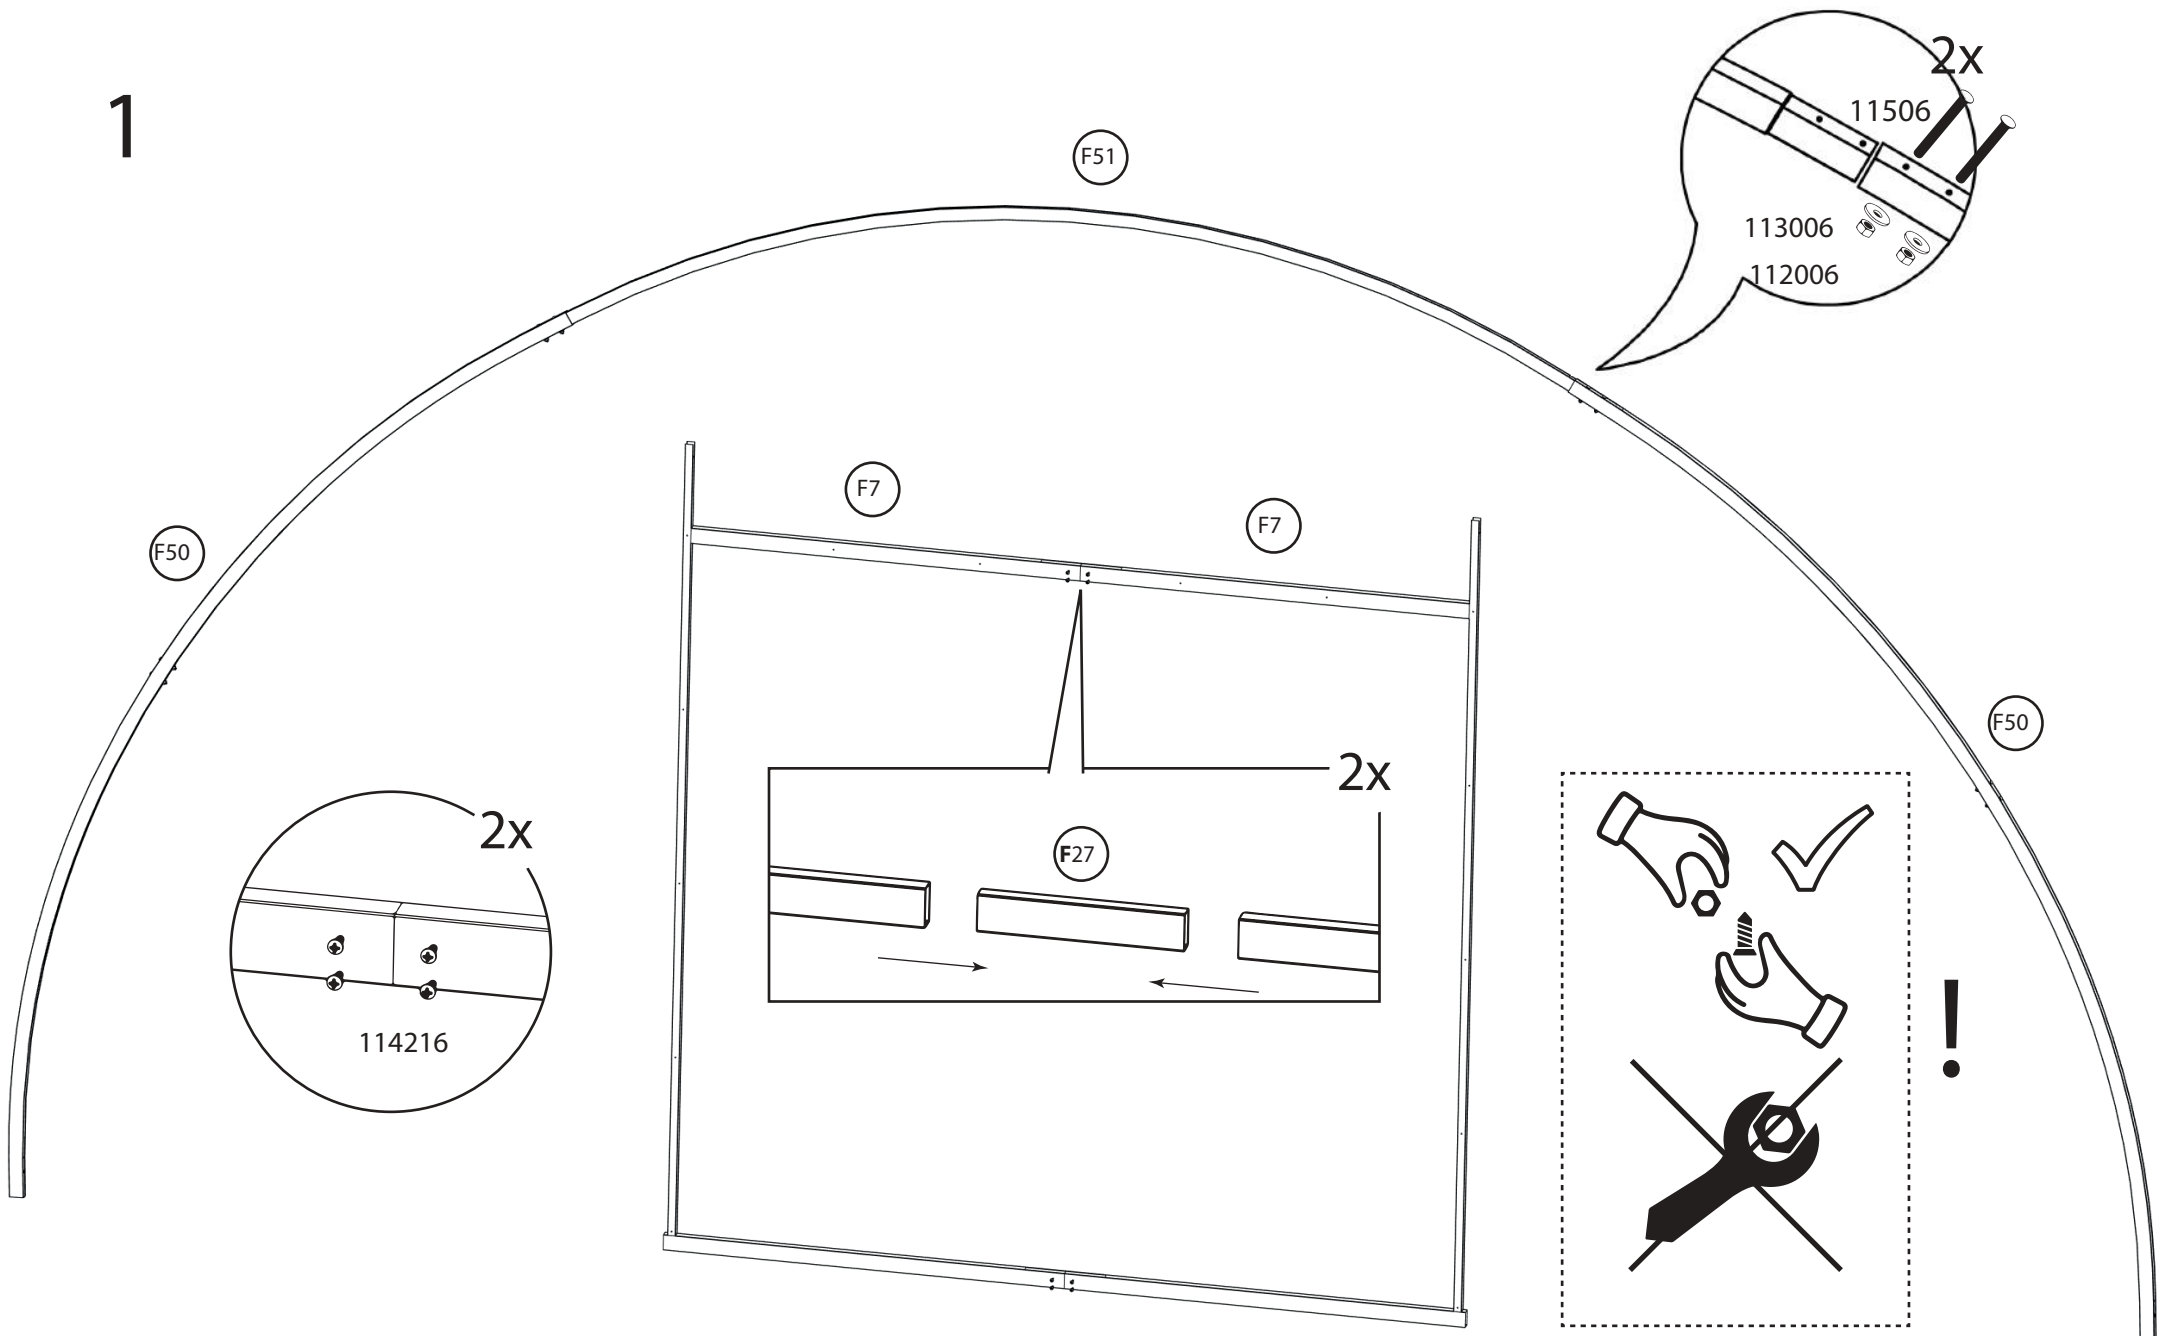


2x

2




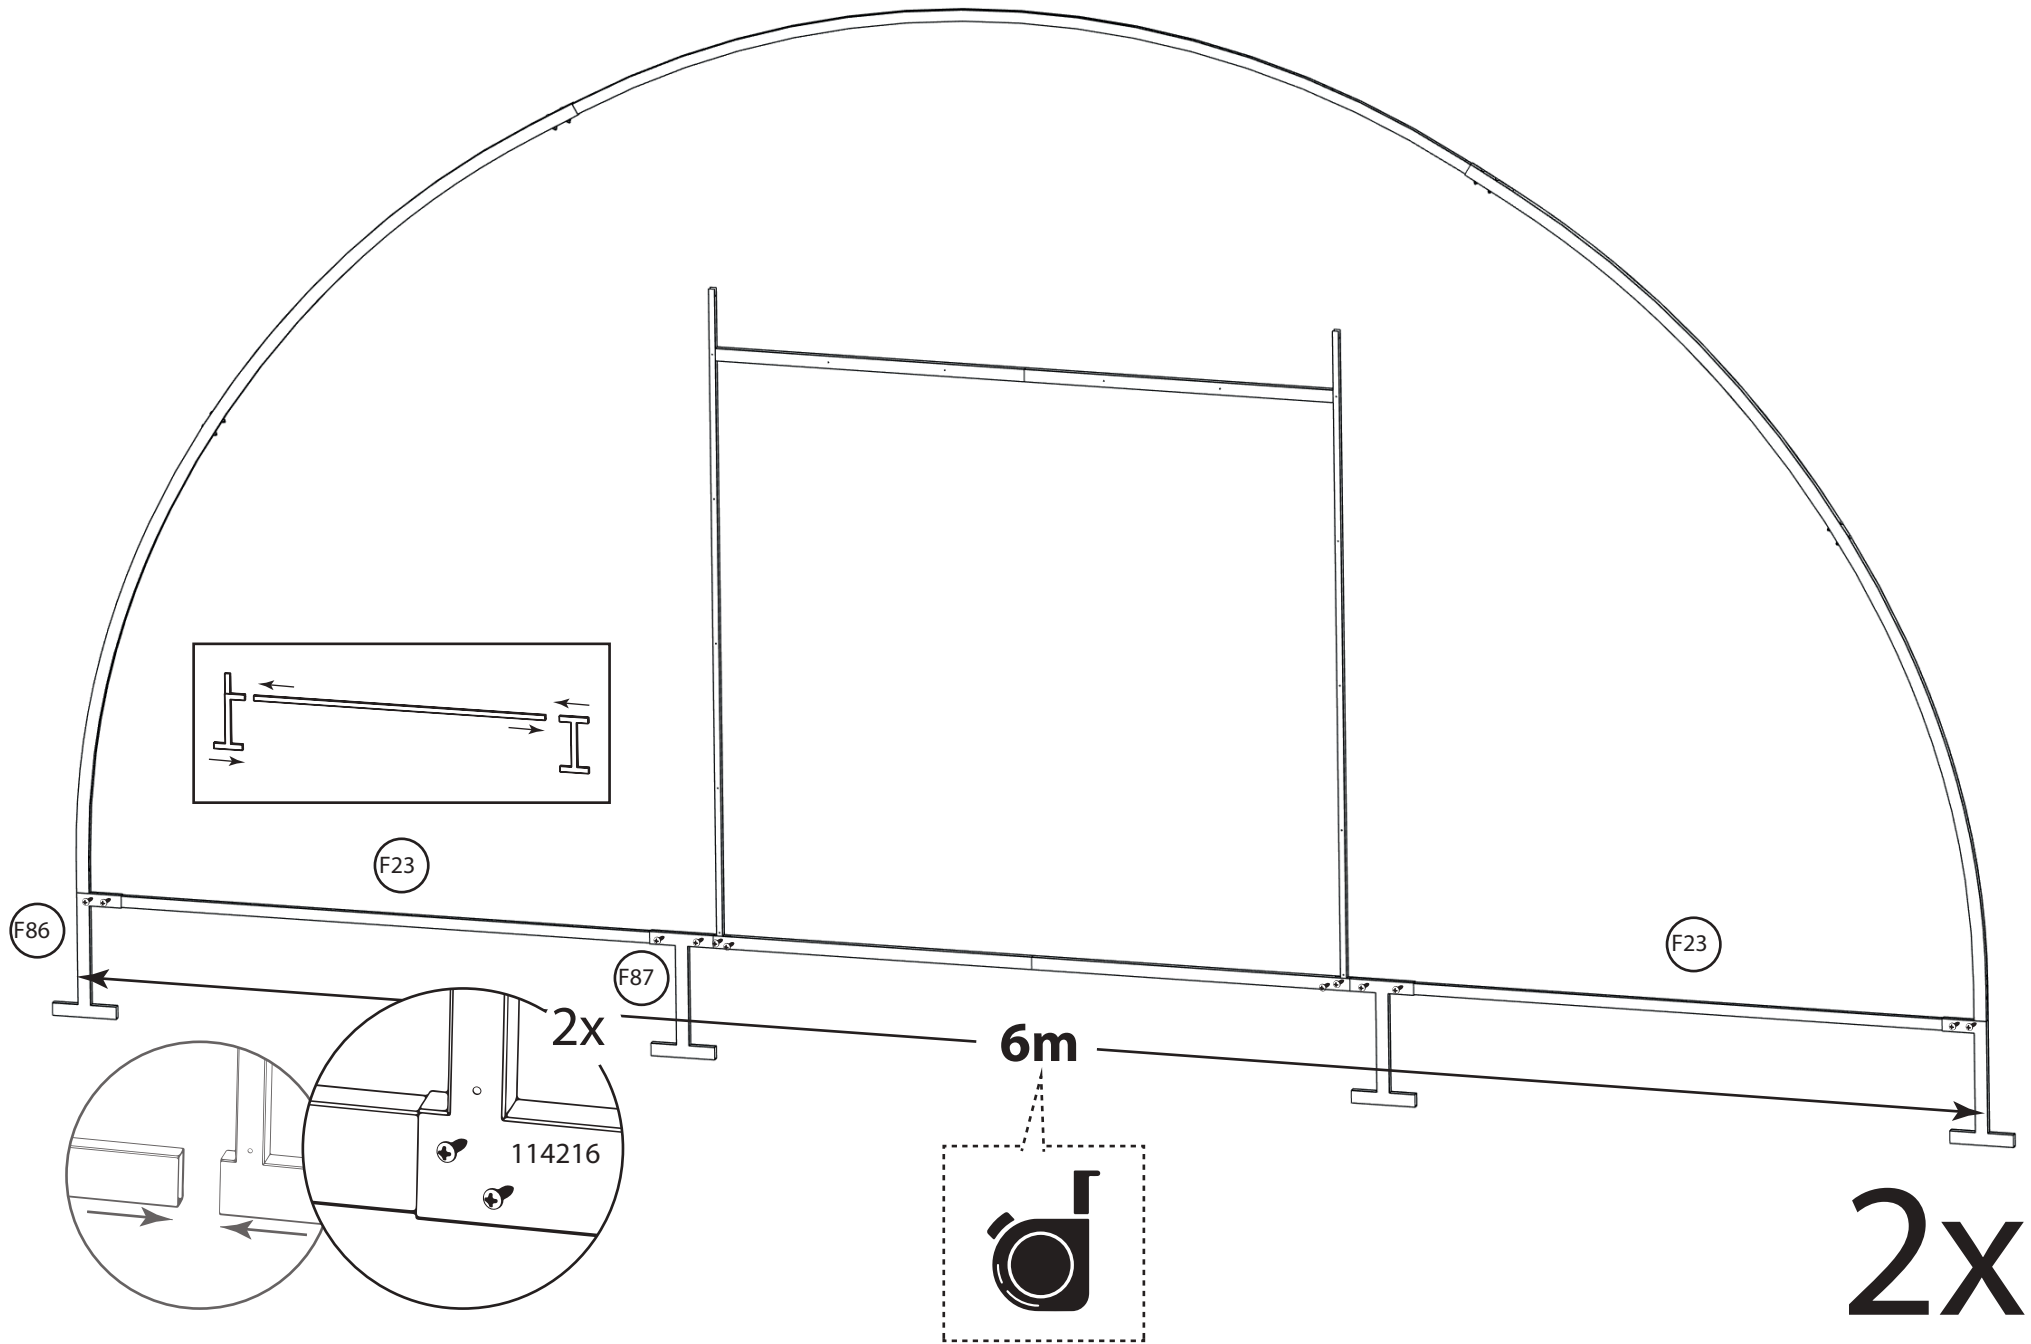


3

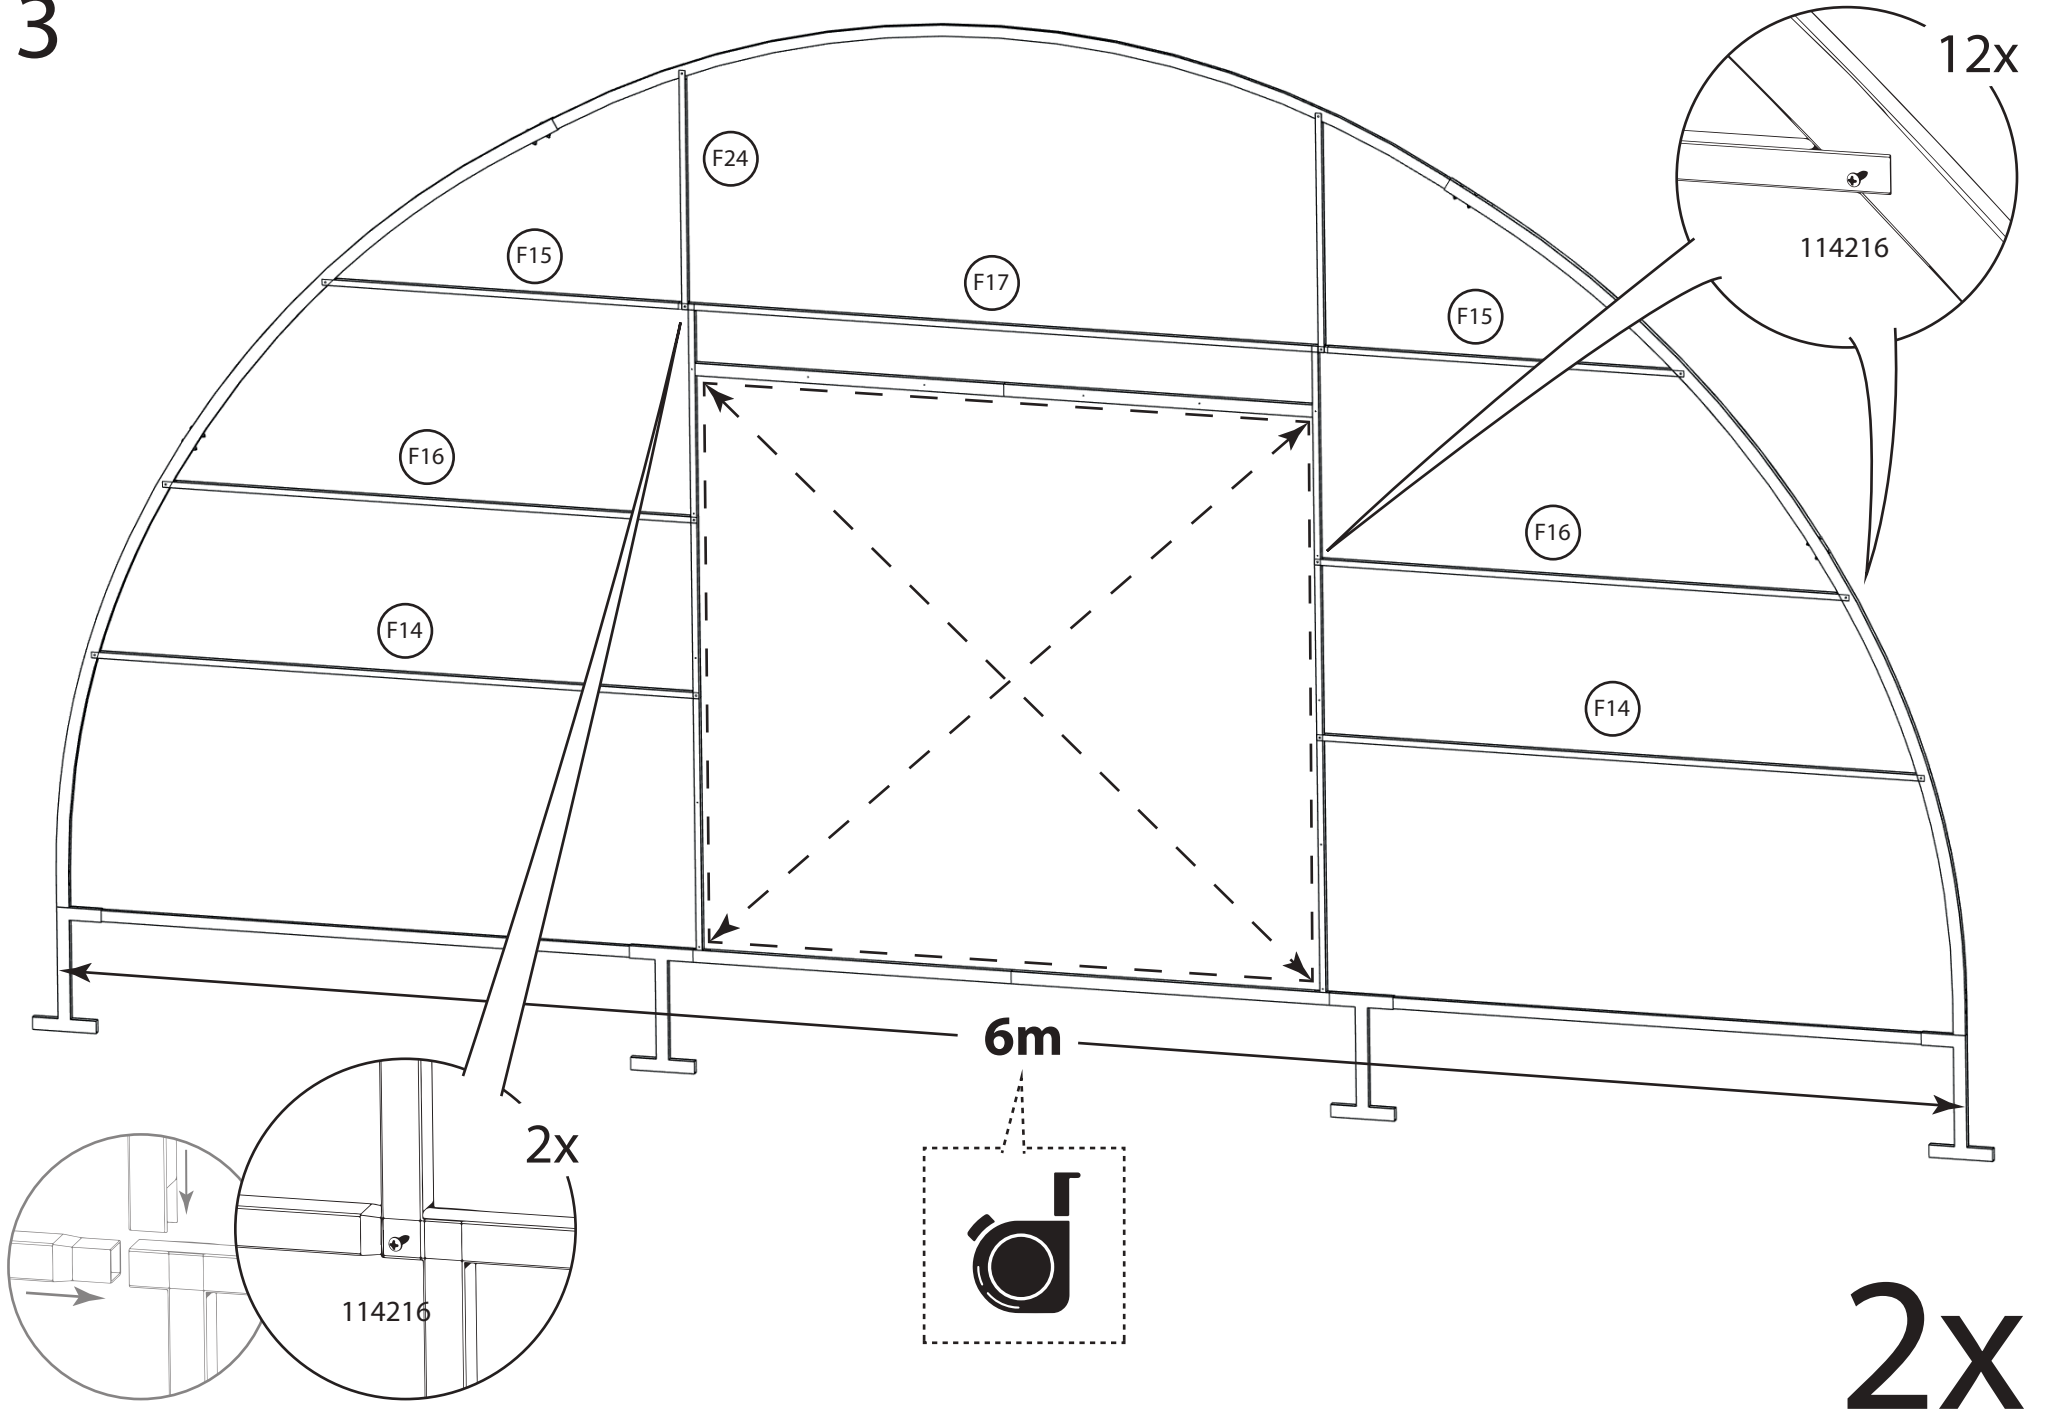


2x

4

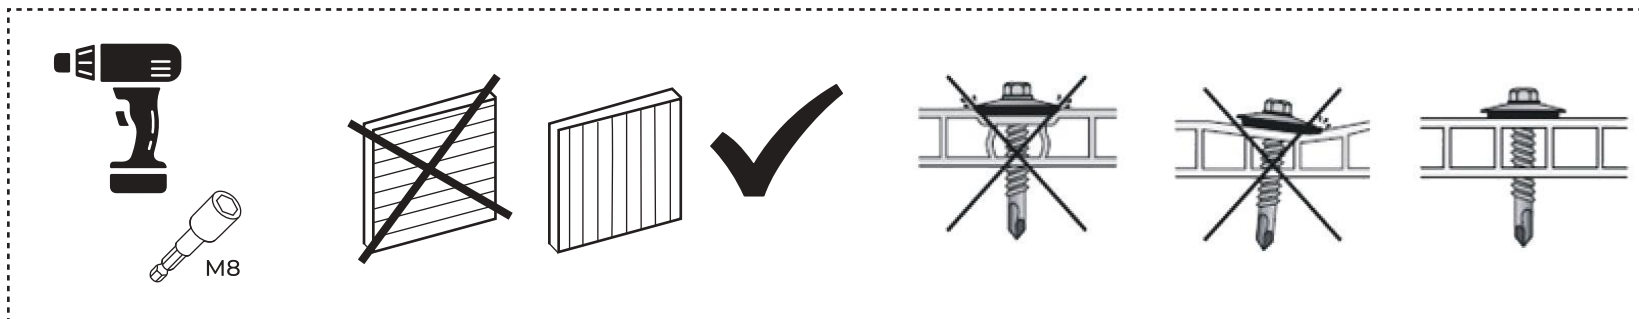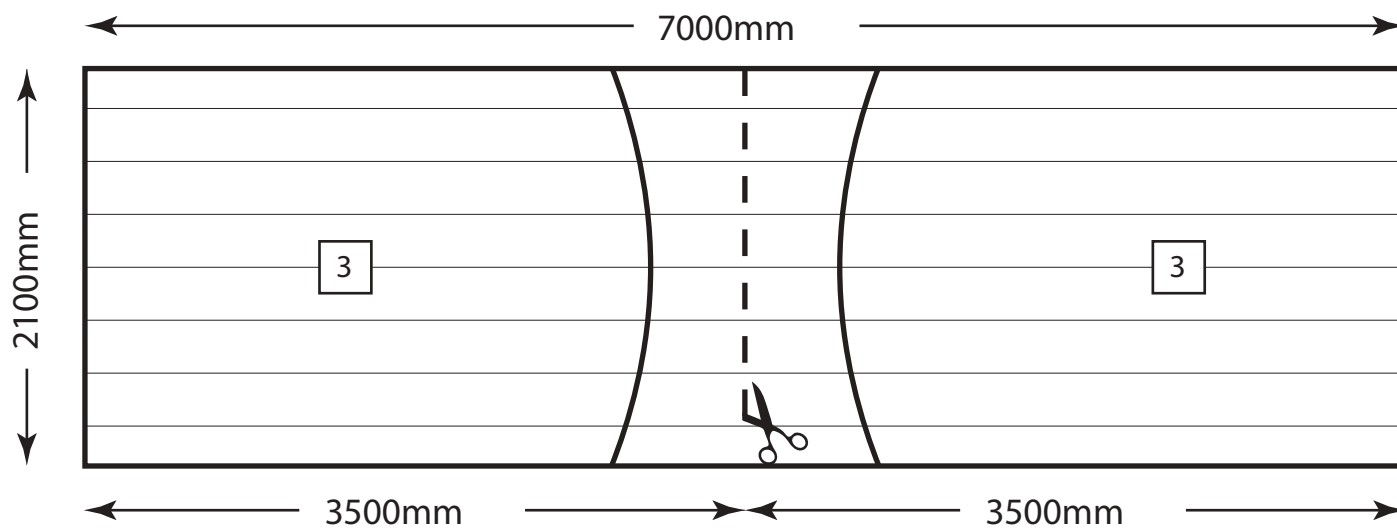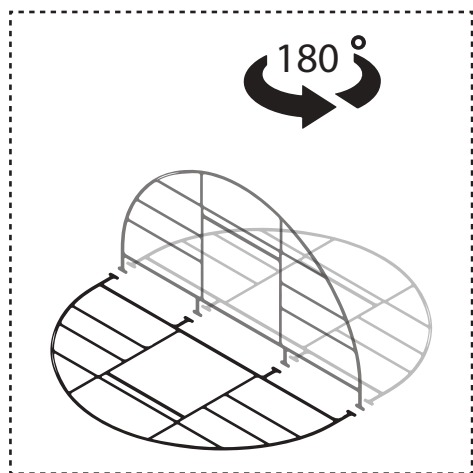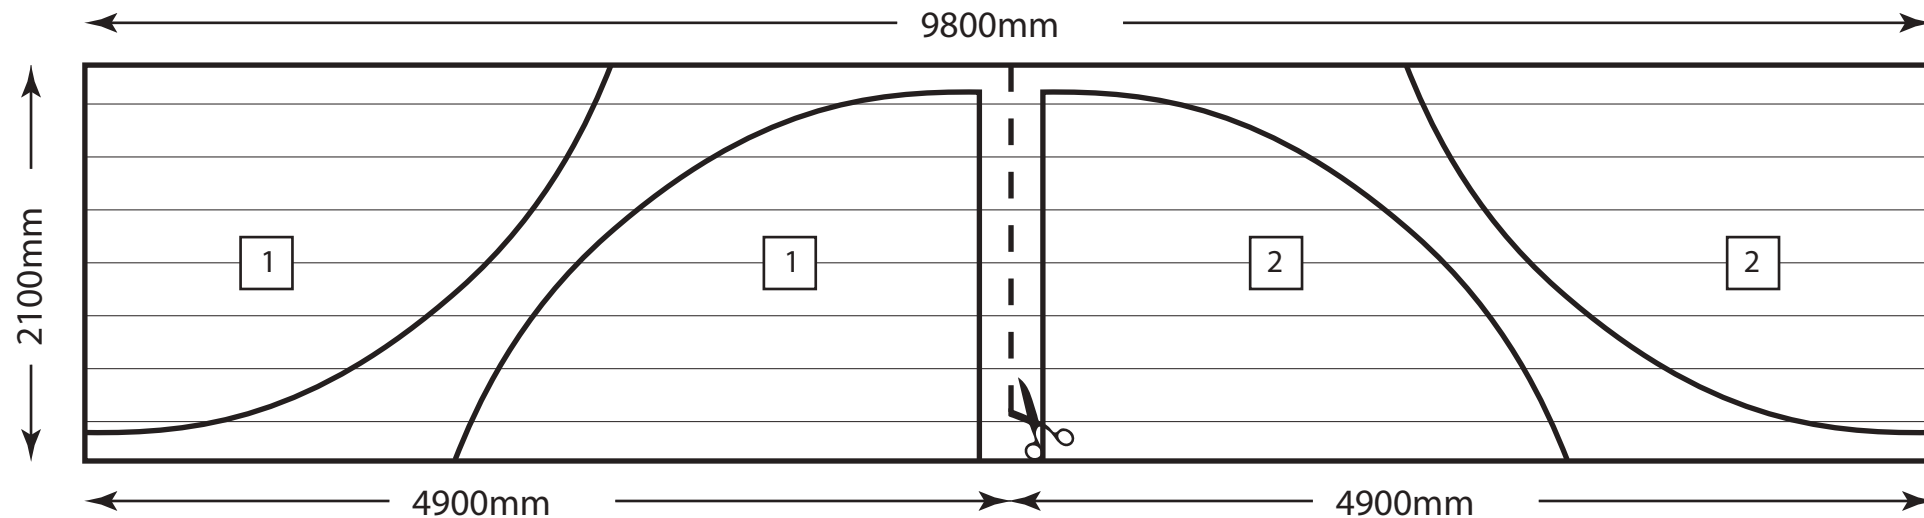


5



11206


x93

1

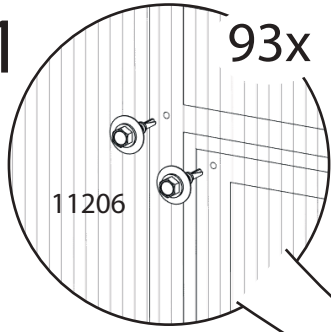


93x

11206








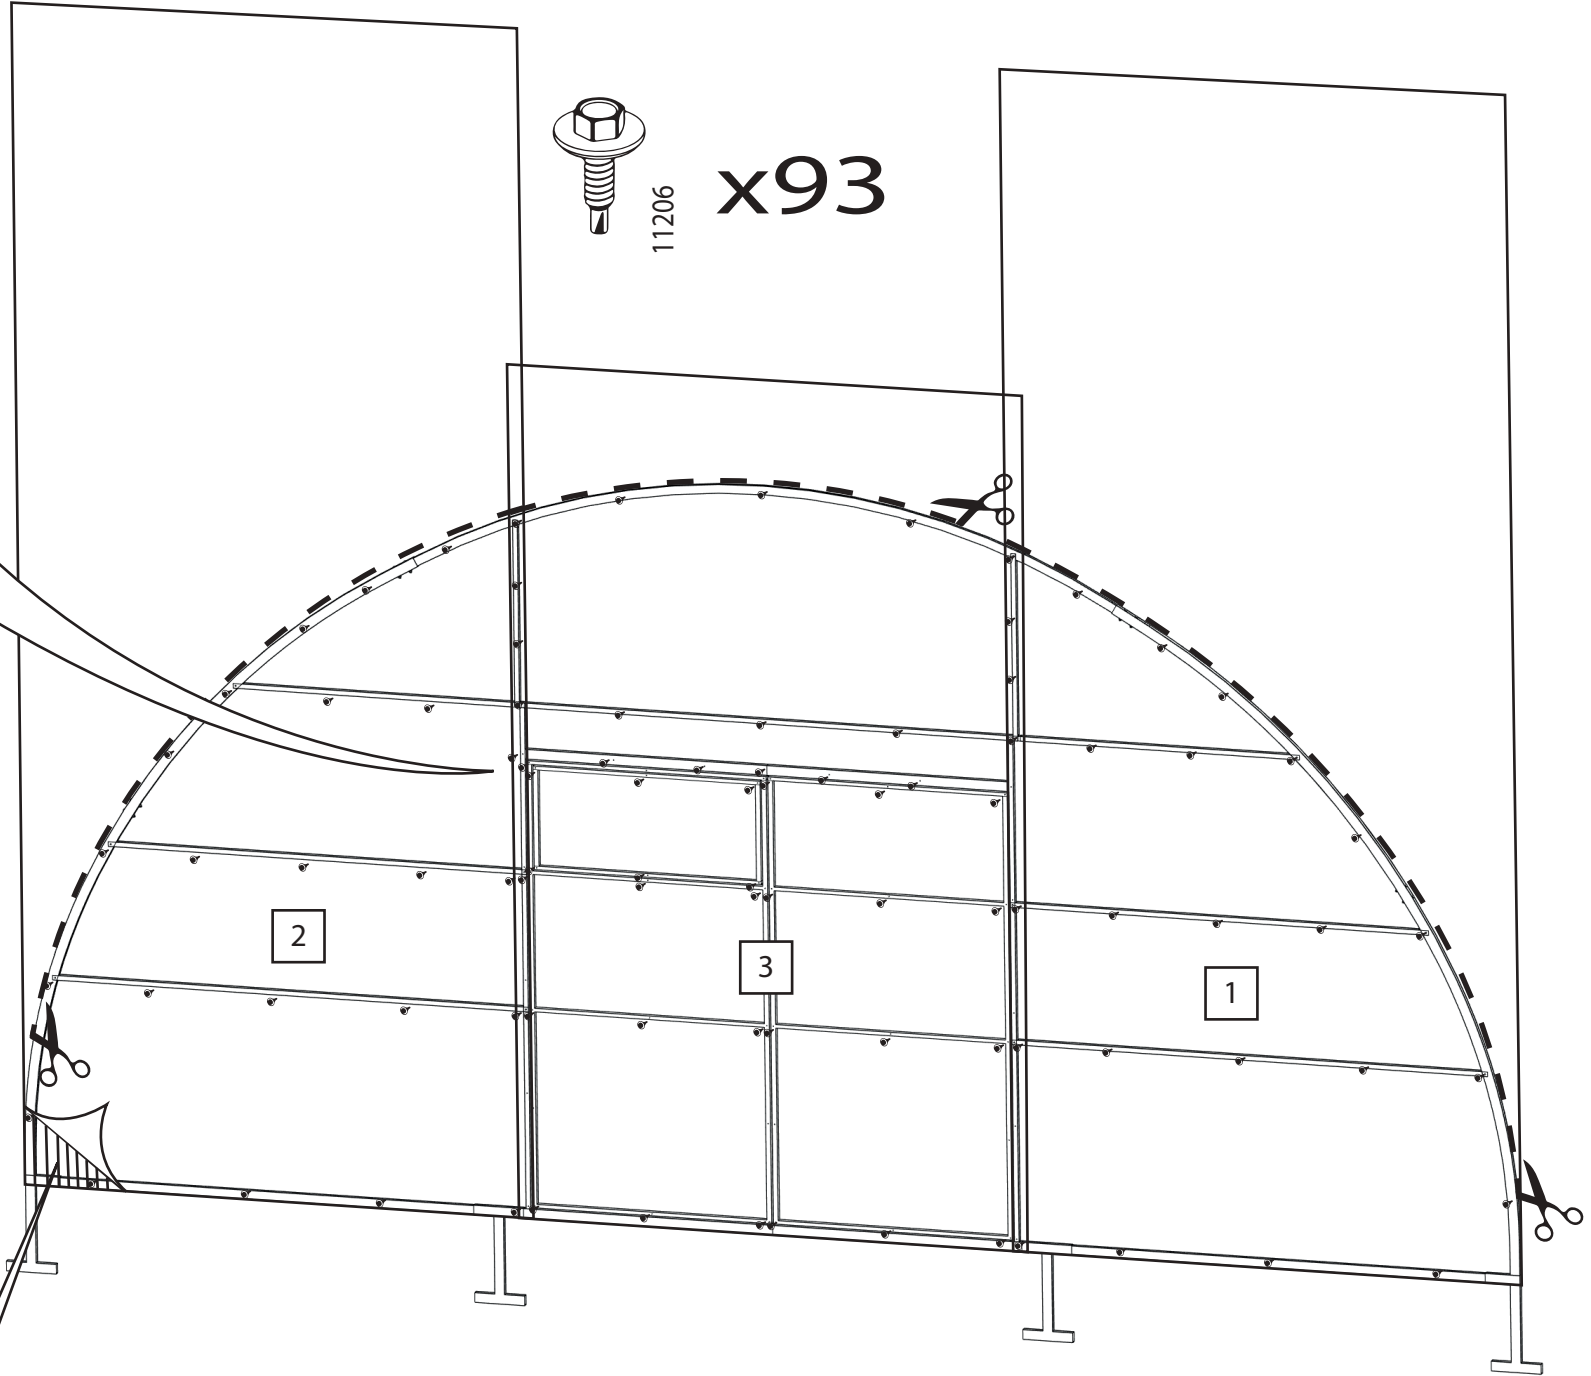


!

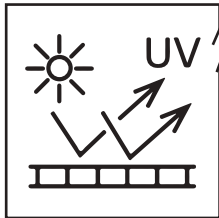


2x

6

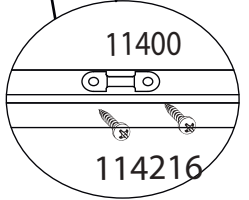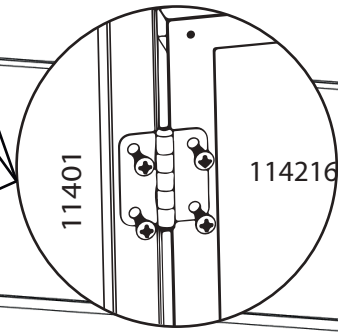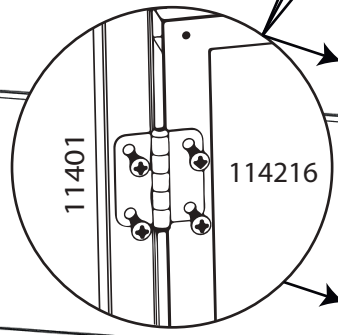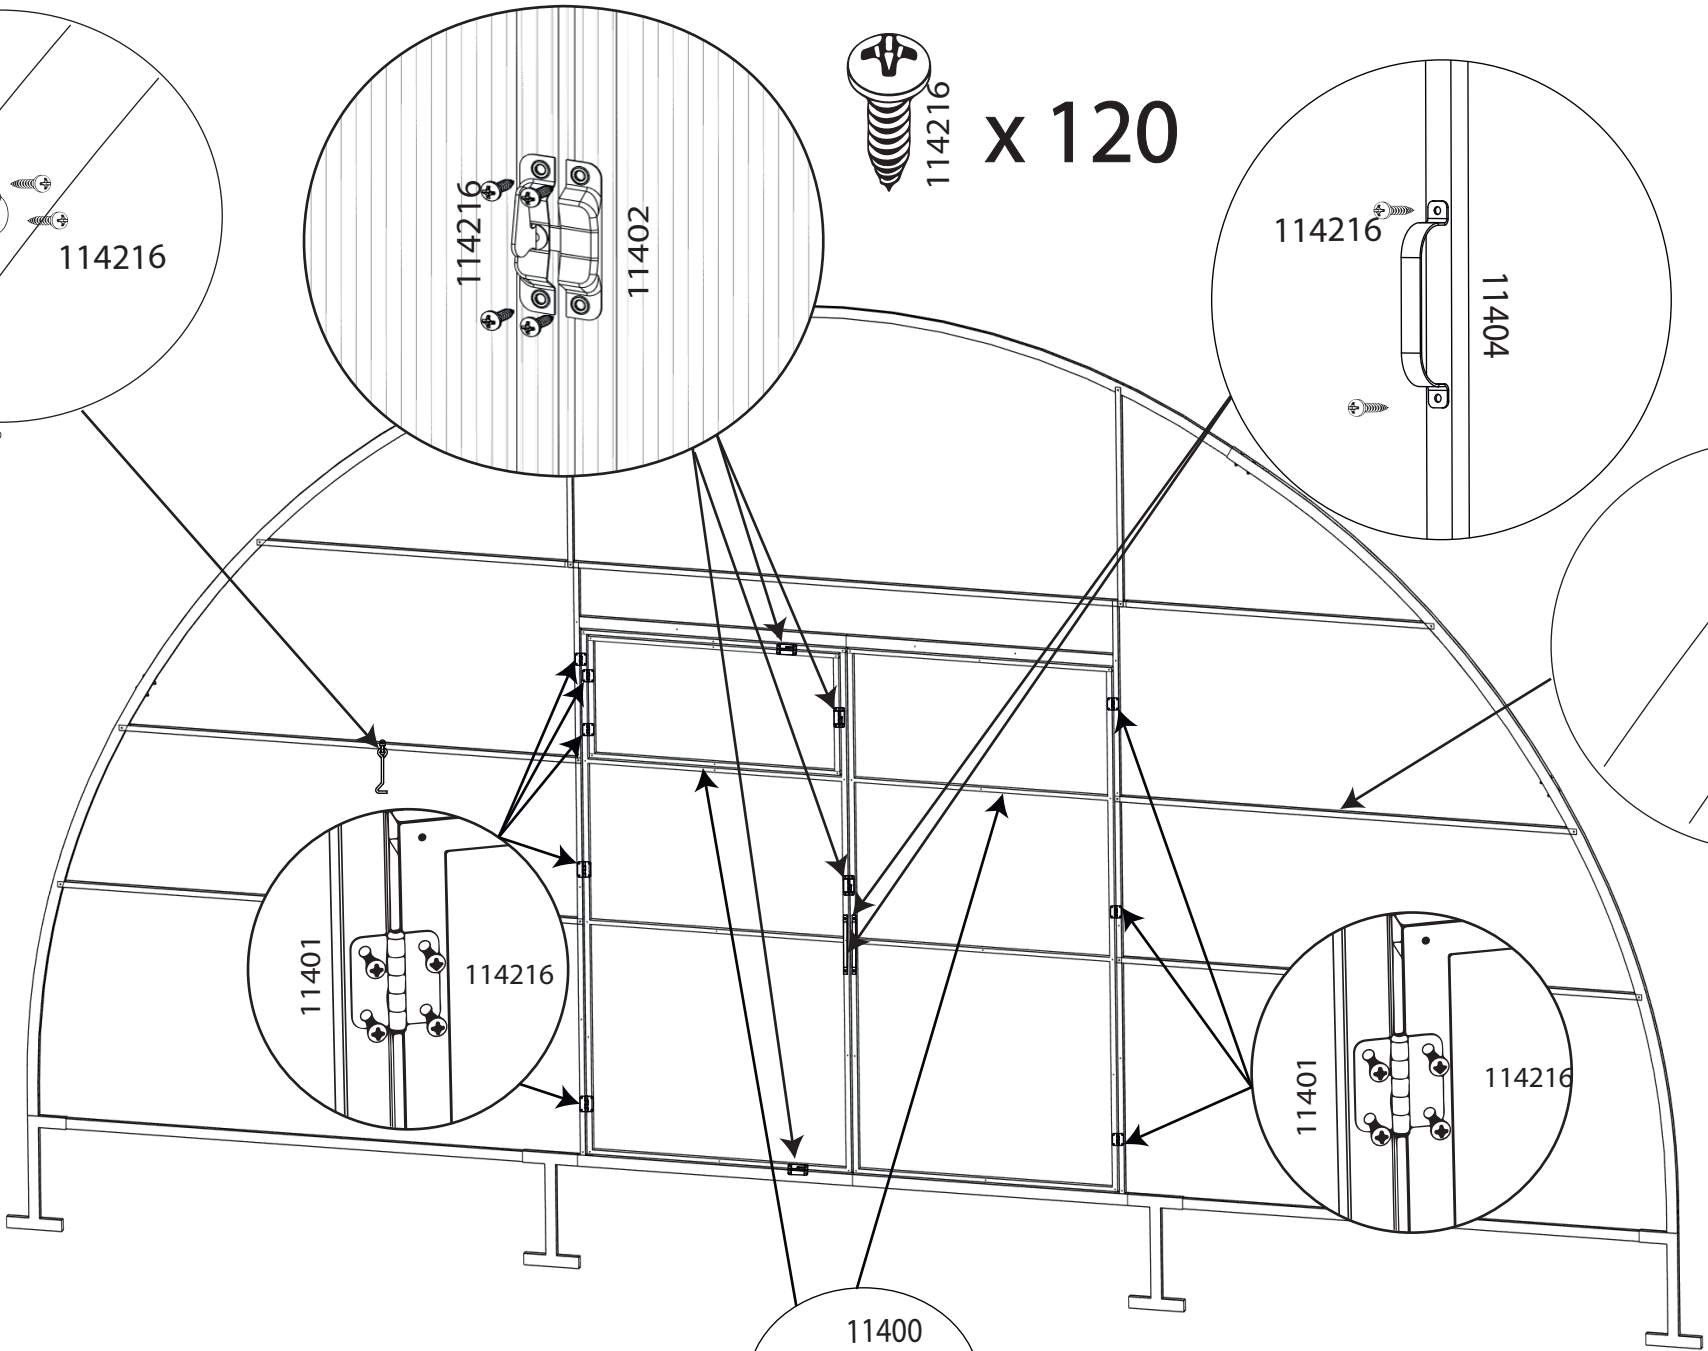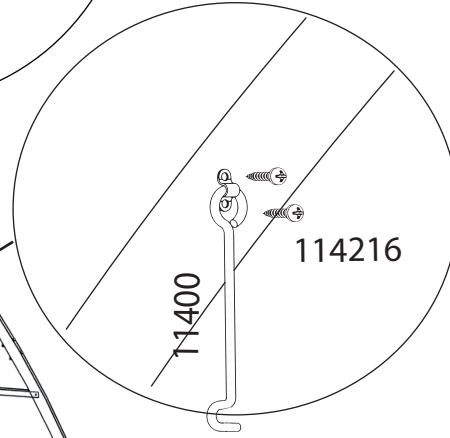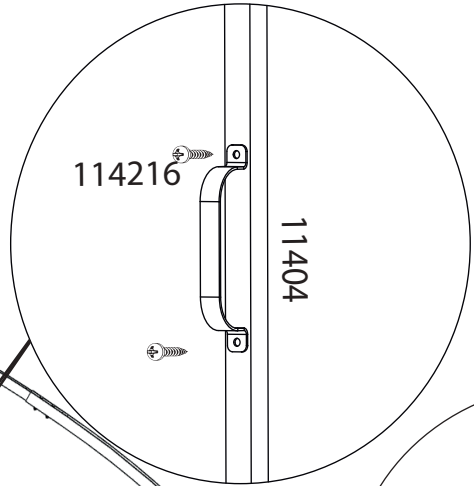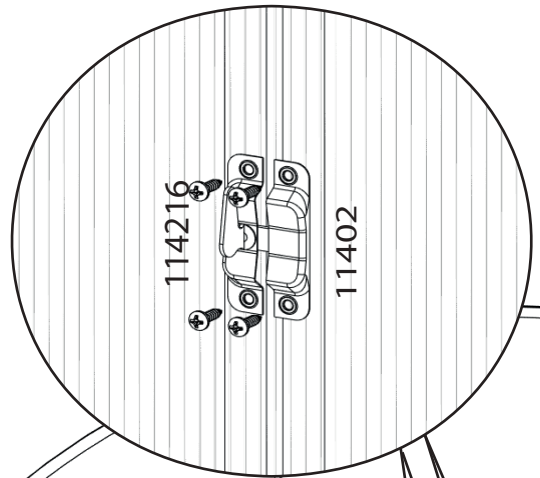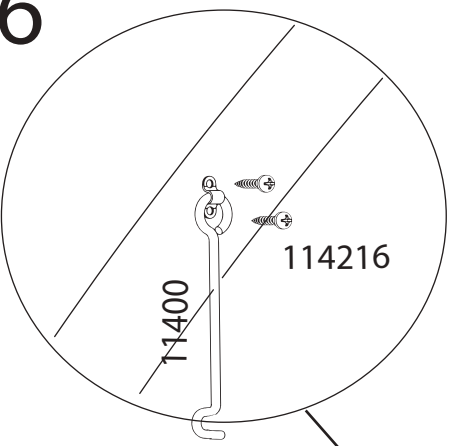


7

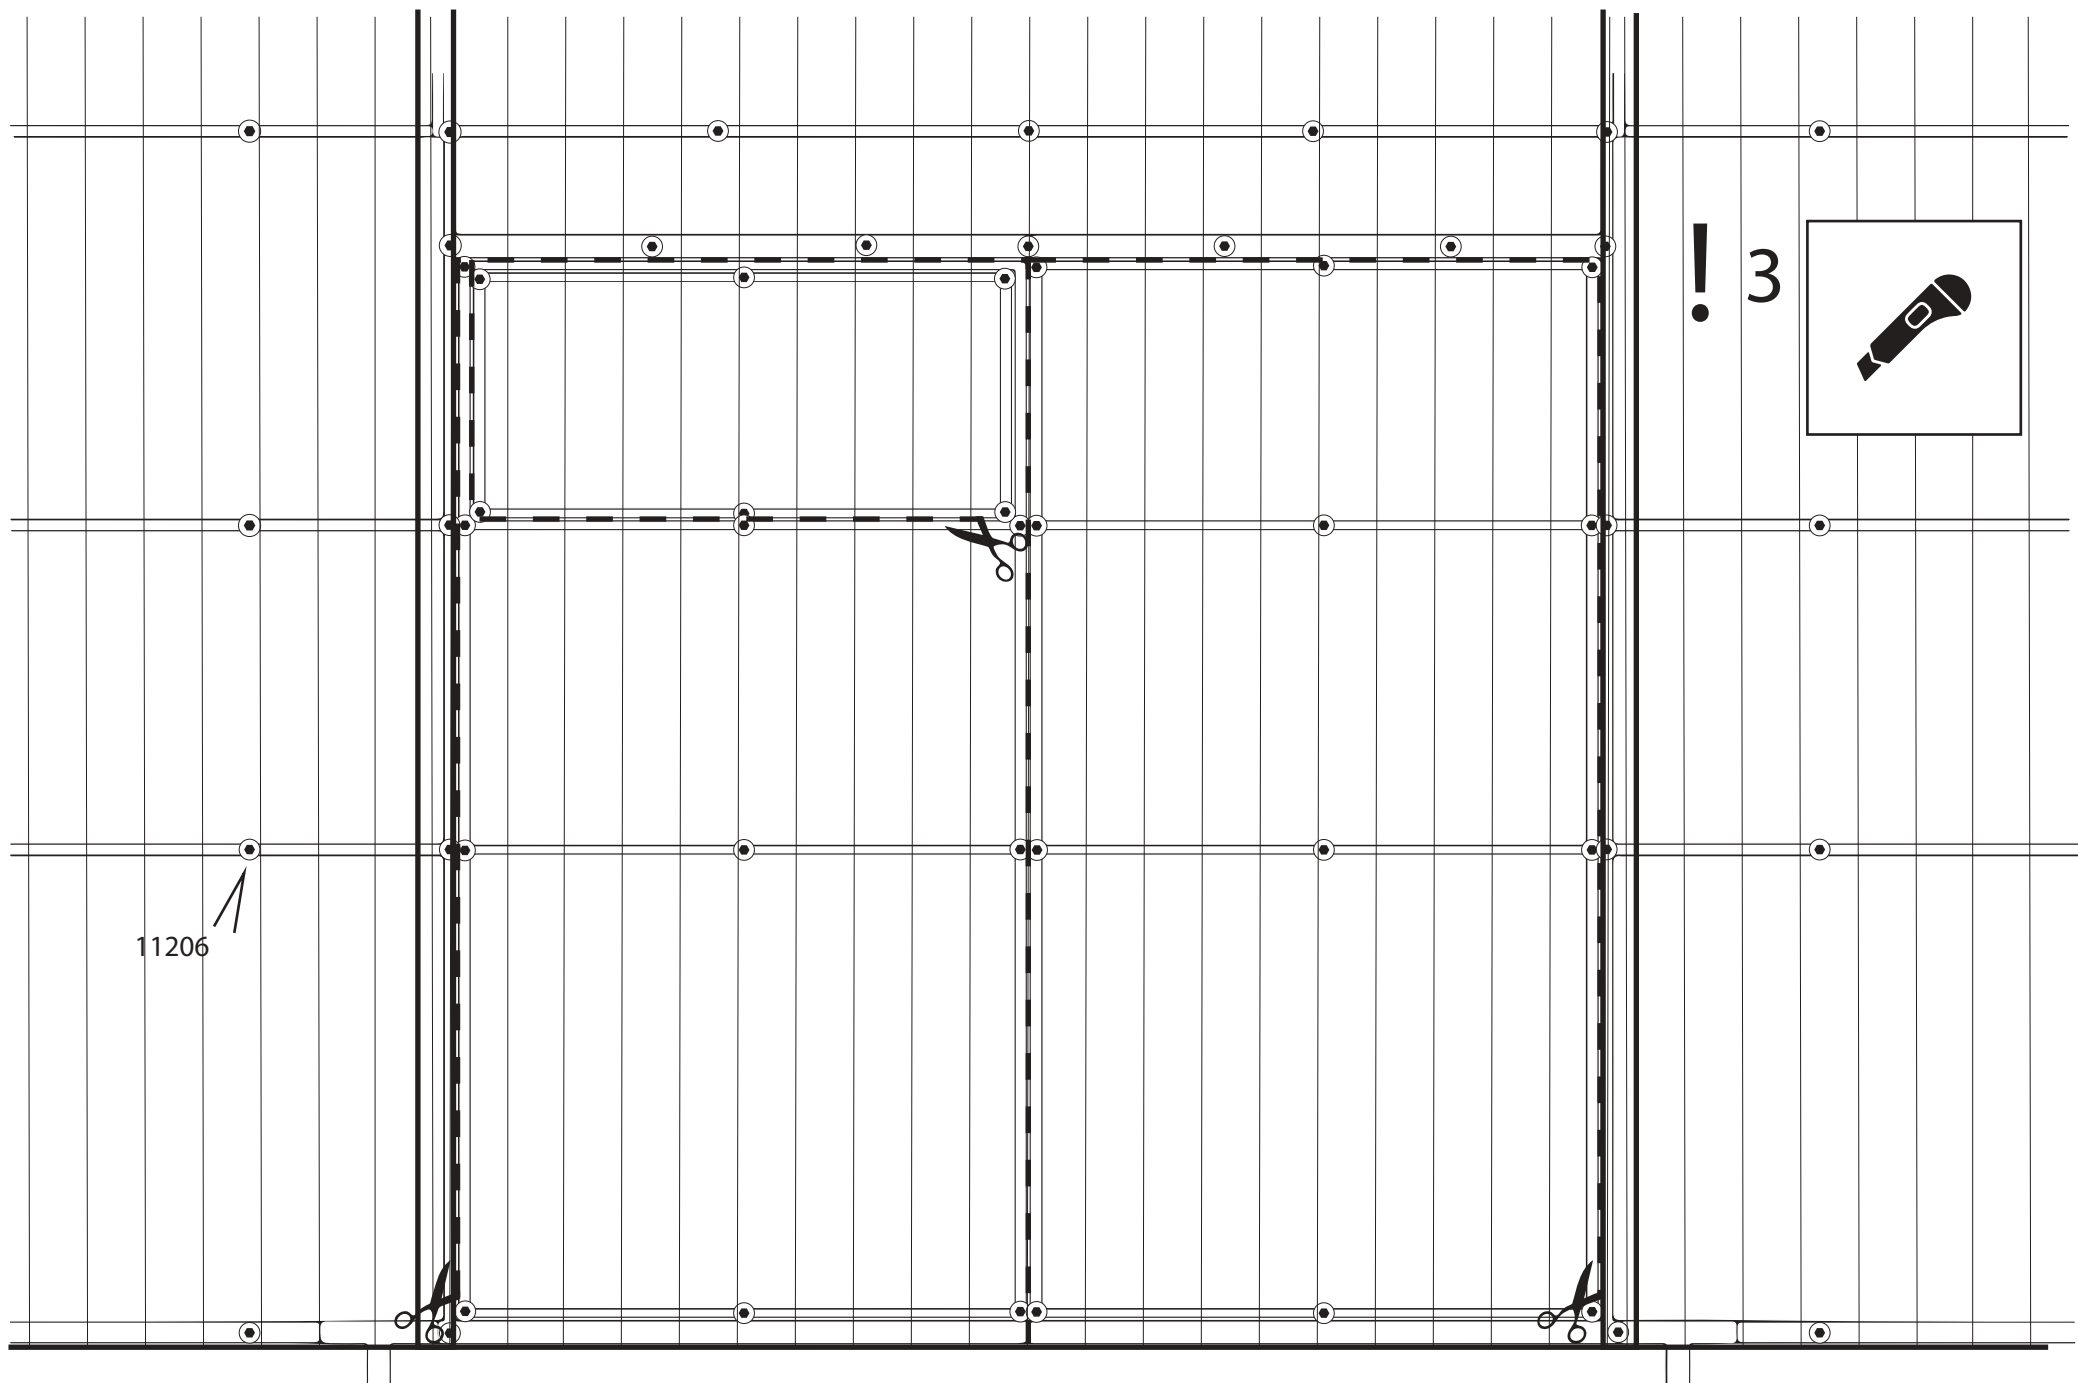


11206

! 3

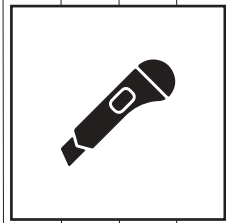

8



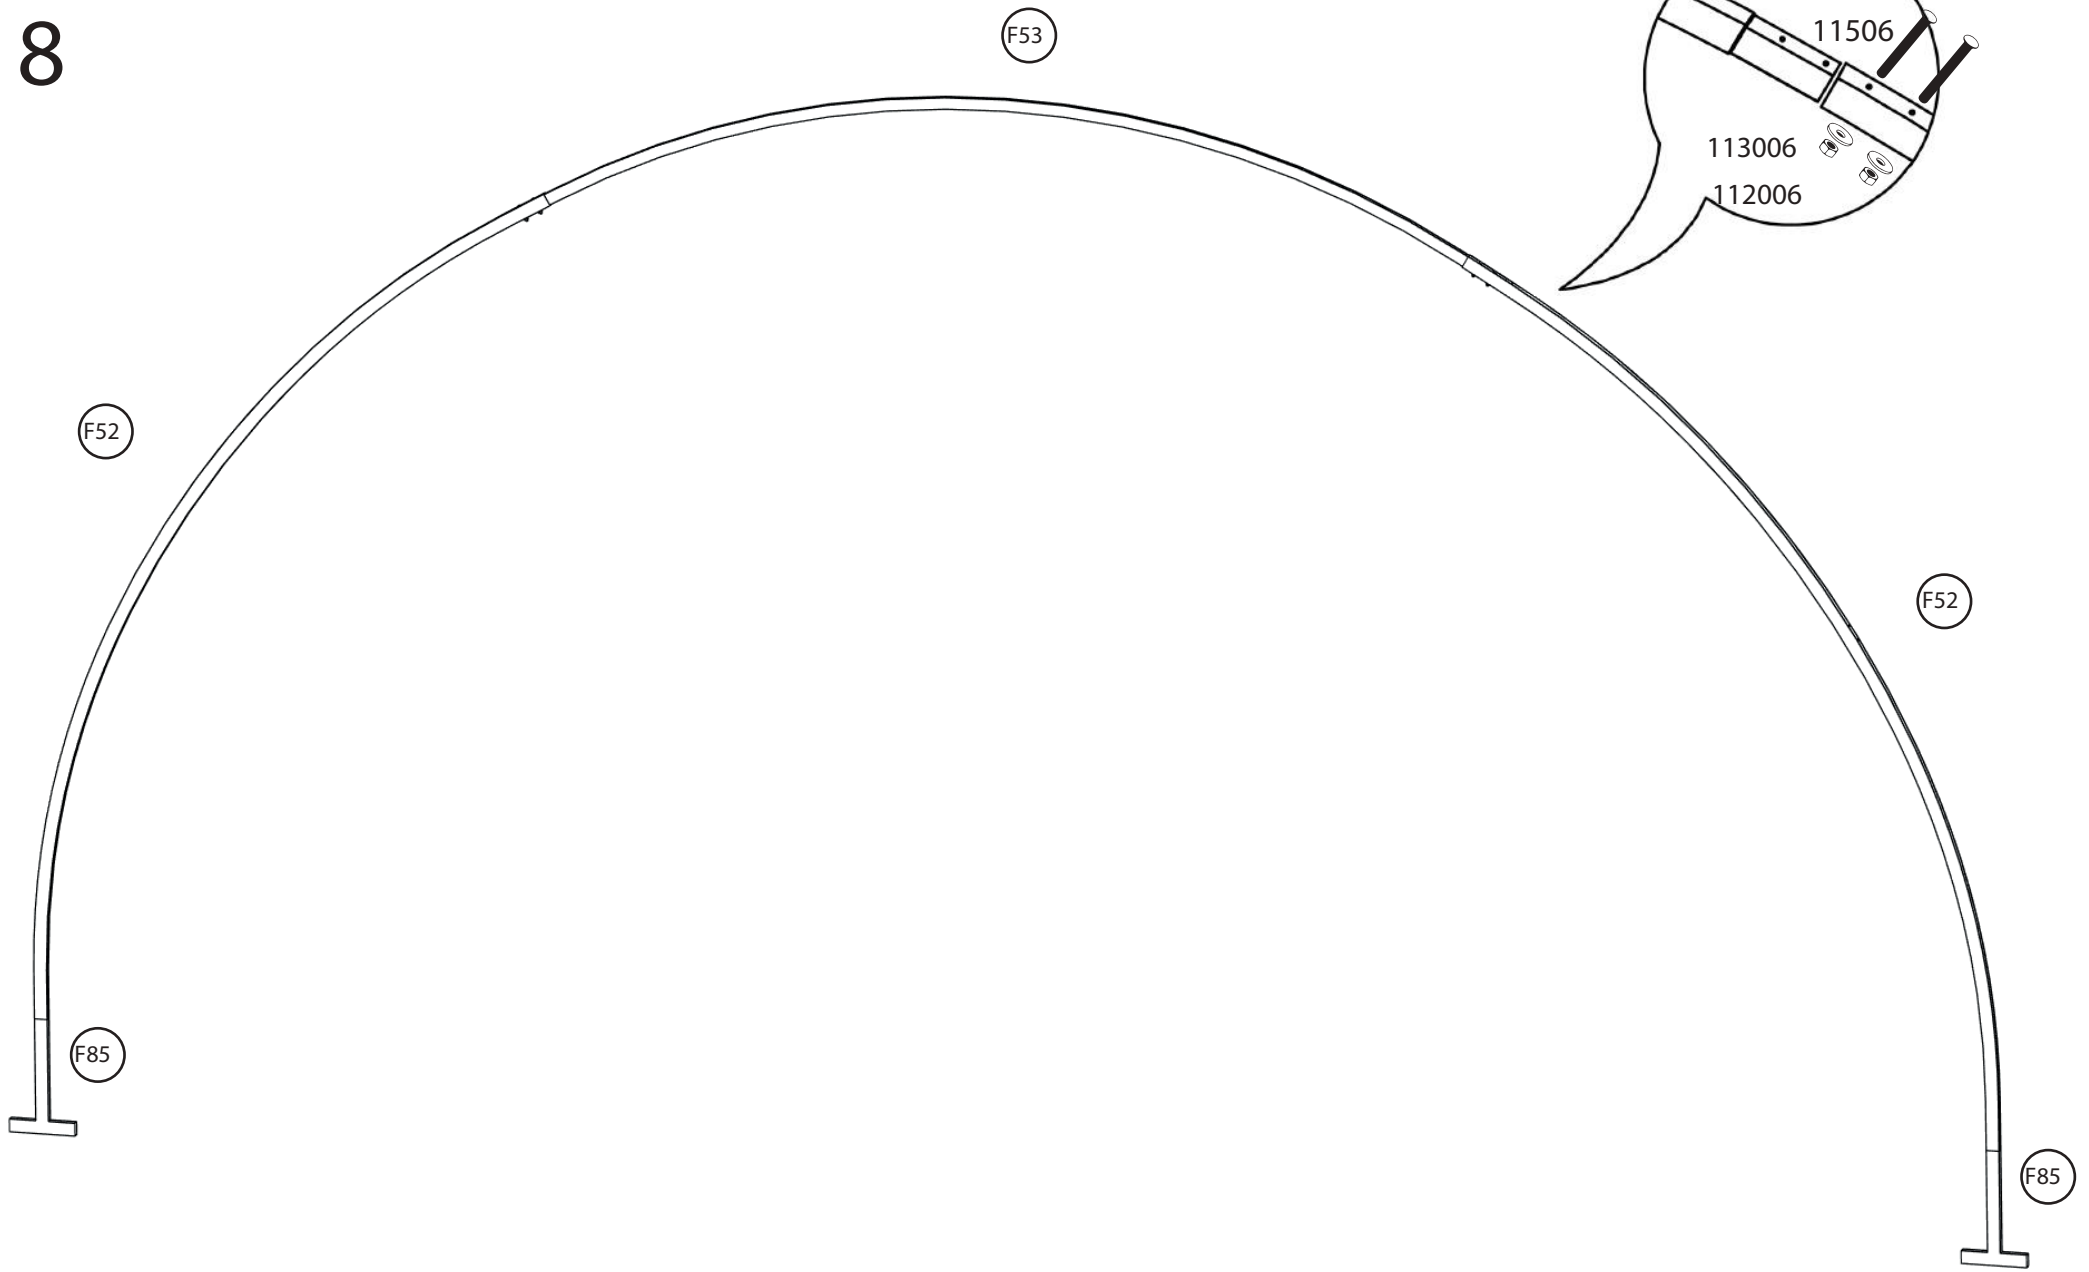


3x

9

2


1

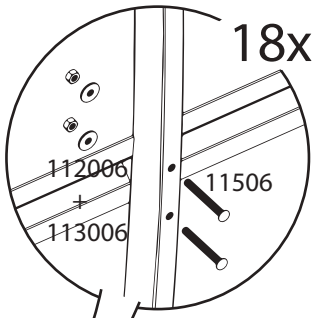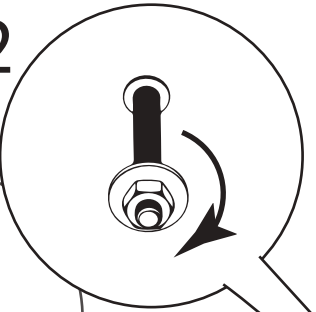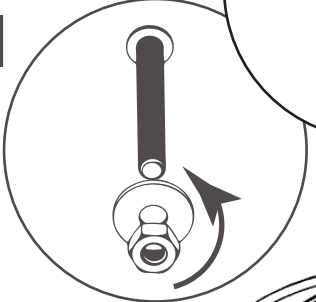

18x

112006
+
113006



11506

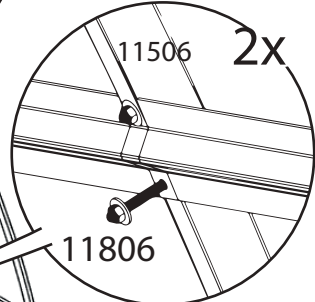



2x

11506

11806

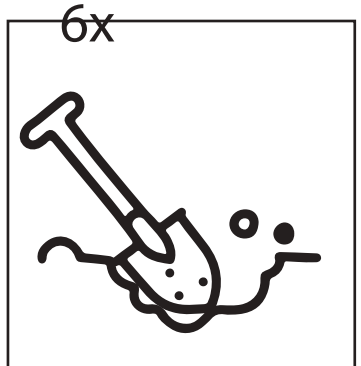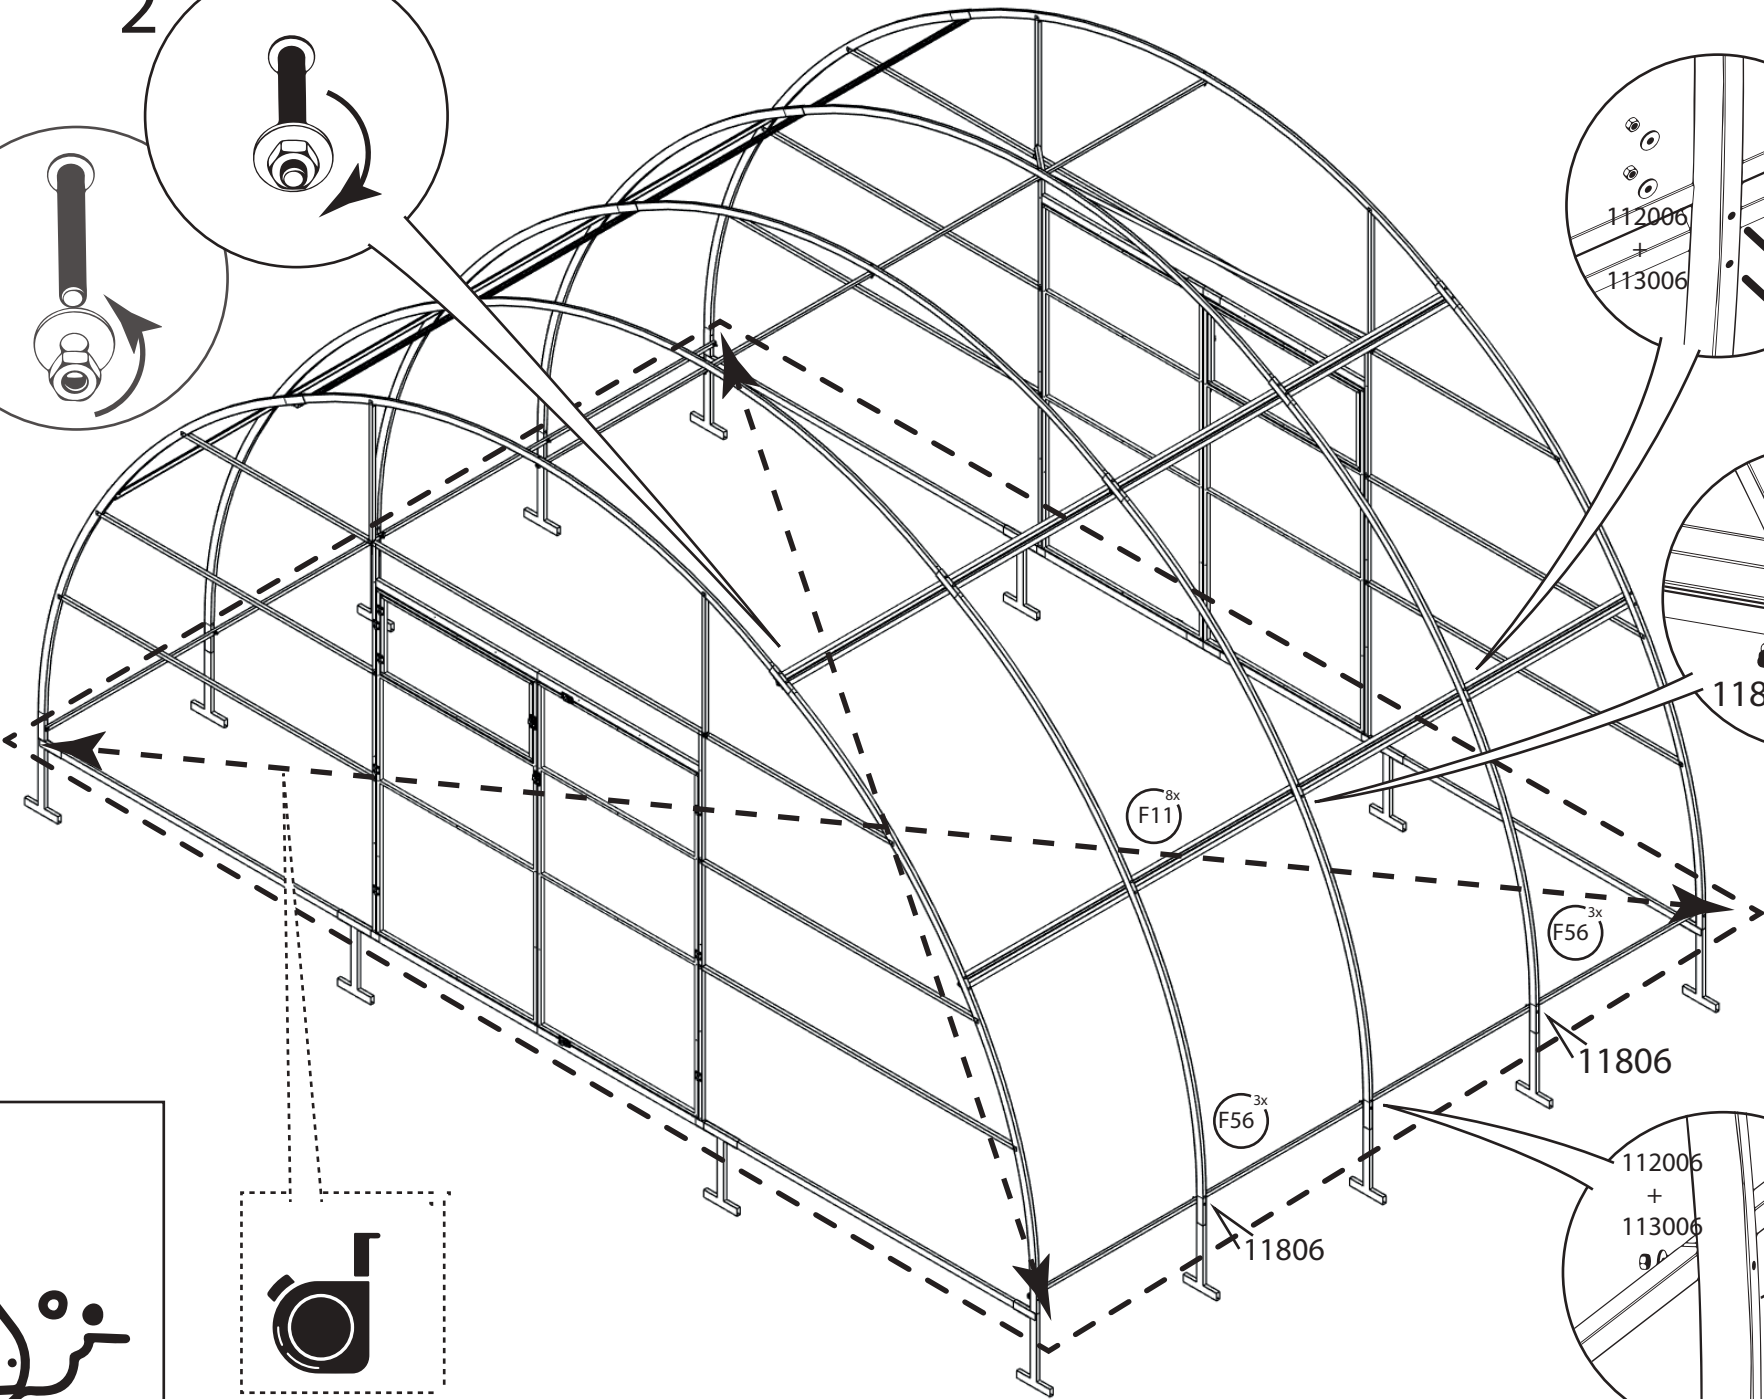

6x

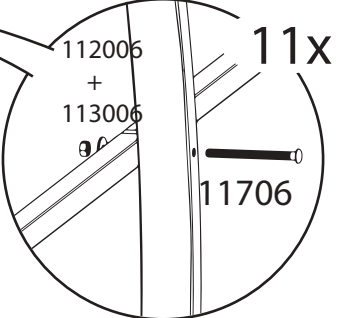
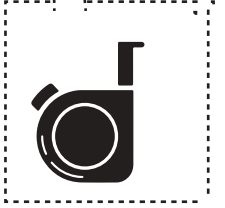


11x


112006
+
113006

11706




10

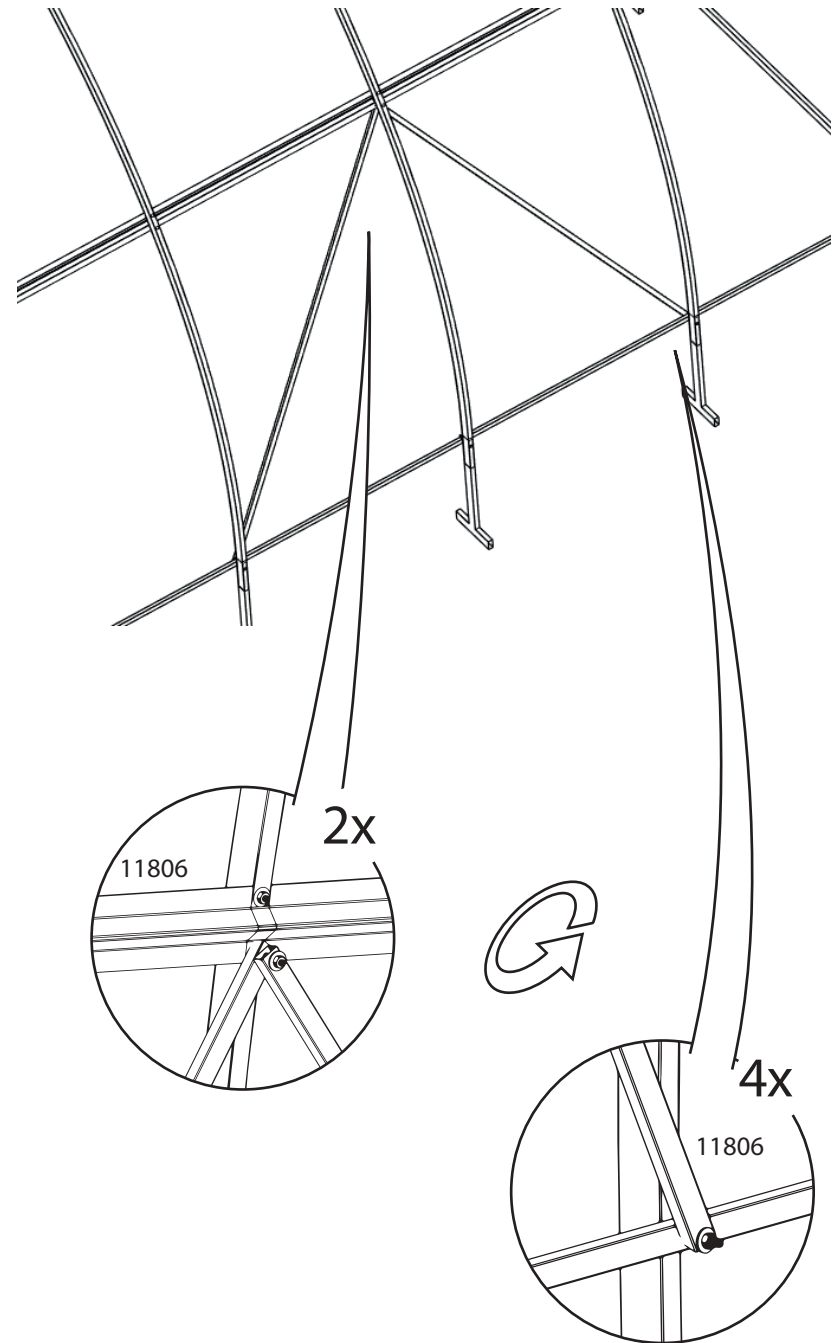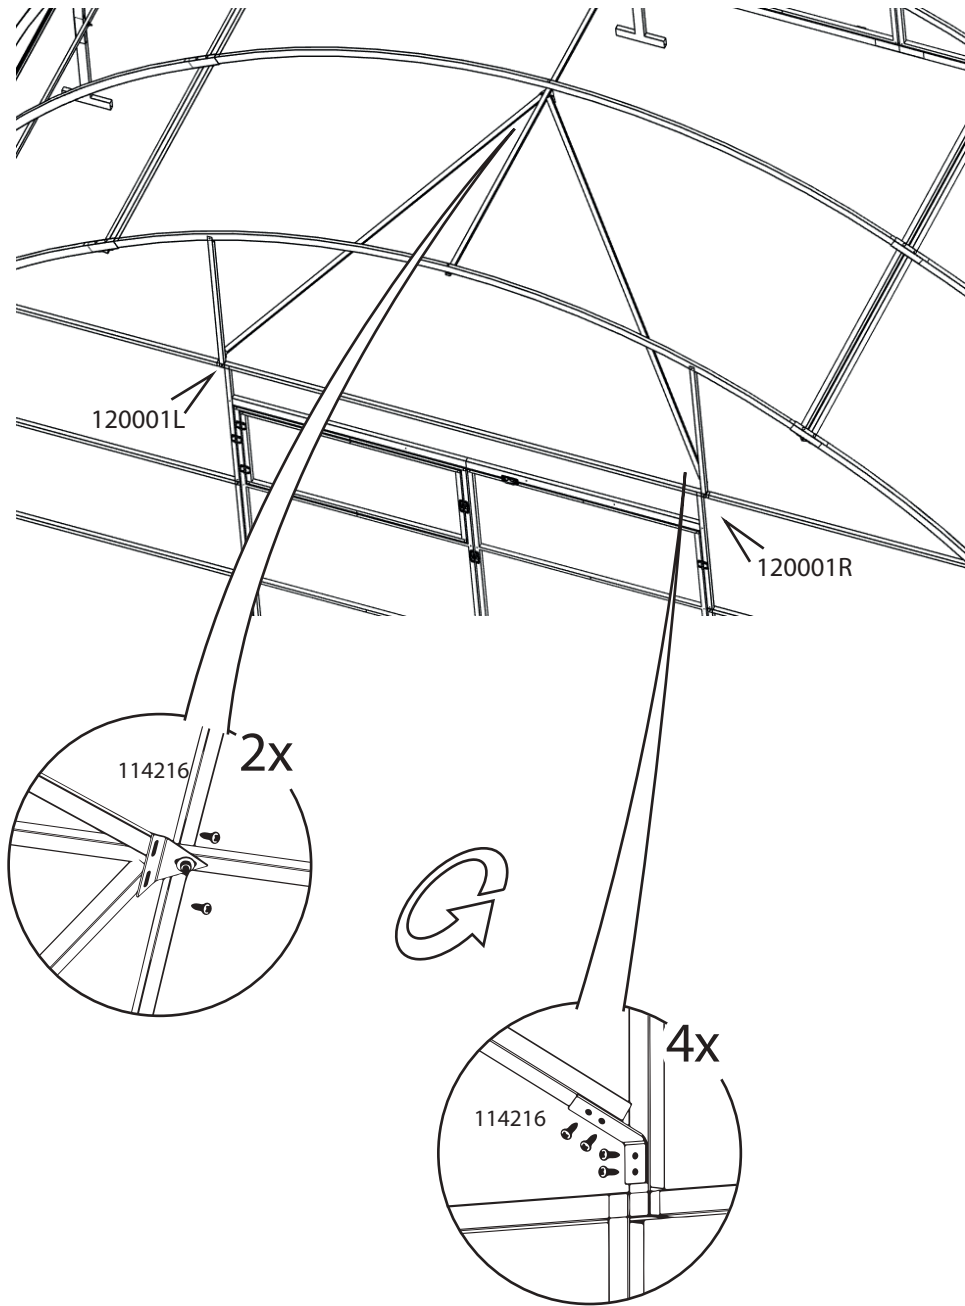


11

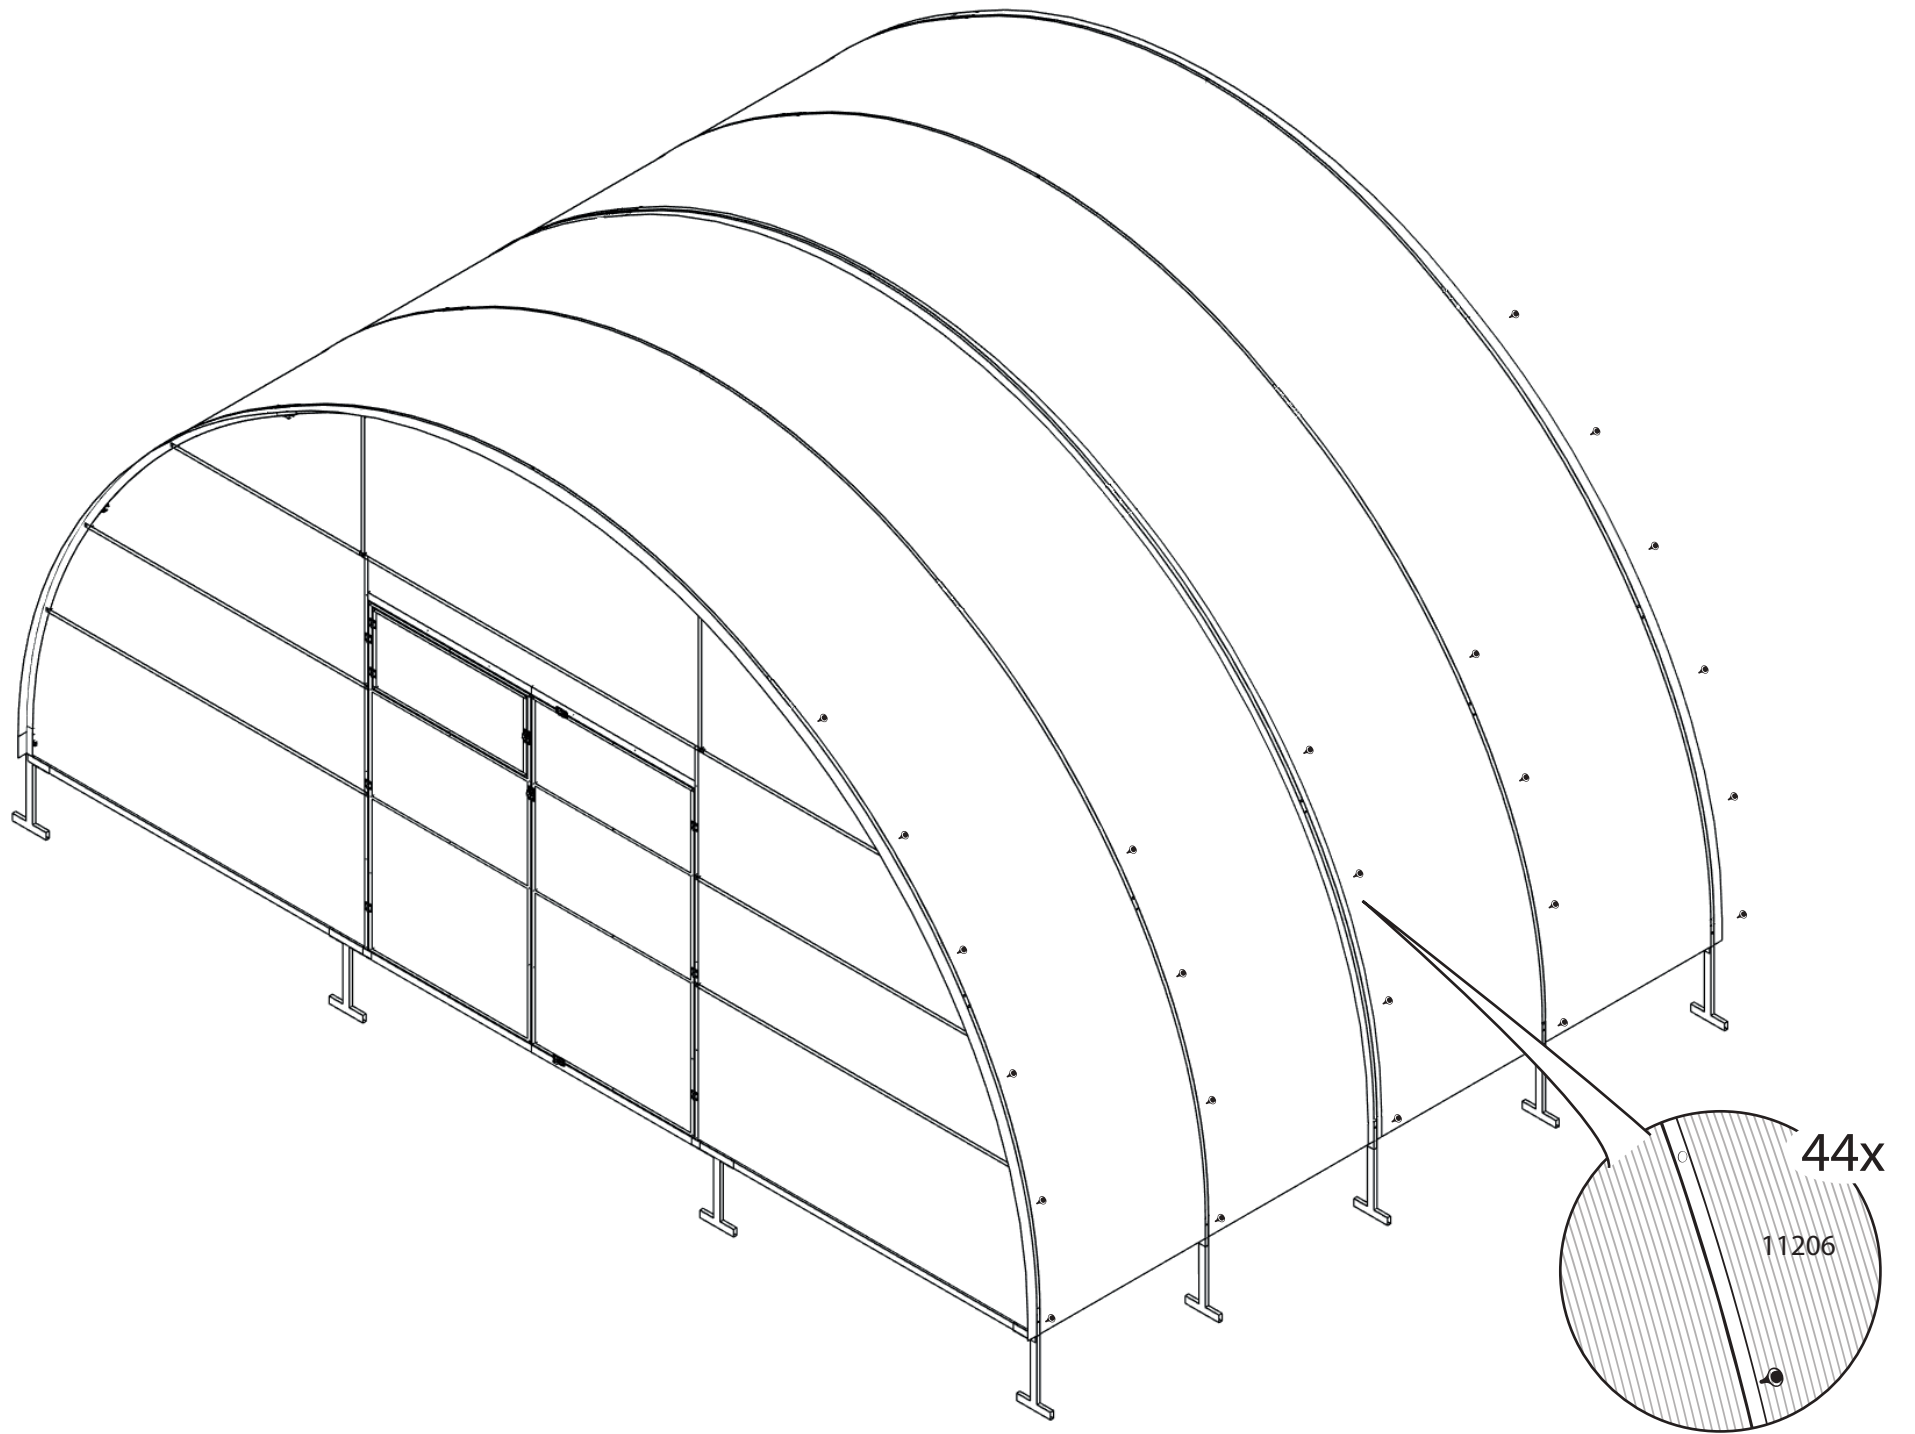

2m Extension Kit

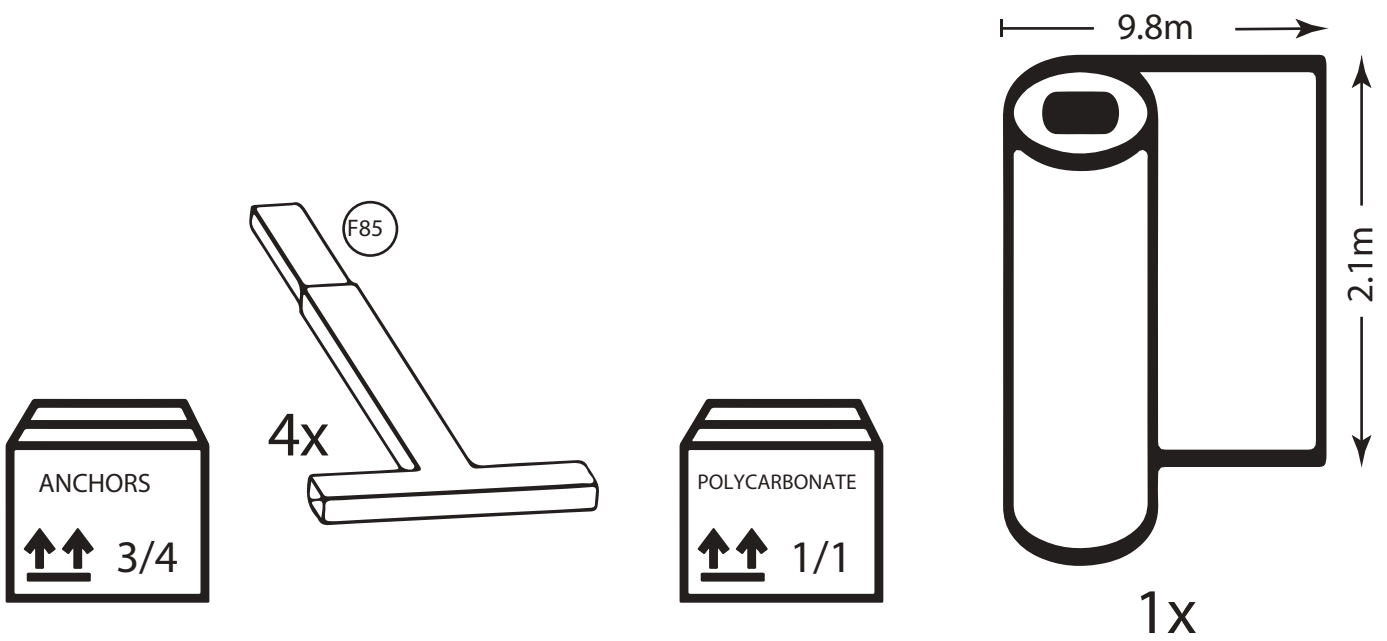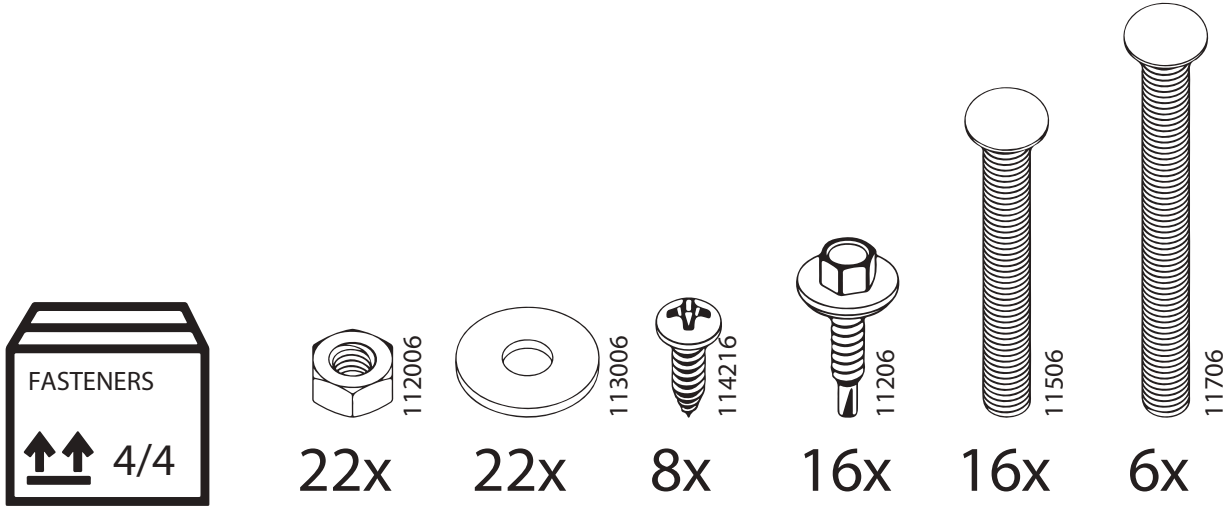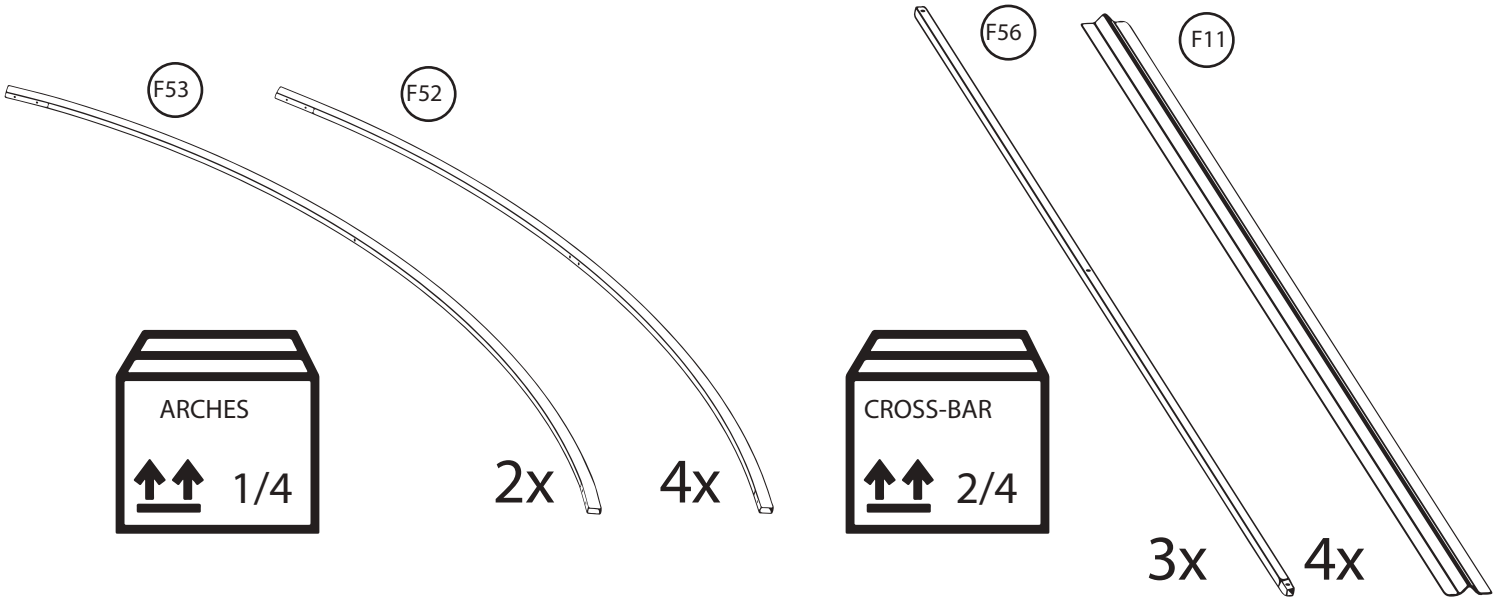


12 (REPEAT THE STEP FOR EACH EXTENSION KIT)


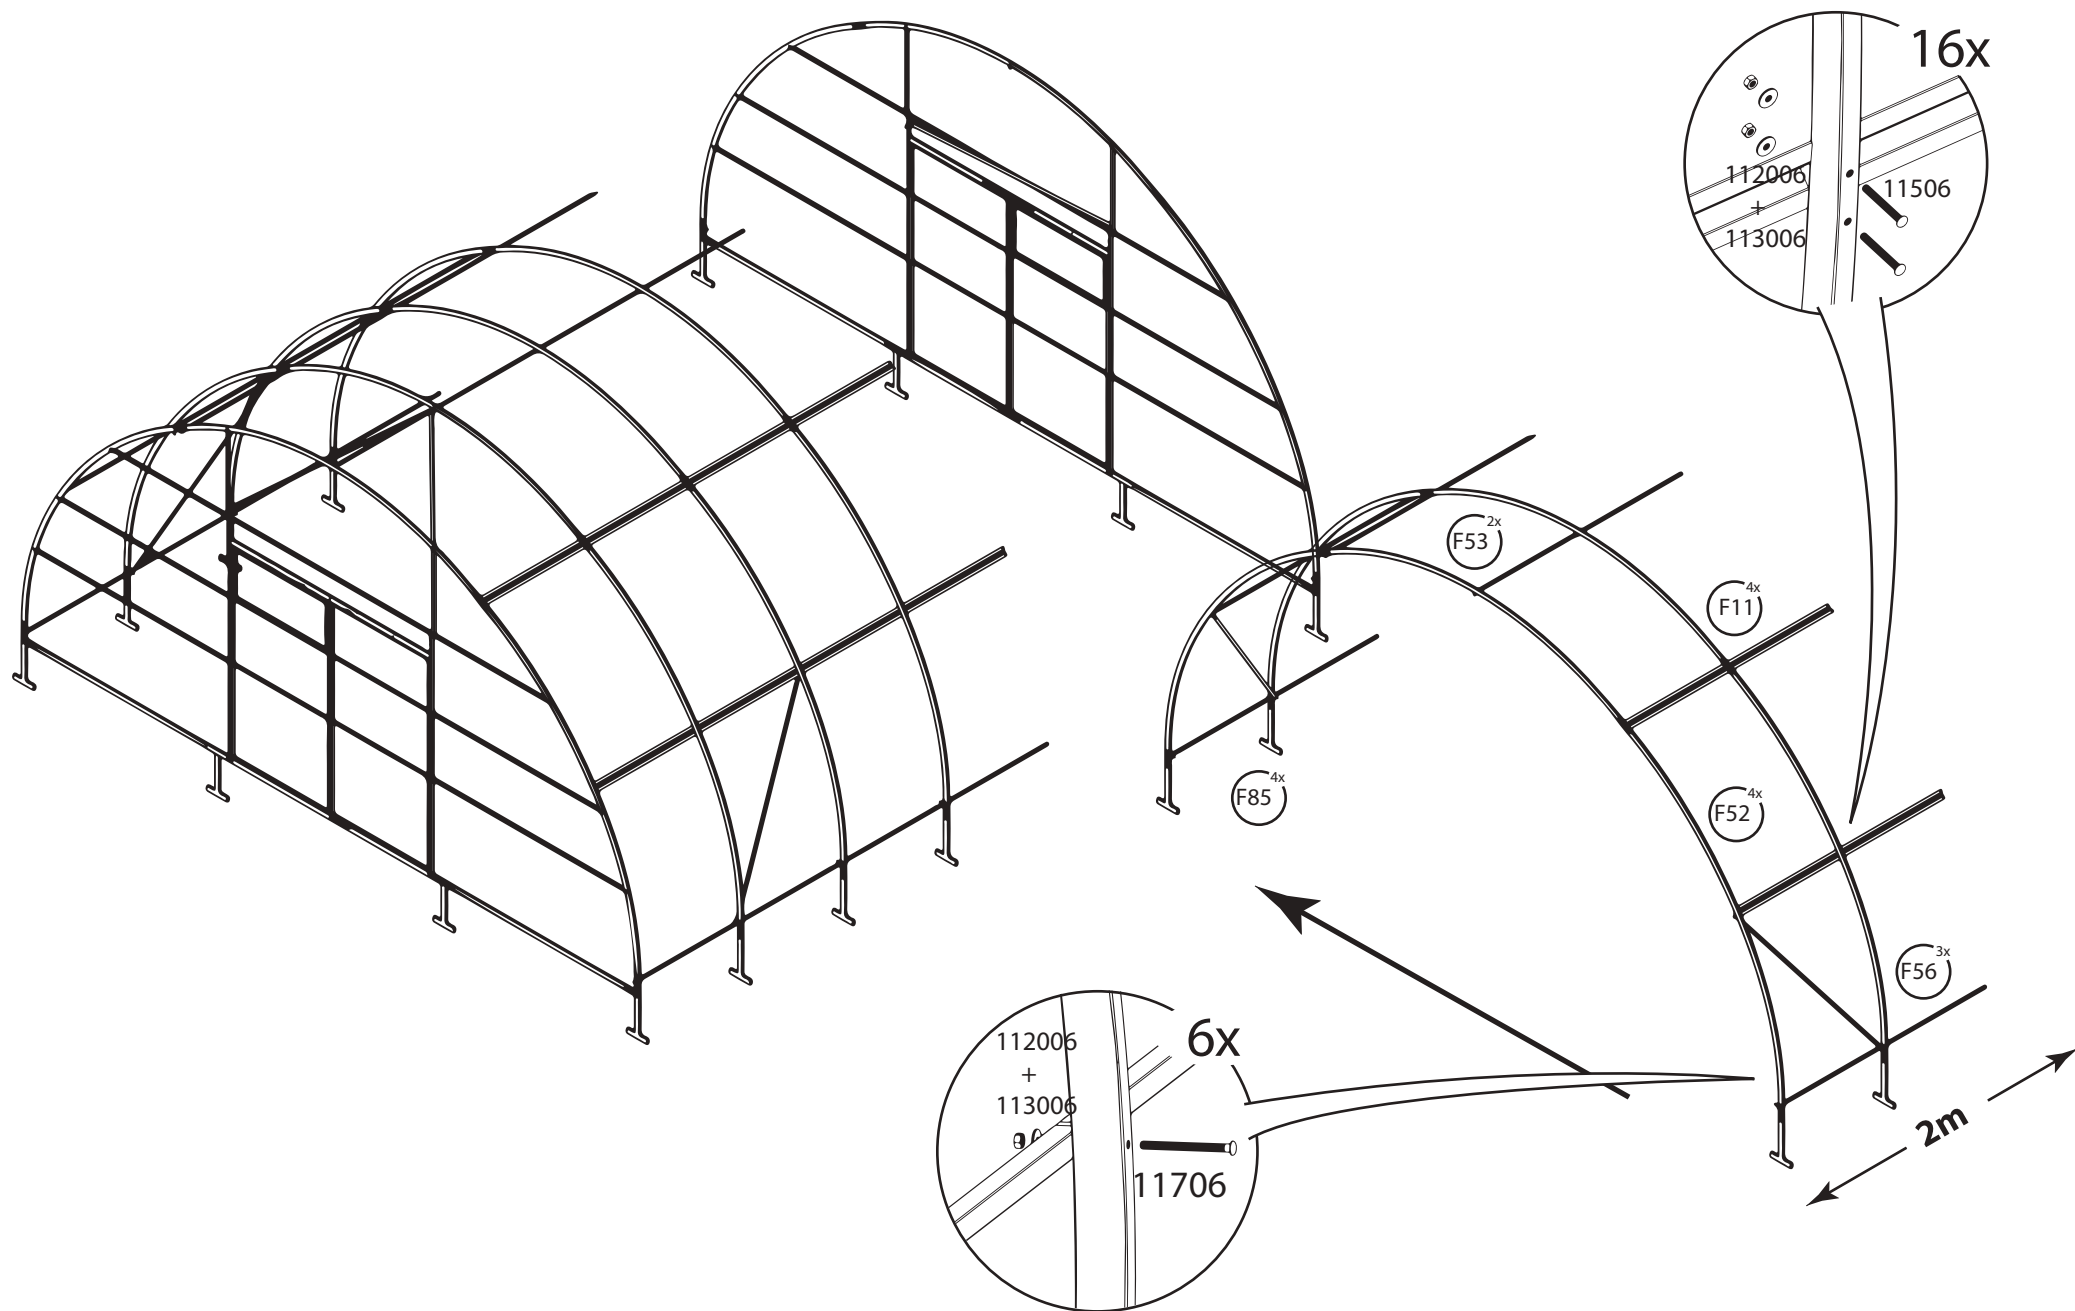


Polycarbonate



Boxes

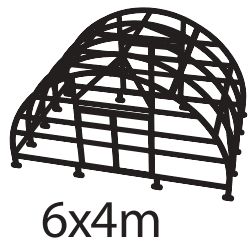



3X 2.1x9.8m
+
1X 2.1x7m

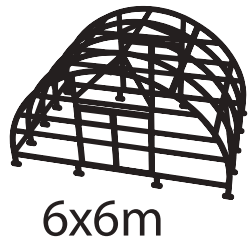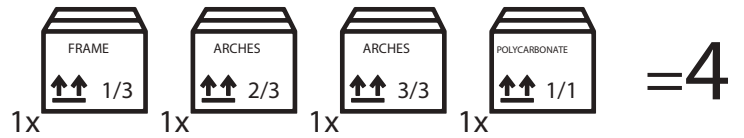



4X 2.1x9.8m
+
1X 2.1x7m

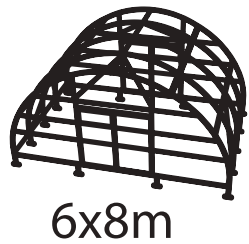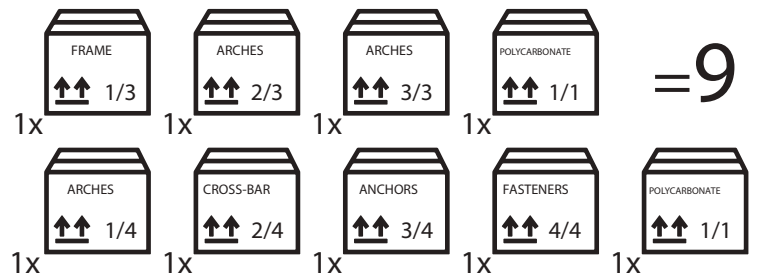


5X 2.1x9.8m
+
1X 2.1x7m

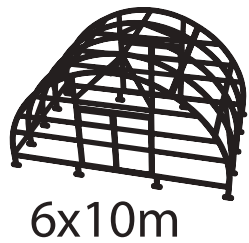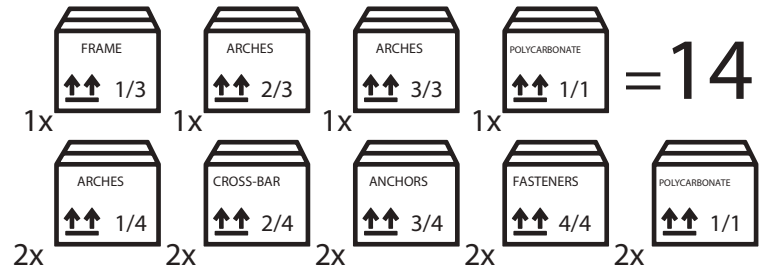


6X 2.1x9.8m
+
1X 2.1x7m

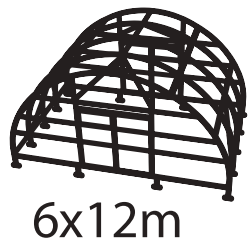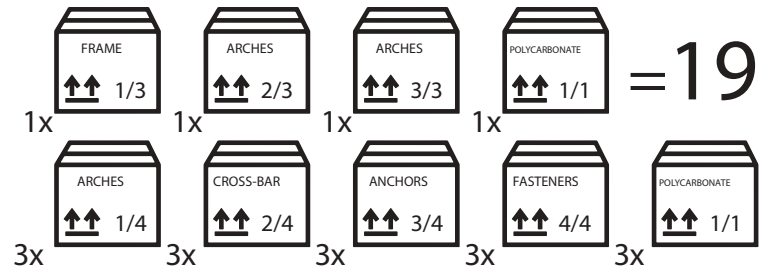

7X 2.1x9.8m
+
1X 2.1x7m

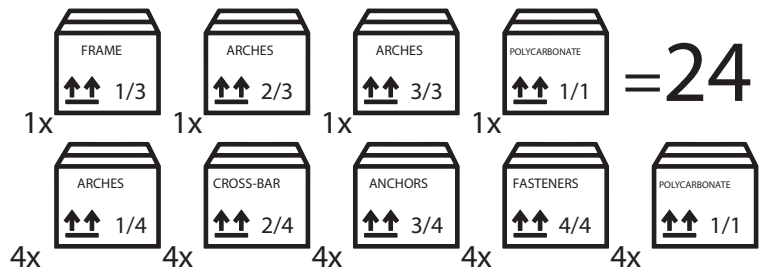

NECESSARY TOOLS



Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

