


**DANCOVER<sup>®</sup>**






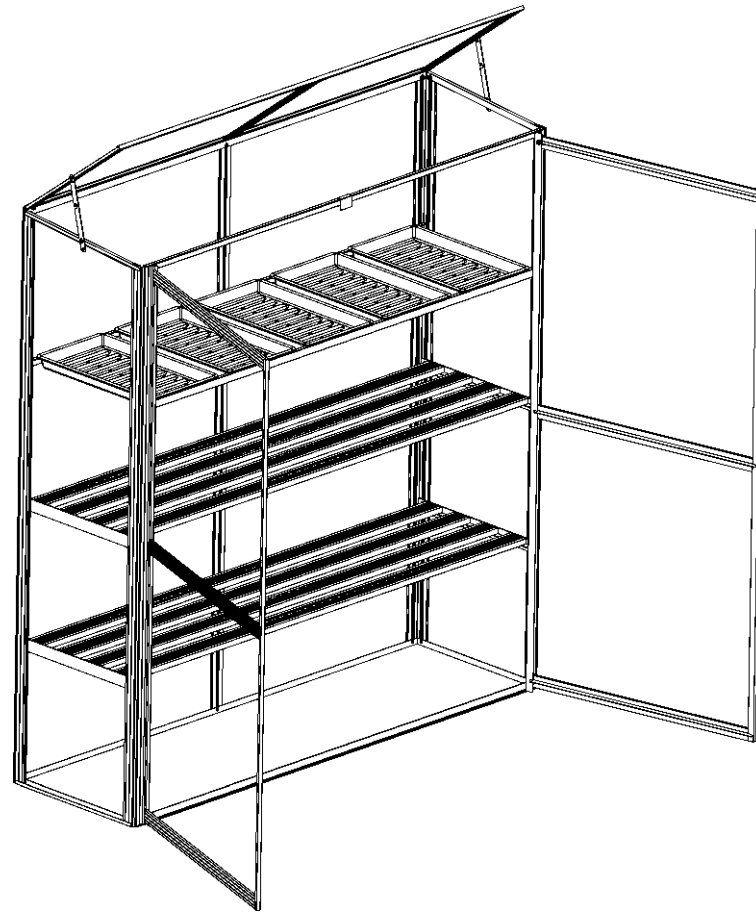


Manual  
for  
Greenhouse Nursery  
0,39x1,3x1,4m








# Greenhouse Assembly Instructions













Product Size(LxWxH): 130x39x140cm


# PARTS LIST

PART	#	mm	Qty.
	Y1	1388*615	2
	Y2	642*610	4
	Y3	1356*331	1
	Y4	1356*331	1
	Y5	370*622	2
	P01		5







PART	#	mm	Qty.
	S01	M6*10	53
	S02	M5*10	16
	M01	M6	53
	M02	M5	16
	Z01	Ø4*16	2
	Z02	Ø4*12	4
	W01		1
	W02		2
	W03		4





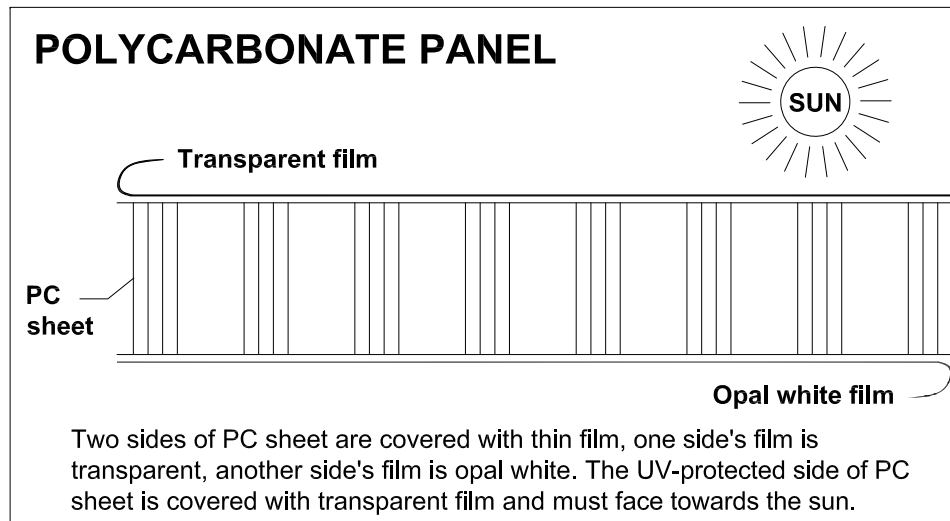


PART	#	mm	Qty.
	L07A	372	2
	L07B	610	4
	L08A	1390	1
	L08B	610	2
	L08C	372	1
	L09	370	4
	L10	1284	8

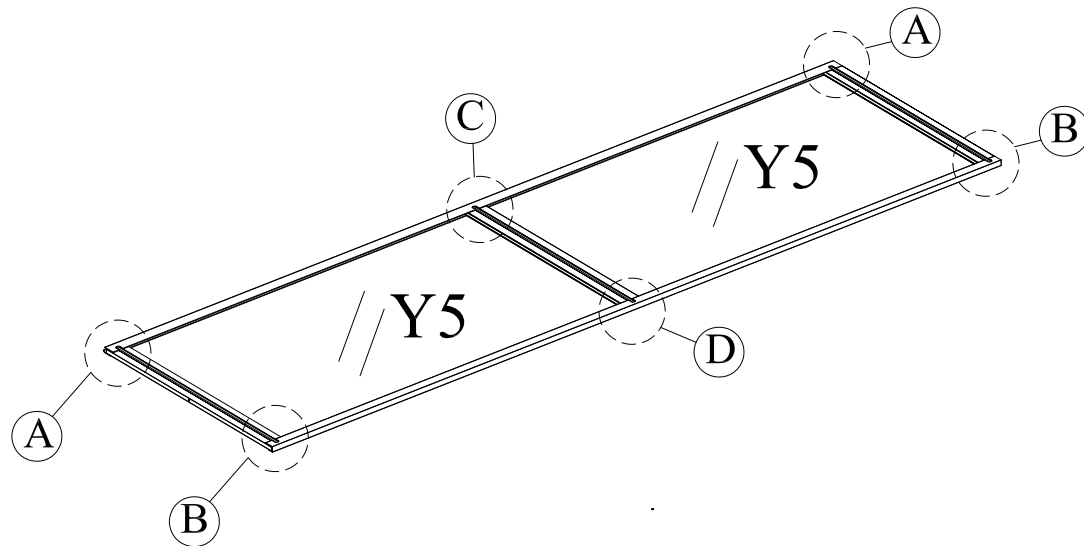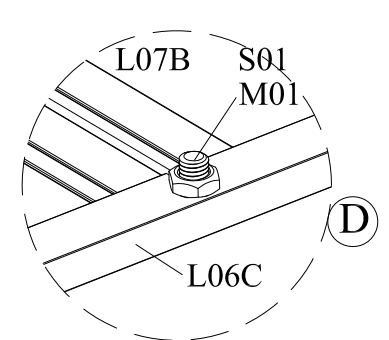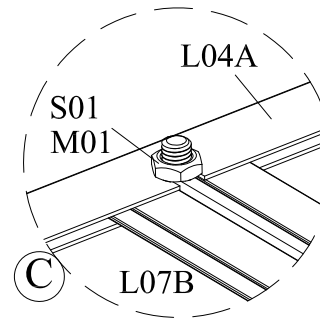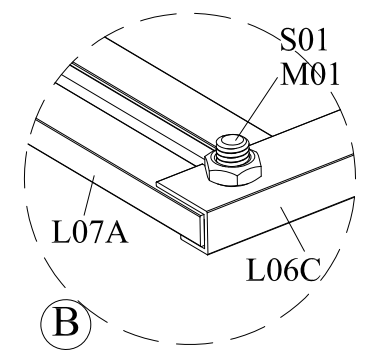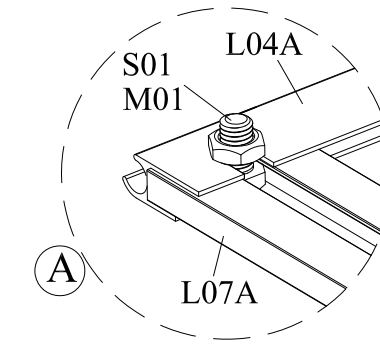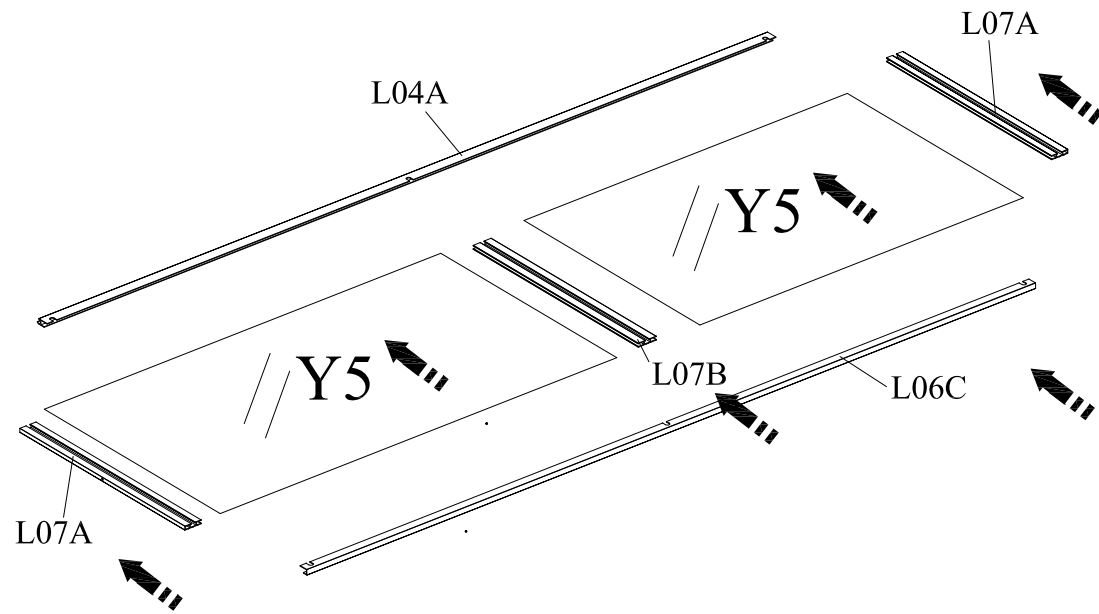PART	#	mm	Qty.
	L01A	1390	1
	L01B	1390	1
	L02	1360	2
	L03A	1285	3
	L03B	1285	1
	L04A	1300	1
	L04B	1359	1
	L04C	1359	1
	L05	1285	1
	L06A	370	2
	L06B	371	2
	L06C	1300	1
	L06D	1339	2
	L06E	1285	1











# Window Assembly



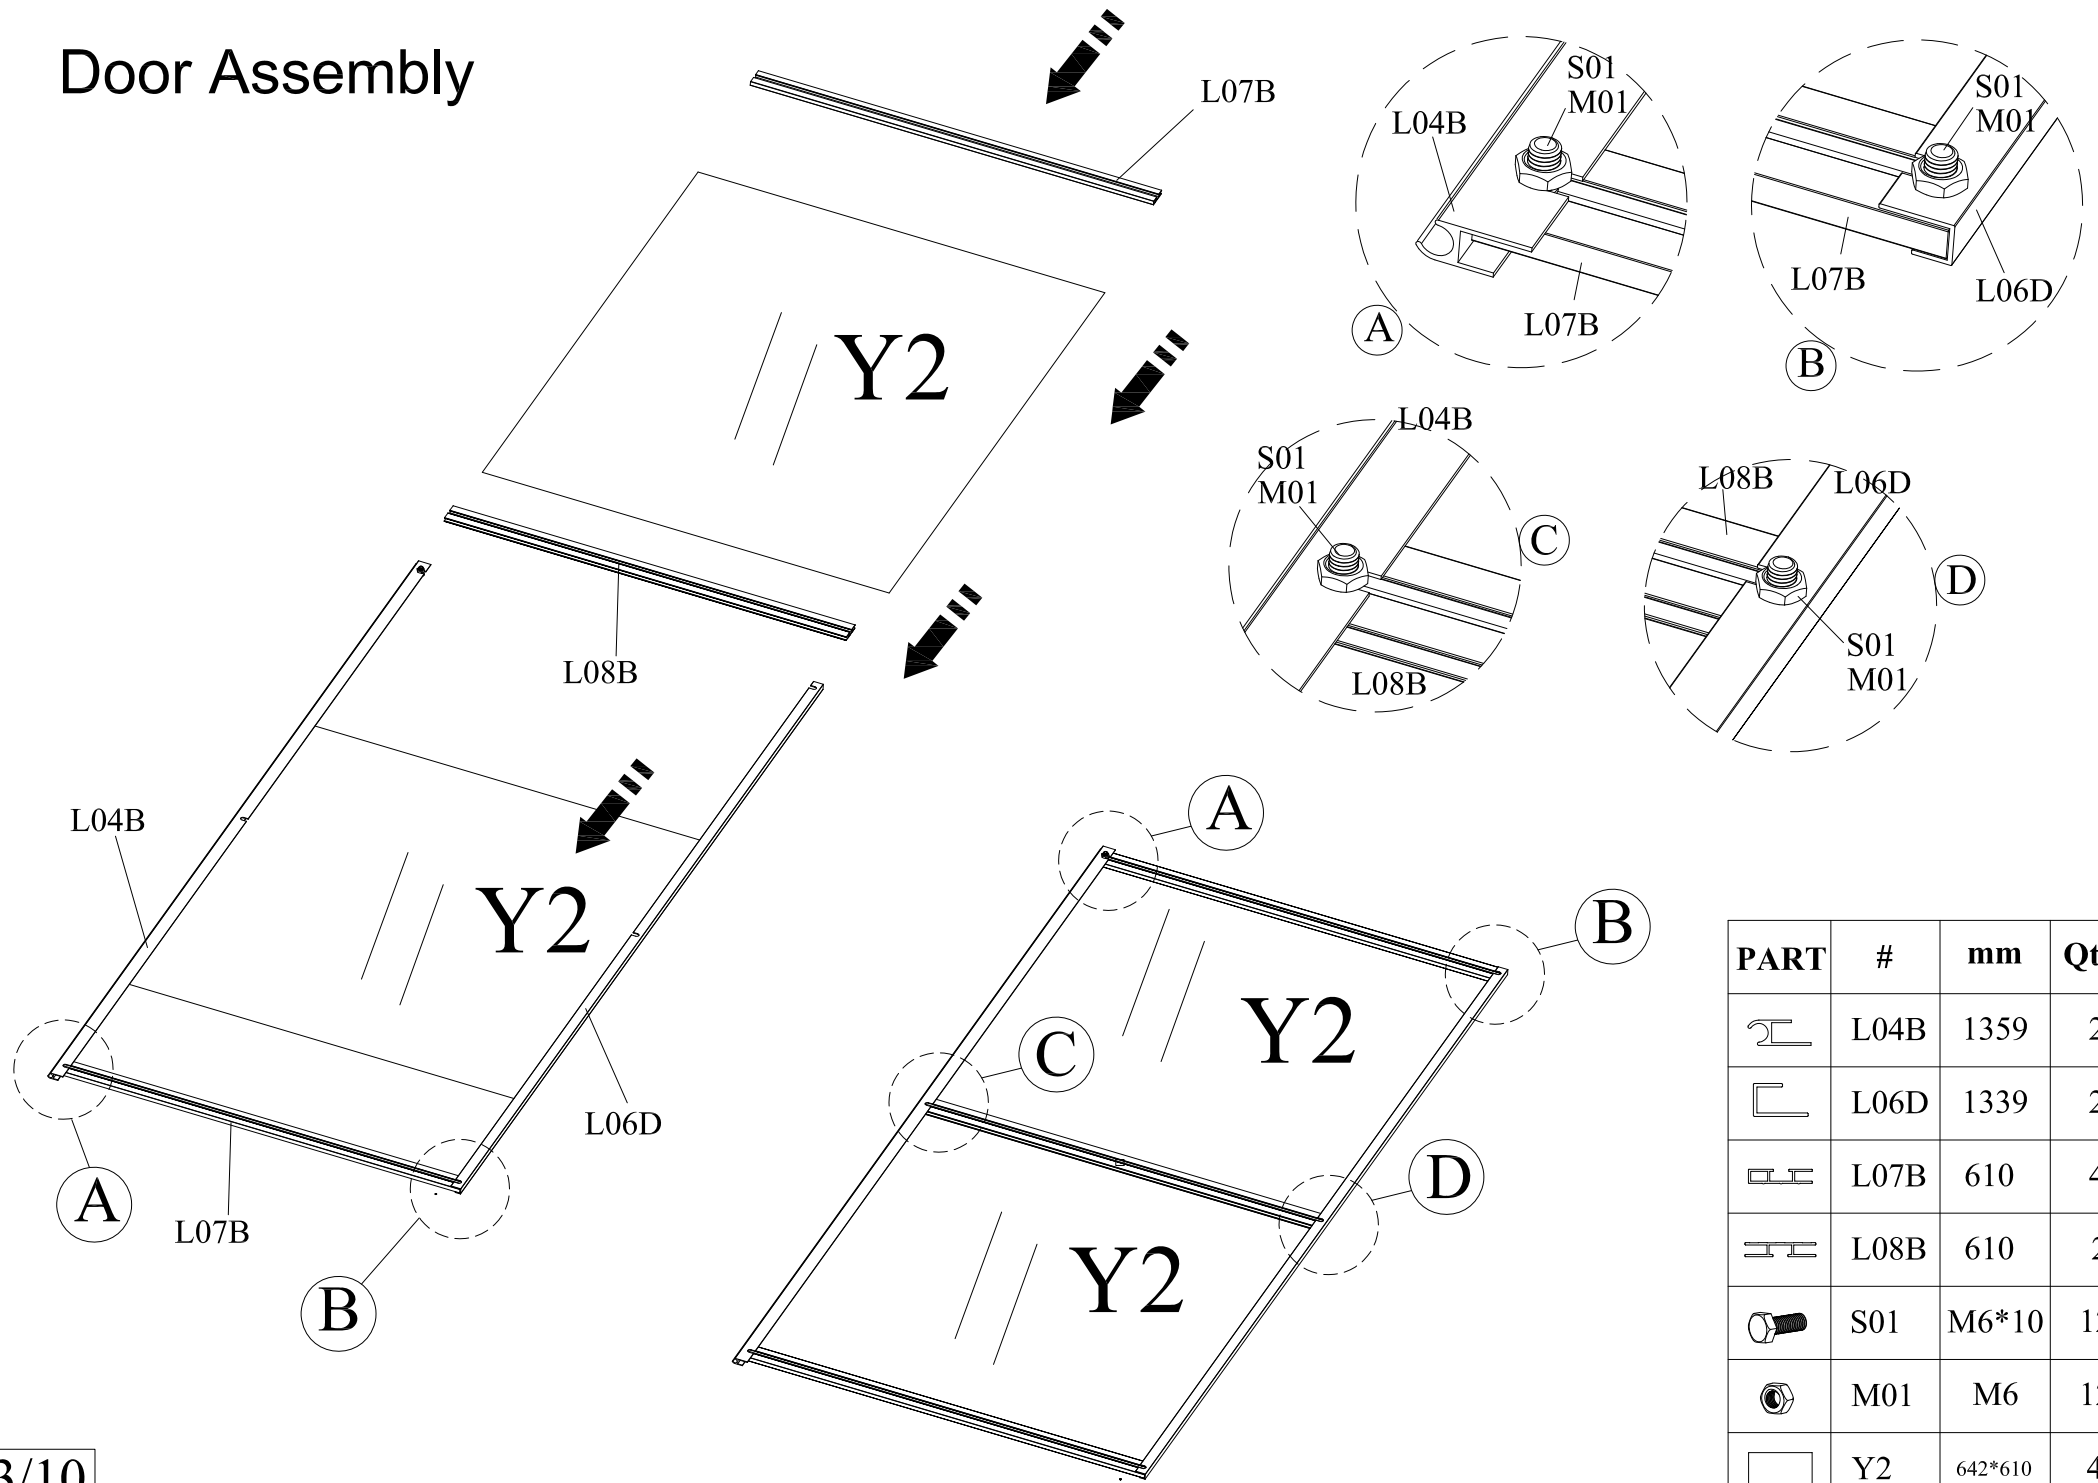


PART	#	mm	Qty.
	L04A	1300	1
	L06C	1300	1
	L07A	372	2
	L08C	372	1
	S01	M6*10	6
	M01	M6	6
	Y5	370*622	1



# Door Assembly








PART	#	mm	Qty.
	L04B	1359	2
	L06D	1339	2
	L07B	610	4
	L08B	610	2
	S01	M6*10	12
	M01	M6	12
	Y2	642*610	4

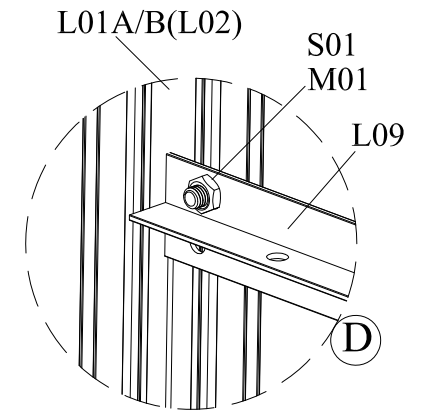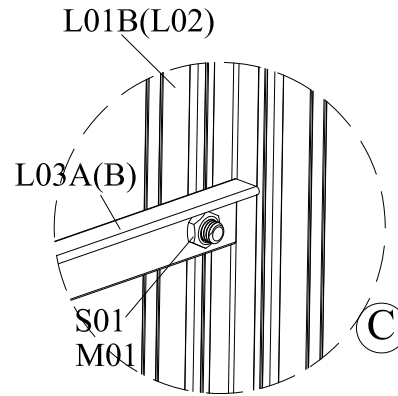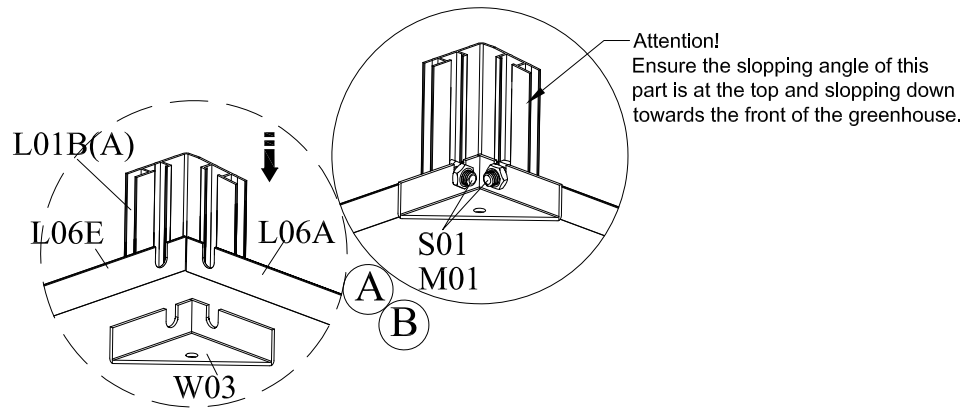


Note:  
The L09 and L03 components can be installed at varying heights depending on your requirements. Please install each level of shelving so that it is level, it can help to measure and mark the profiles before installing the L09 and L03's.

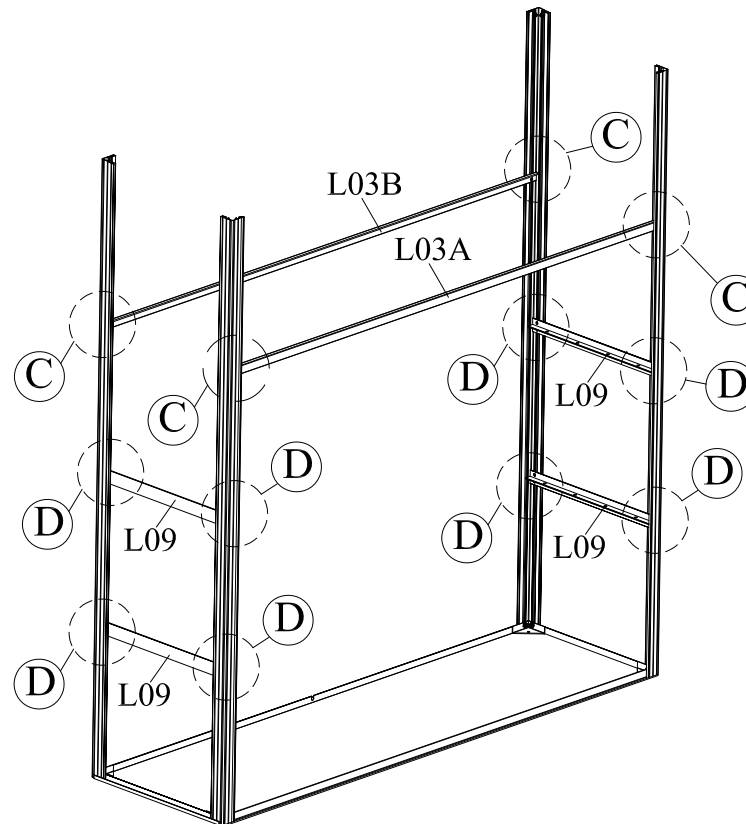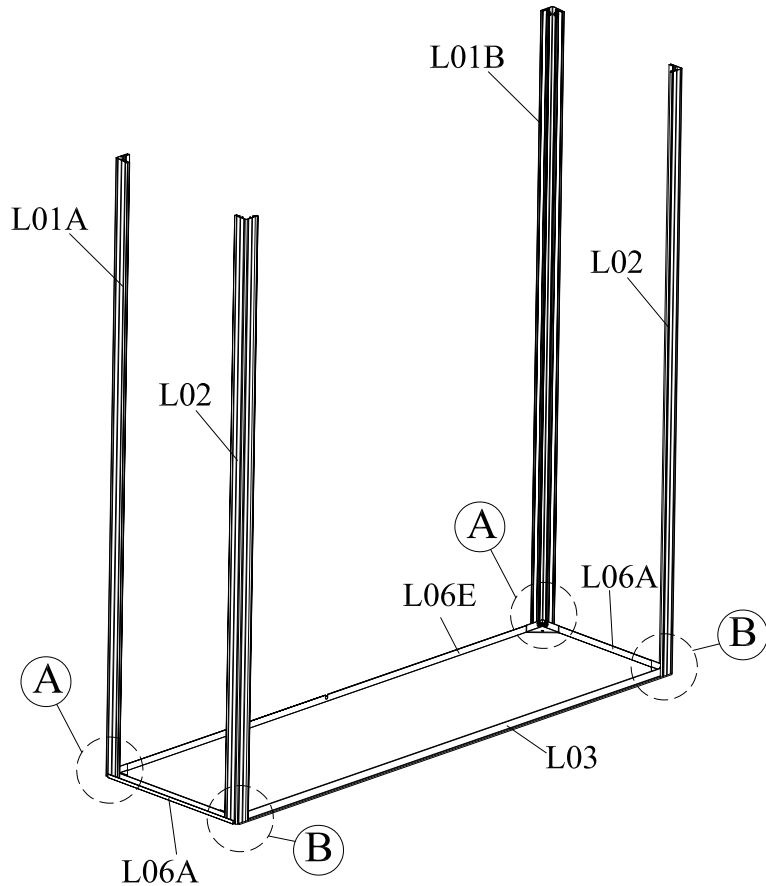



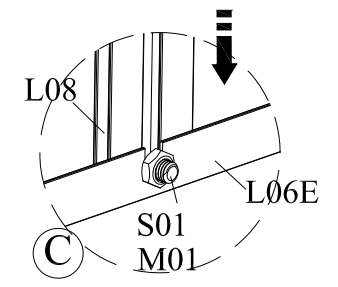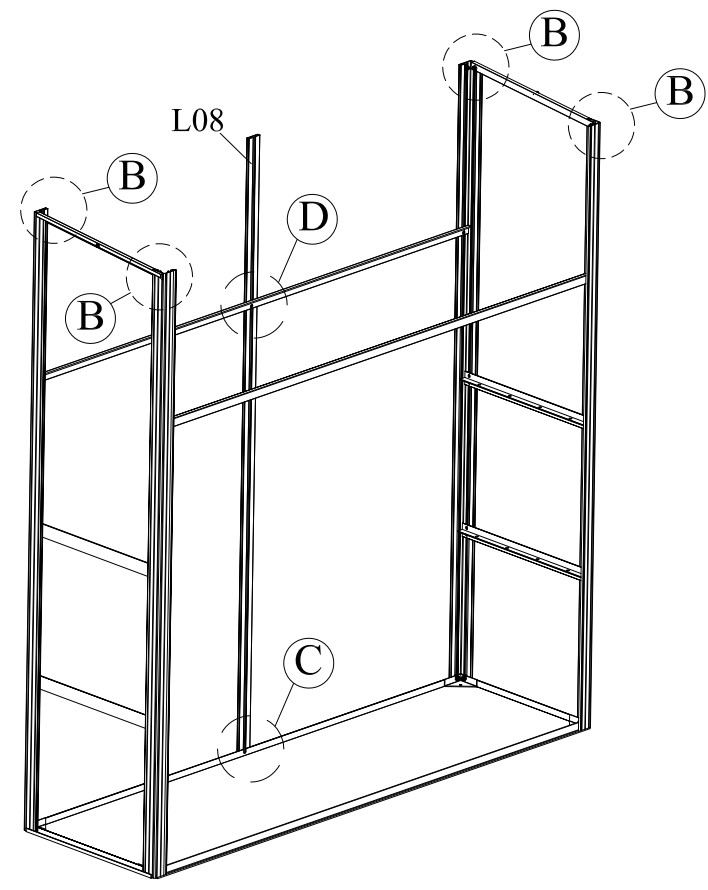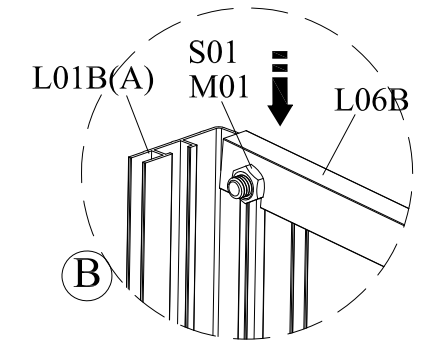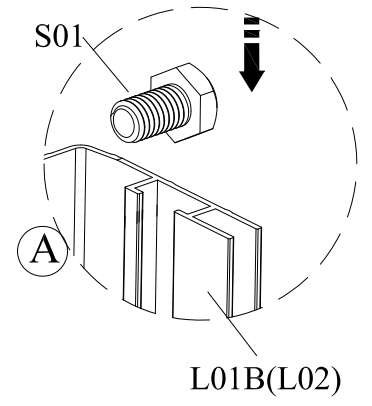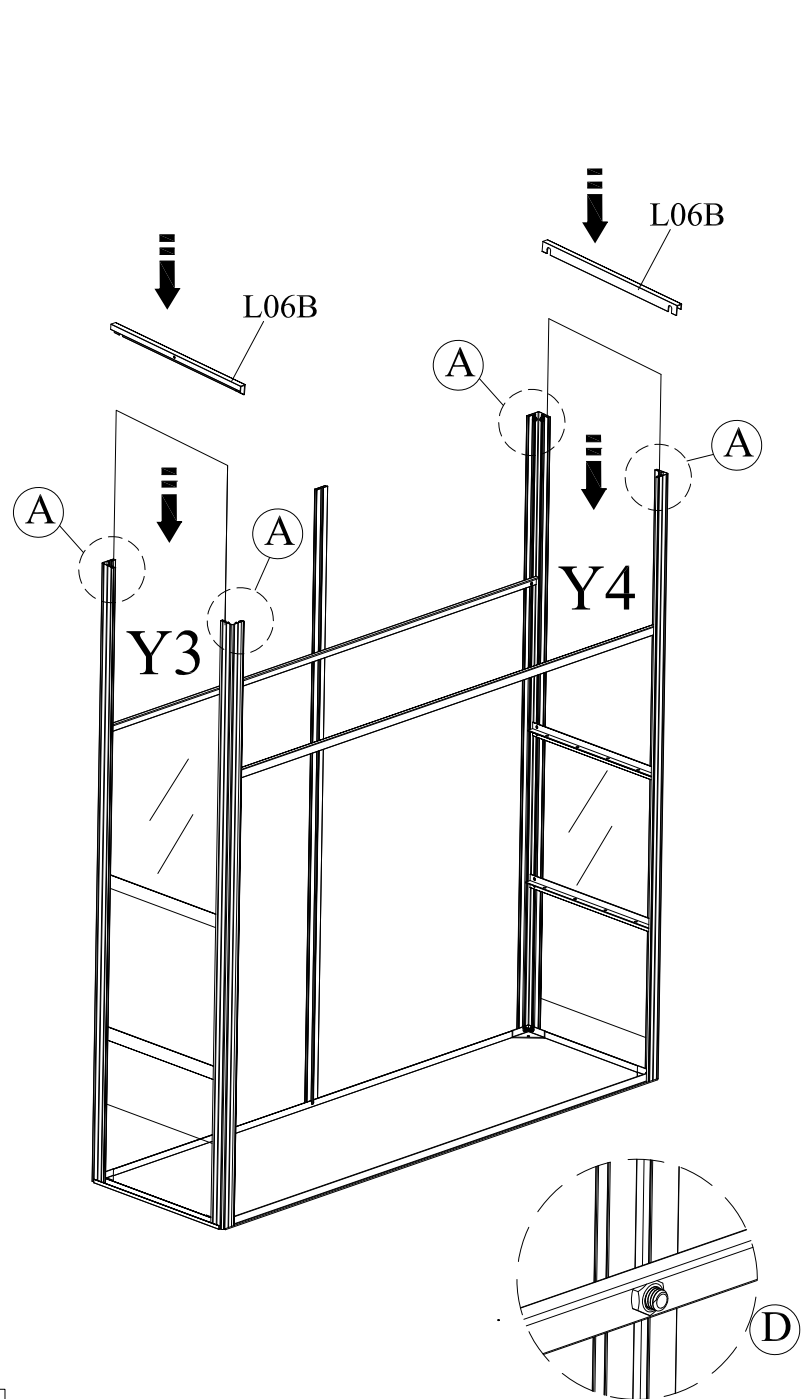


PART	#	mm	Qty.
	L01A	1390	1
	L01B	1390	1
	L02	1360	2
	L03A	1285	2
	L03B	1285	1
	L06A	370	2
	L06E	1285	1
	L09	370	4
	S01	M6*10	20
	M01	M6	20

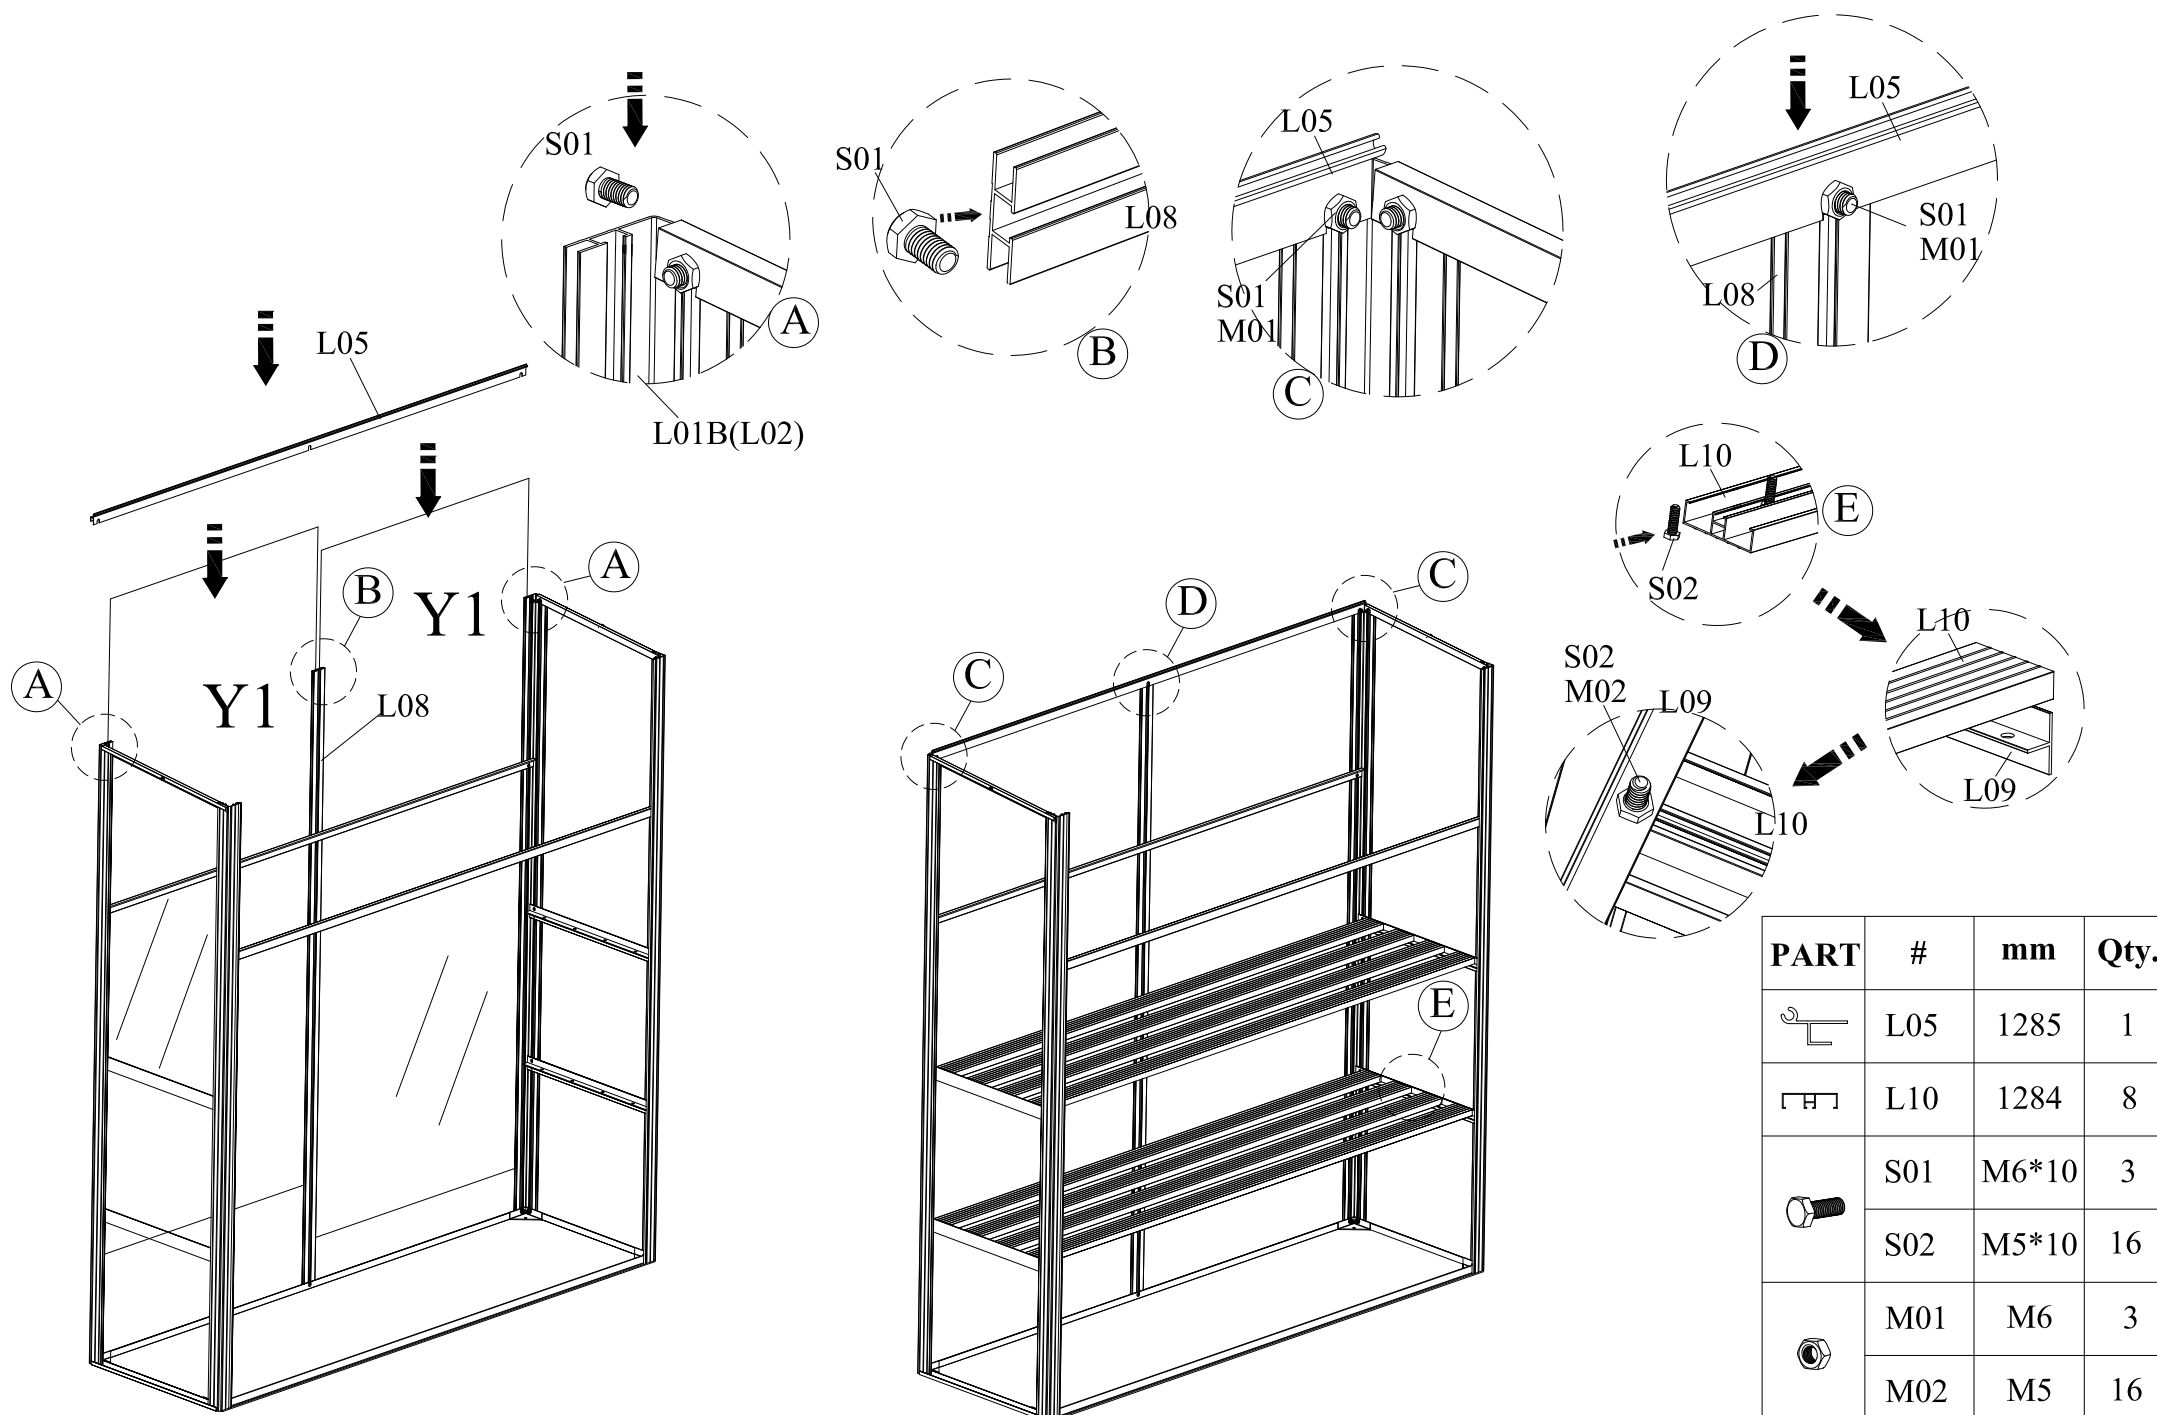





PART	#	mm	Qty.
	L06B	371	2
	L08A	1390	1
	S01	M6*10	5
	M01	M6	5
	Y3	1387*331	1
	Y4	1387*331	1






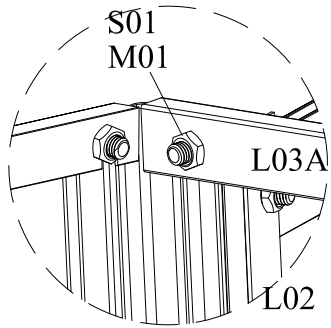
PART	#	mm	Qty.
	L05	1285	1
	L10	1284	8
	S01	M6*10	3
	S02	M5*10	16
	M01	M6	3
	M02	M5	16
	Y1	1388*615	2

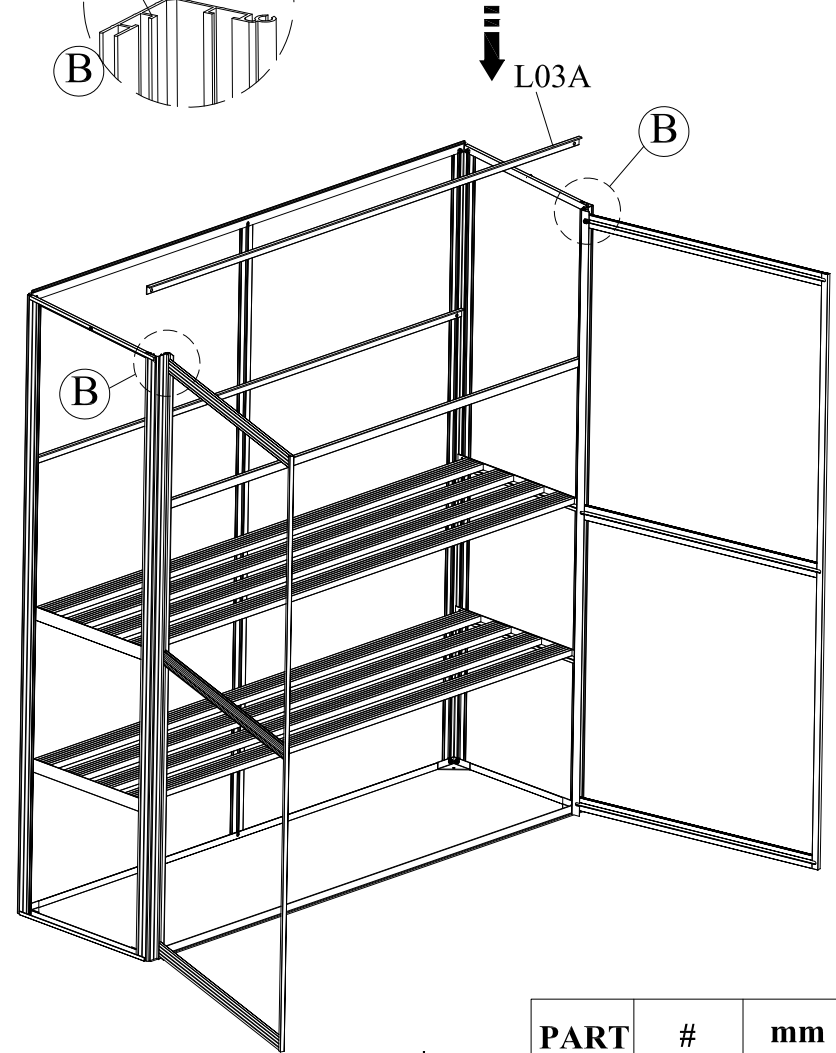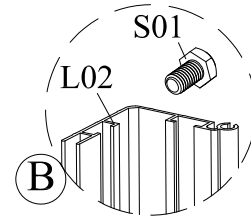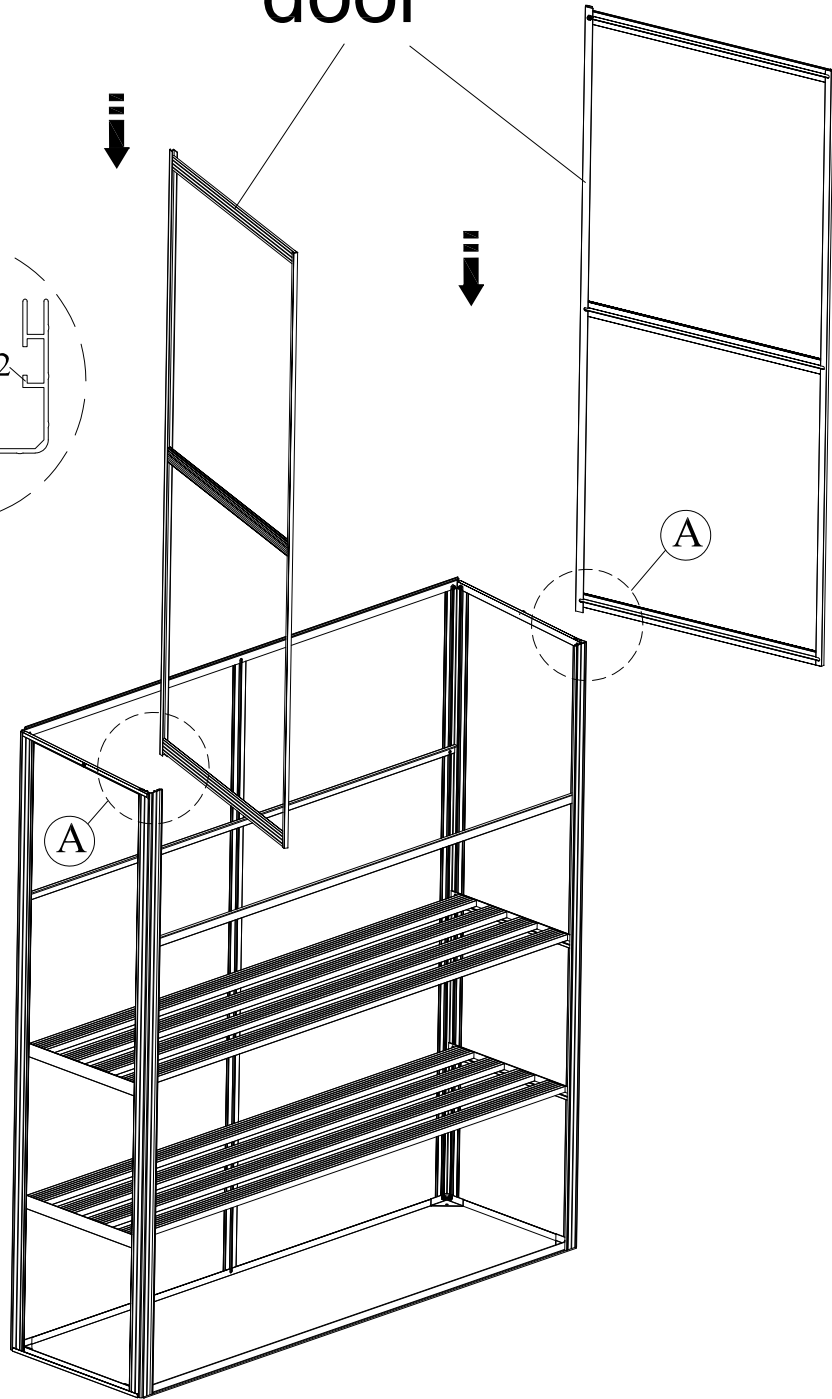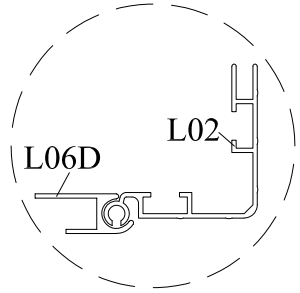




door










PART	#	mm	Qty.
	L03A	1285	1
	S01	M6*10	2
	M01	M6	4



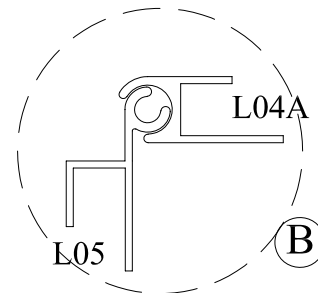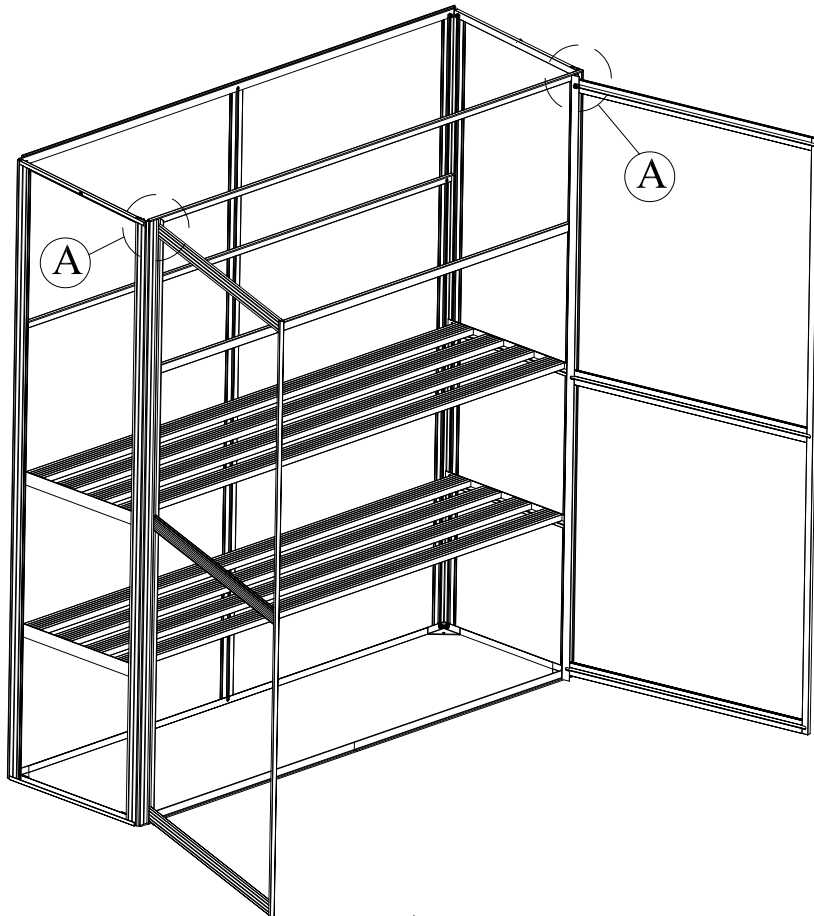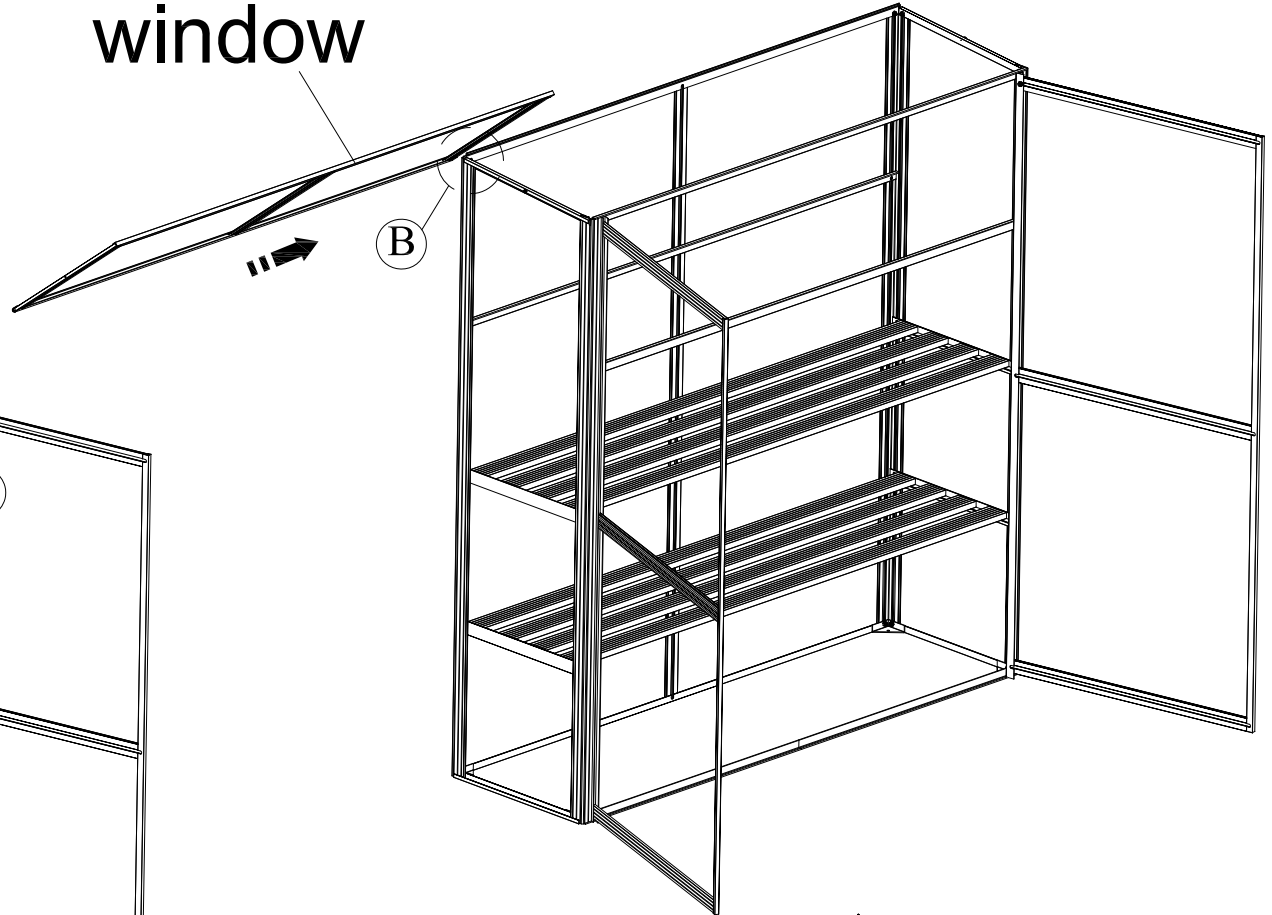







window

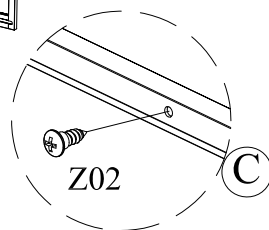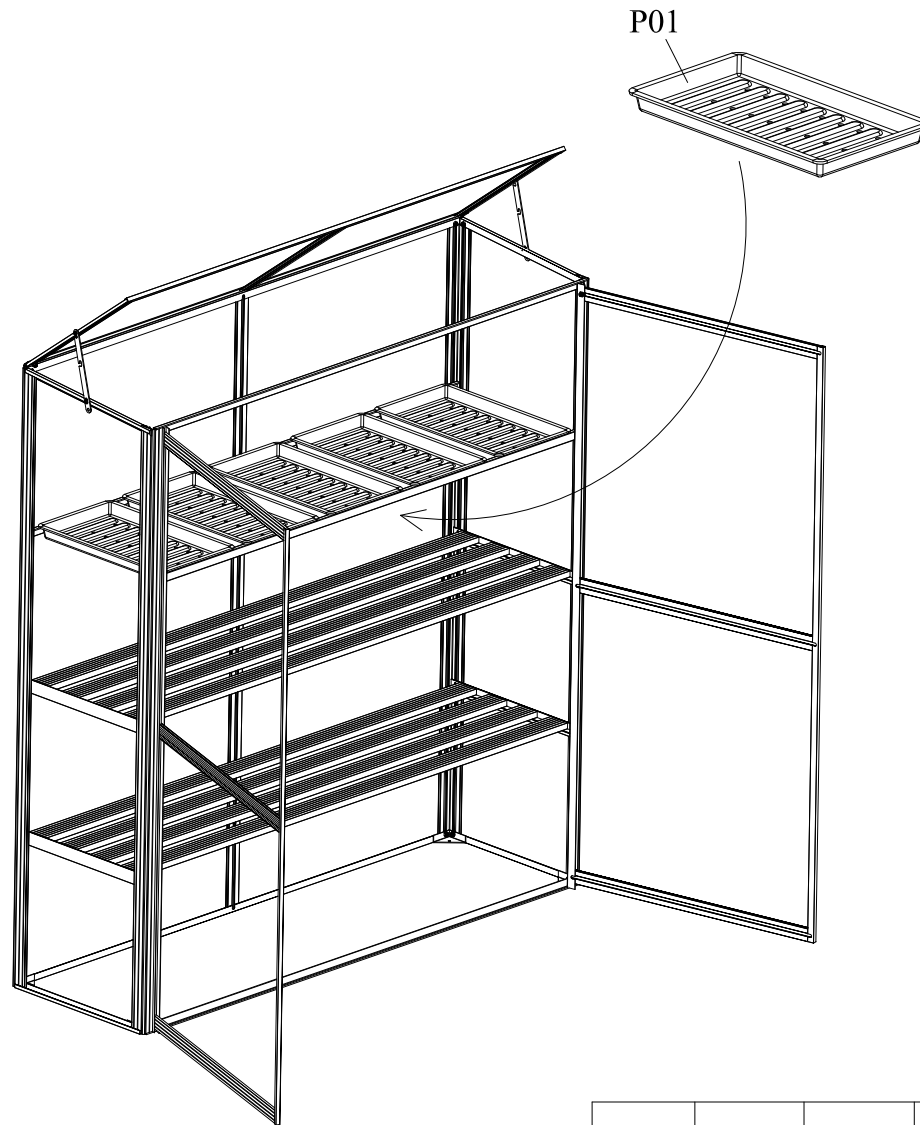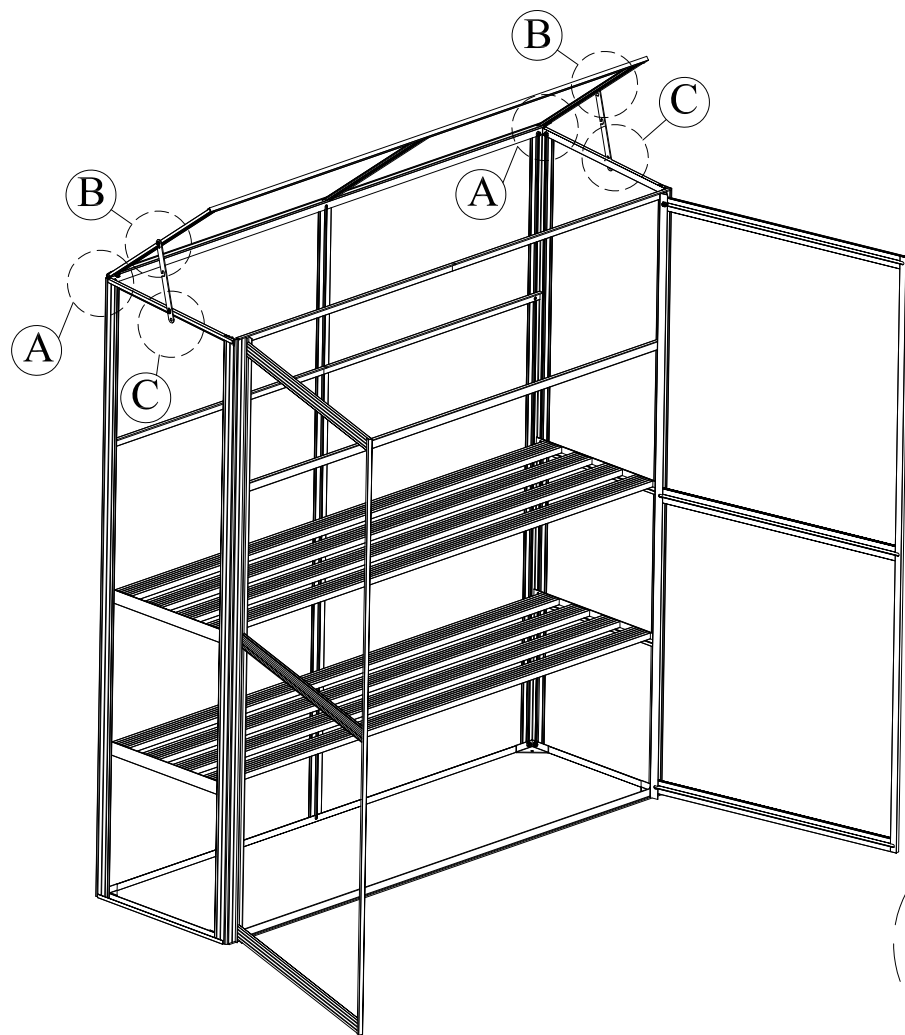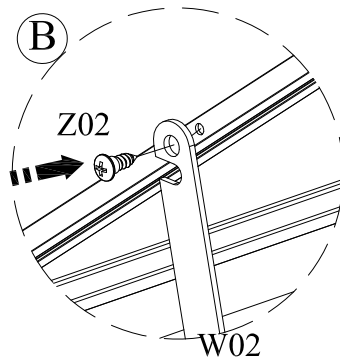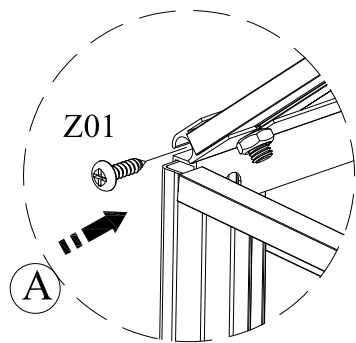


PART	#	mm	Qty.
	S01	M6*10	5
	M01	M6	5



PART	#	mm	Qty.
	Z01	Ø4*16	2
	Z02	Ø4*12	4
	W02		2
	P01		5

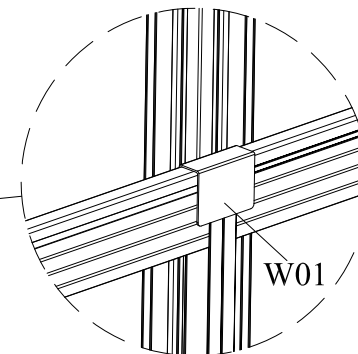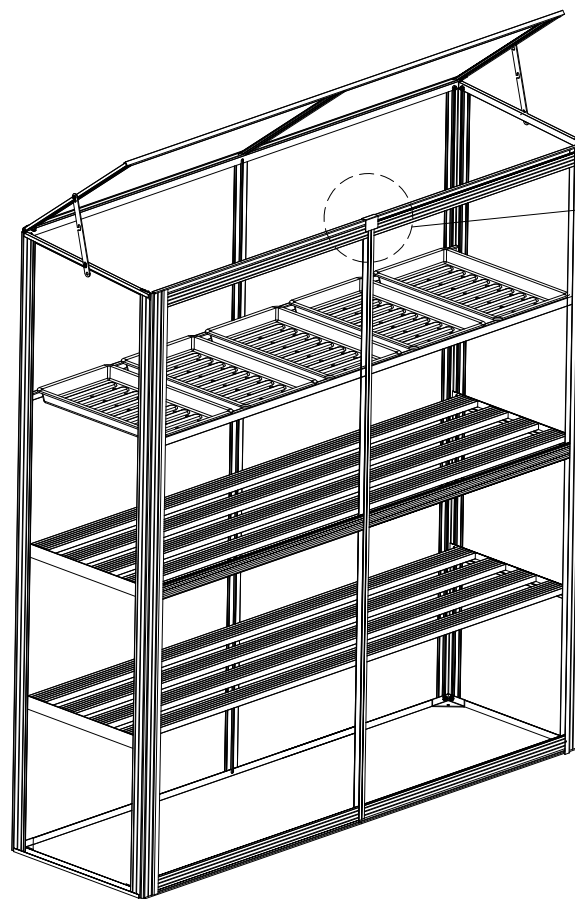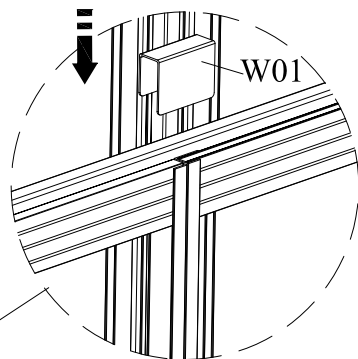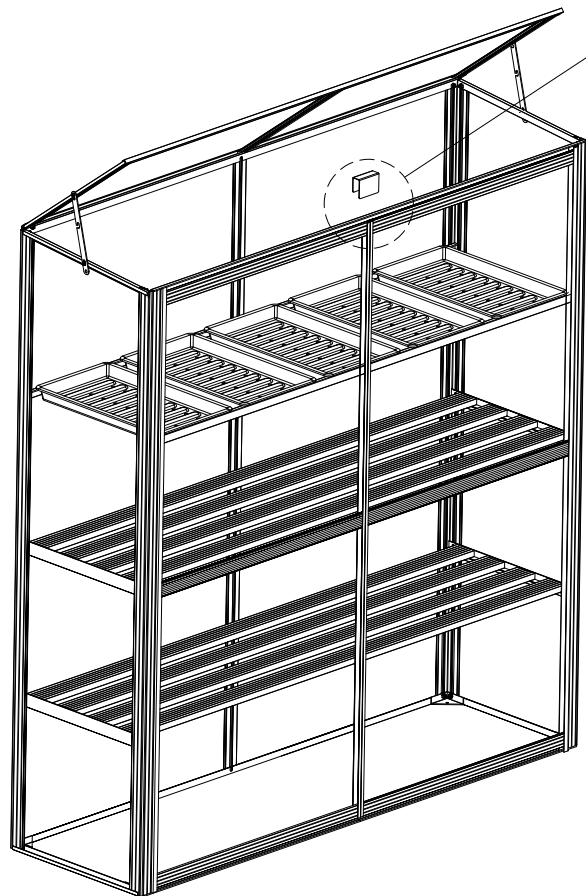

PART	#	mm	Qty.
	W01		1

# DANCOVER<sup>®</sup>

.com

## Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK



For more information please visit: [www.dancovershop.com](http://www.dancovershop.com)