


MODULARO™


WOODEN COMBI SHED LOJO

3x3,64x2,57M


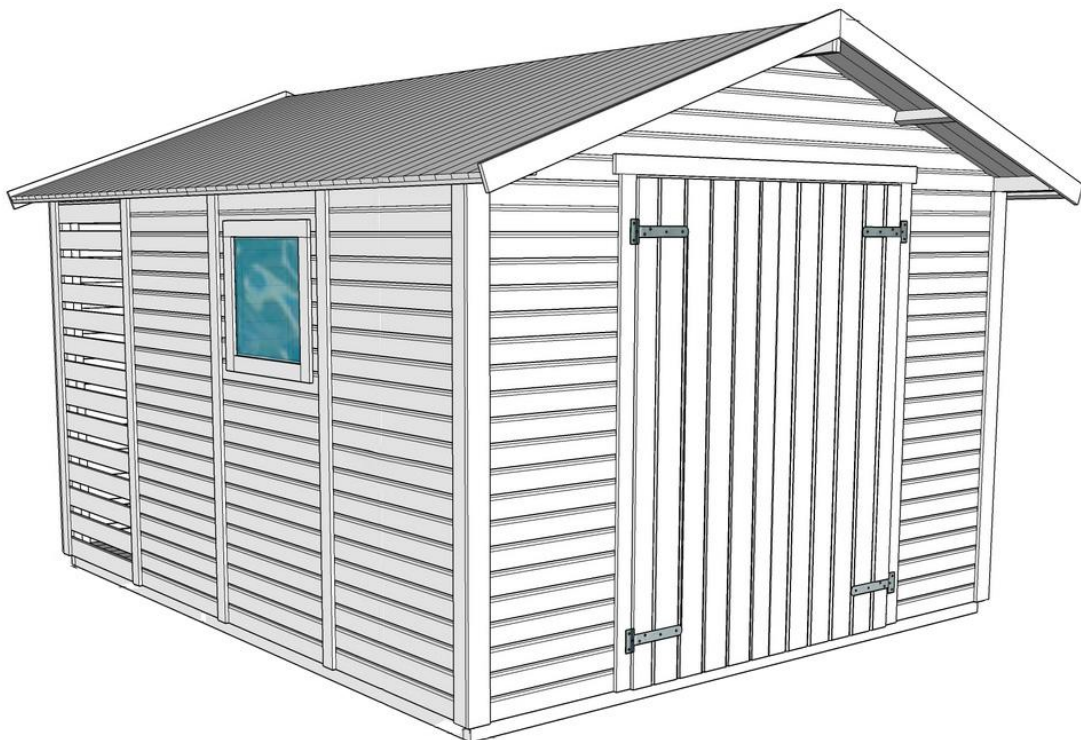


Wooden Combi Sheed Lojo

Assembly instruction
Important !
Wichtig !

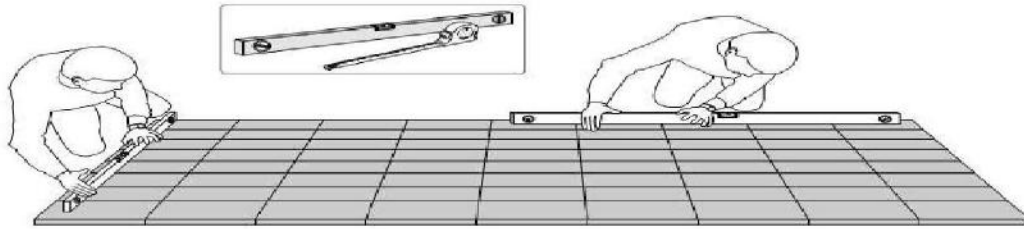


Important !
Wichtig !

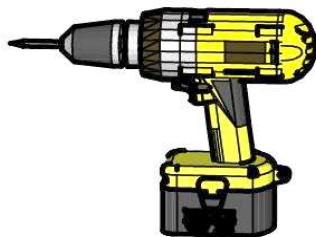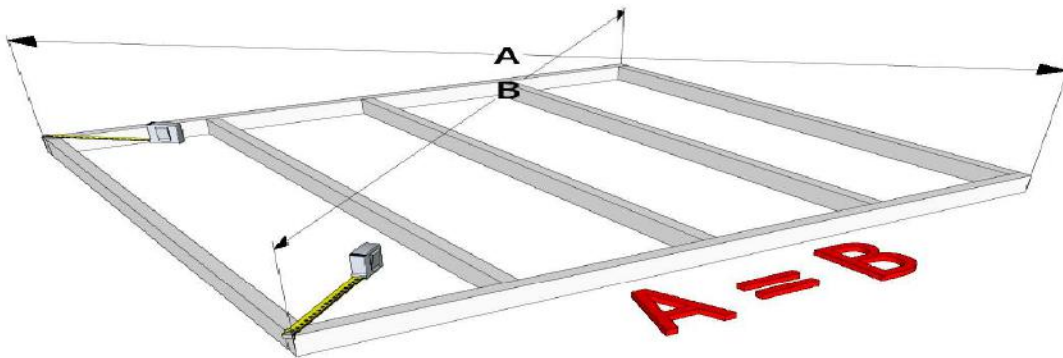


Wooden Combi Sheed Lojo

Assembly instruction

1/11

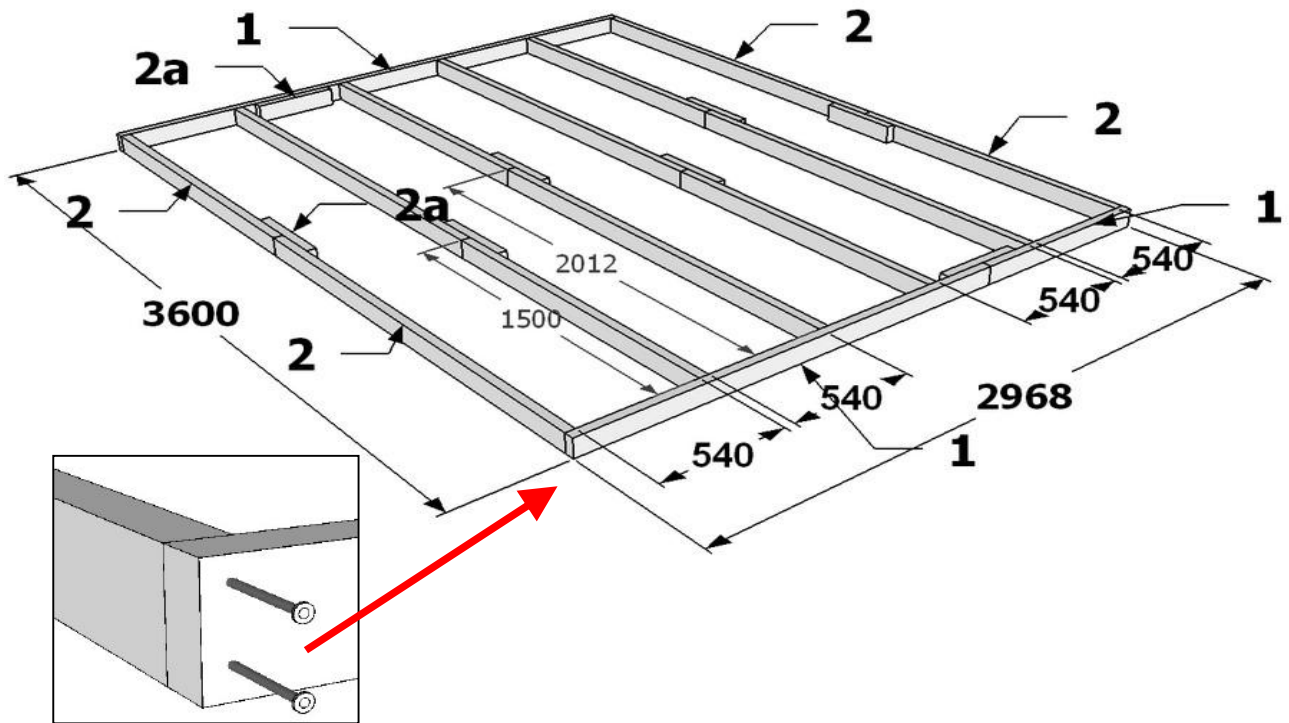

2	+	2	(2a)	+	4,5 x 80	56
		1	+	1	(2a)	

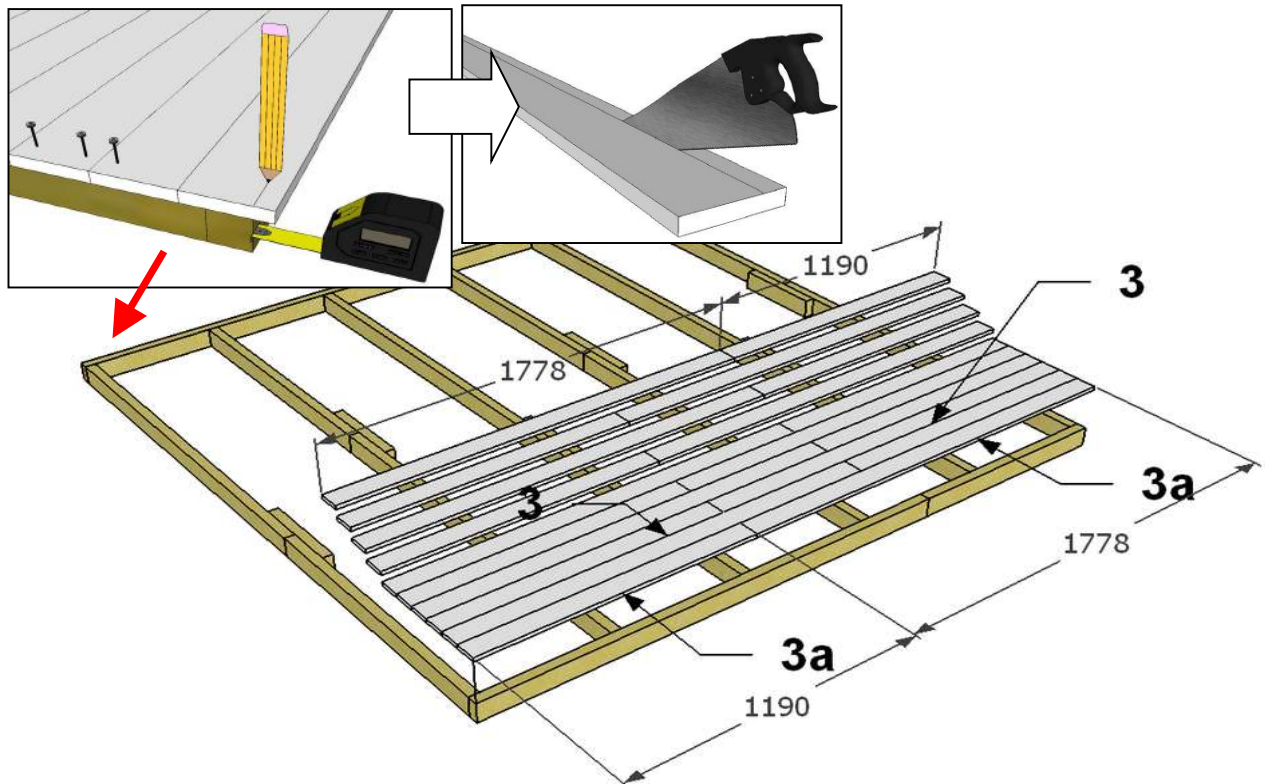


3a	+	3	2 x 50	294
----	---	---	--------	-----

Wooden Combi Sheed Lojo

Assembly instruction

2/11

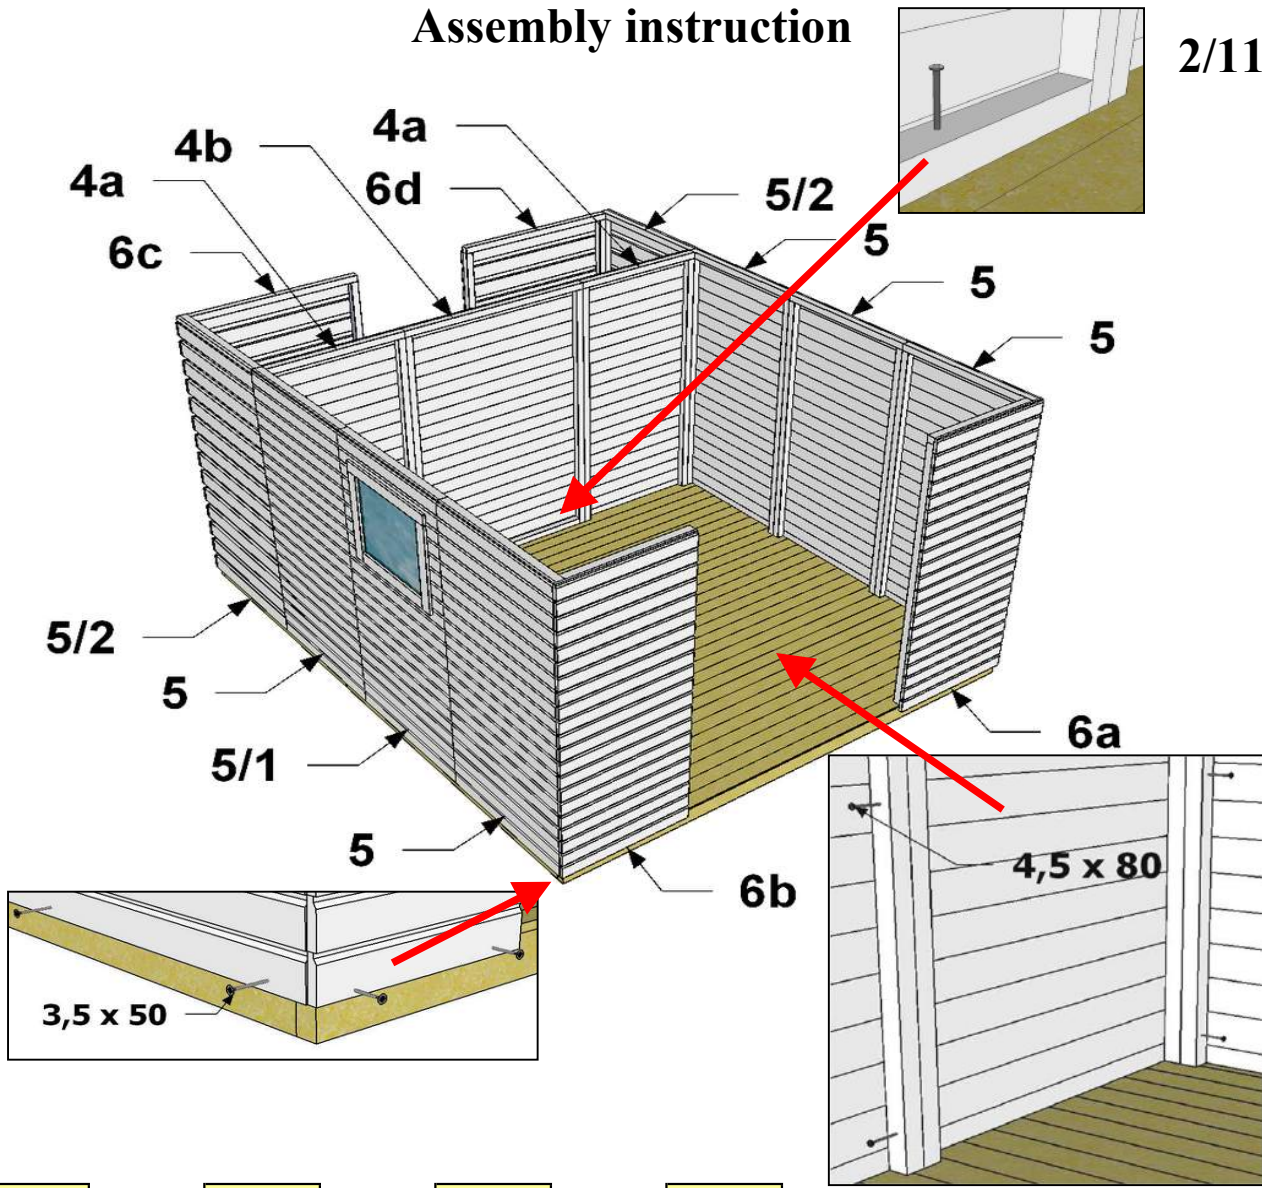


5	+	4a	+	4b	+	4a		
+	5	+	5/1	+	5	+	4,5 x 80	56
6b	+	5	+	5	+	6a		
+	5/2	+	6d	+	5/2	+	6d	
		4b	+	base			4,5 x 80	2
6a	5	5	5	5/2	6d	6c		
							3,5 x 50	56
5/2	5	5/1	5	6b	+	base		

Wooden Combi Sheed Lojo



Assembly instruction

3/11

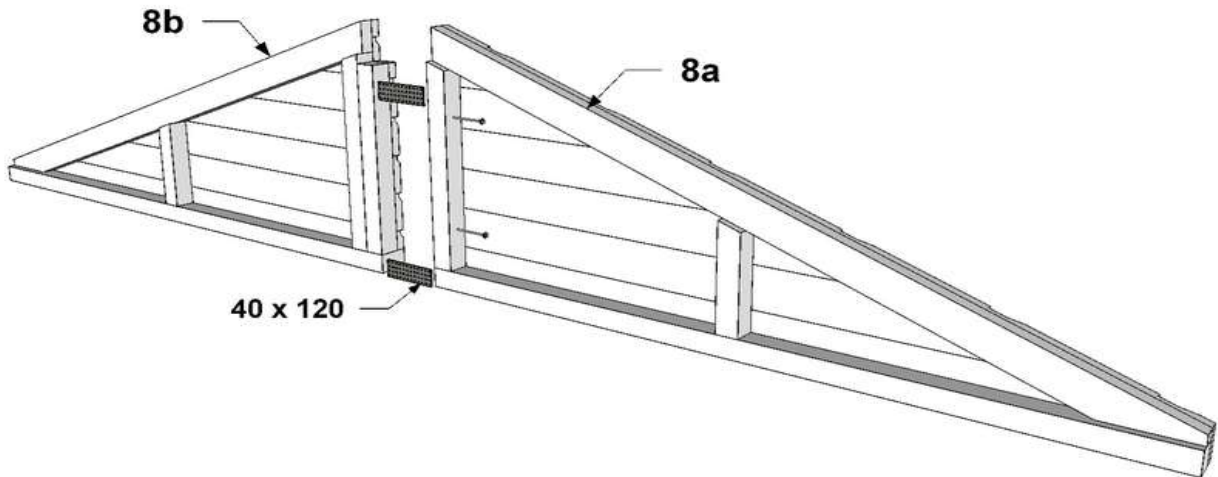

8a + **8b**

4,5 x 80	6
40 x 120	6
3,5 x 40	48

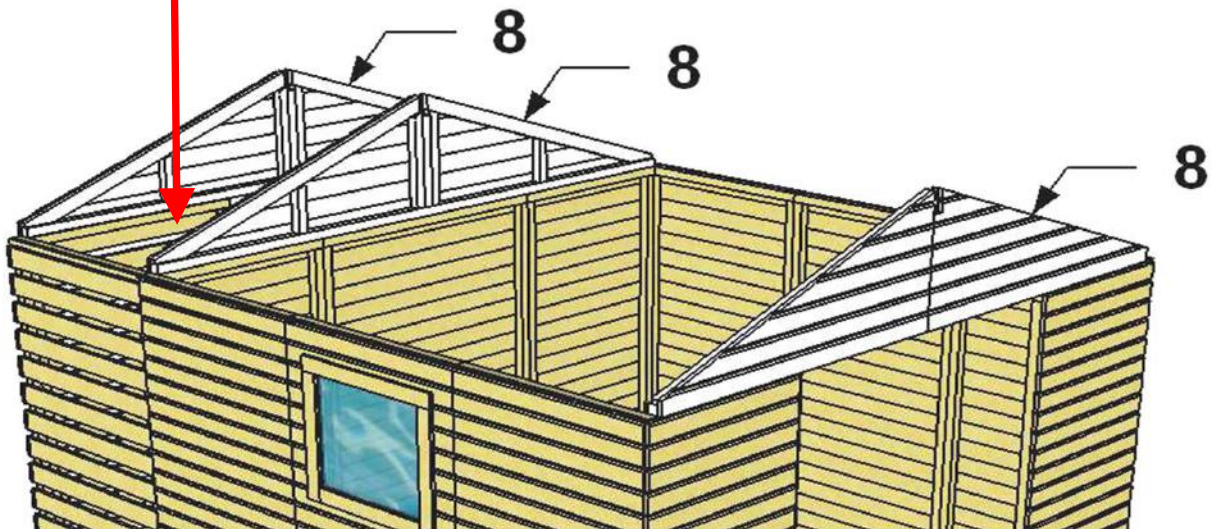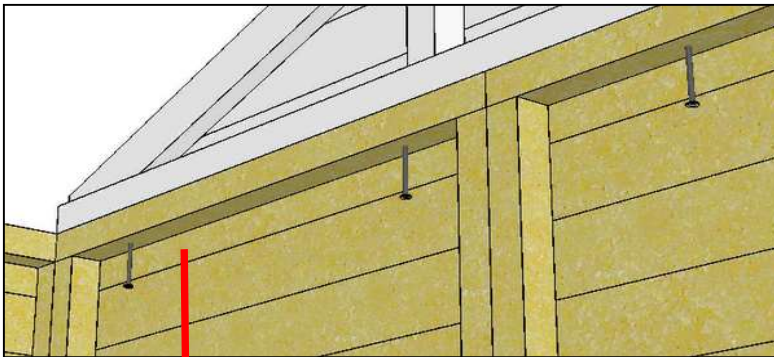




+ **8**

4,5 x 80	16
----------	----




Wooden Combi Sheed Lojo

Assembly instruction

4/11

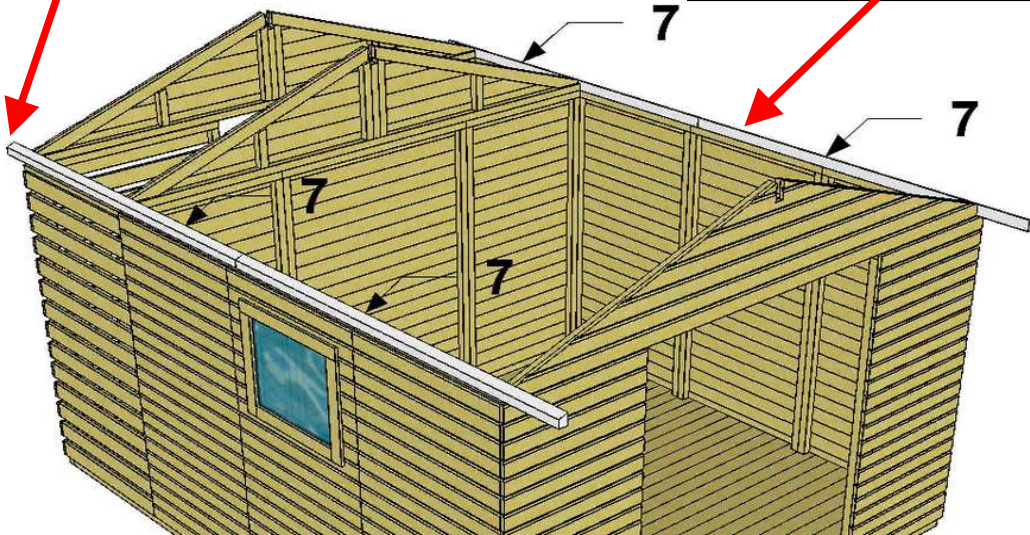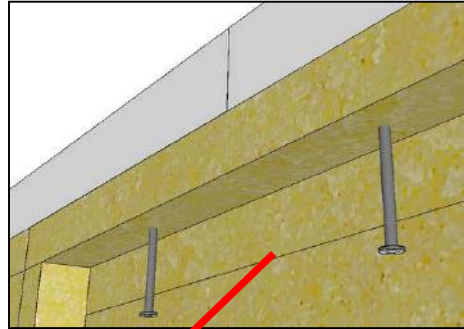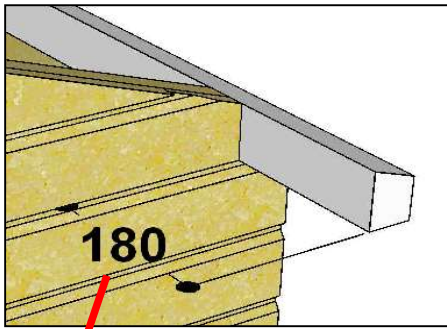

+	7	4,5 x 80	16
---	----------	-----------------	-----------

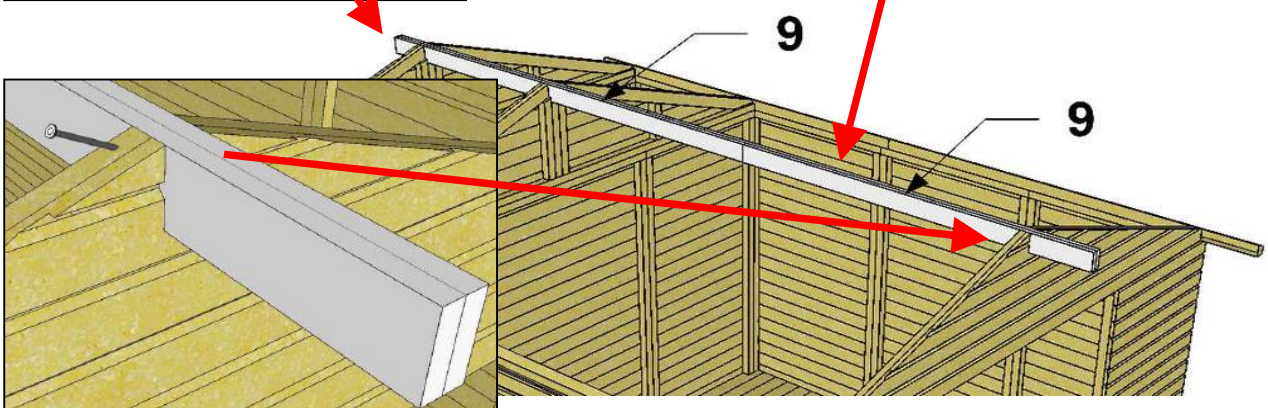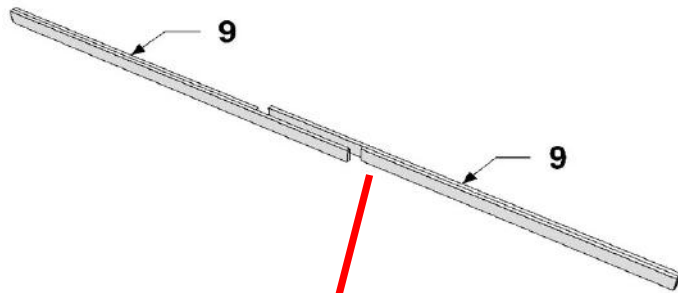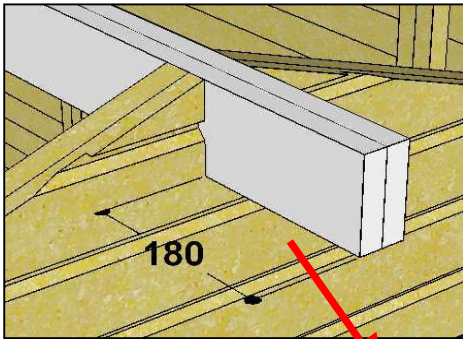


9	+	9	3,5 x 40	10
----------	---	----------	-----------------	-----------

+	9	4,5 x 80	3
---	----------	-----------------	----------

Wooden Combi Sheed Lojo




Assembly instruction

5/11

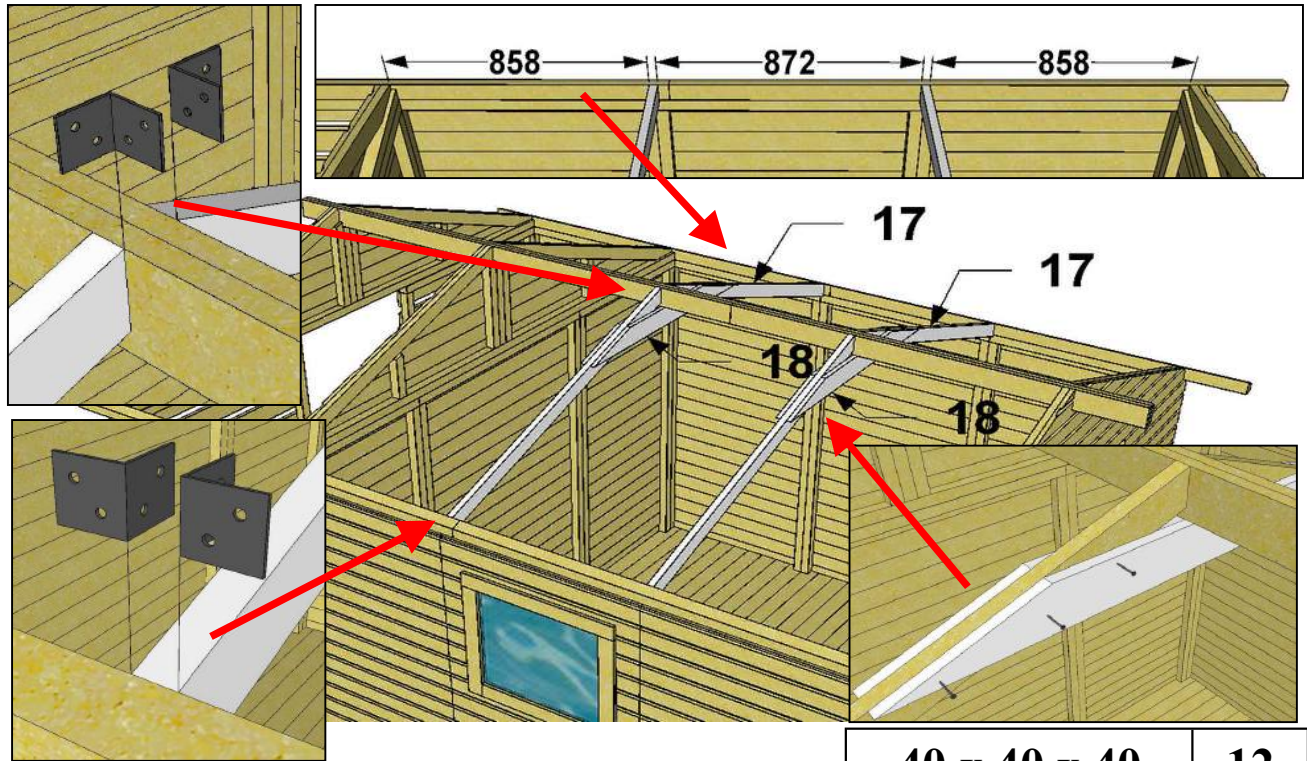

+ **17** + **18**

40 x 40 x 40	12
3,5 x 25	36
3,5 x 40	60

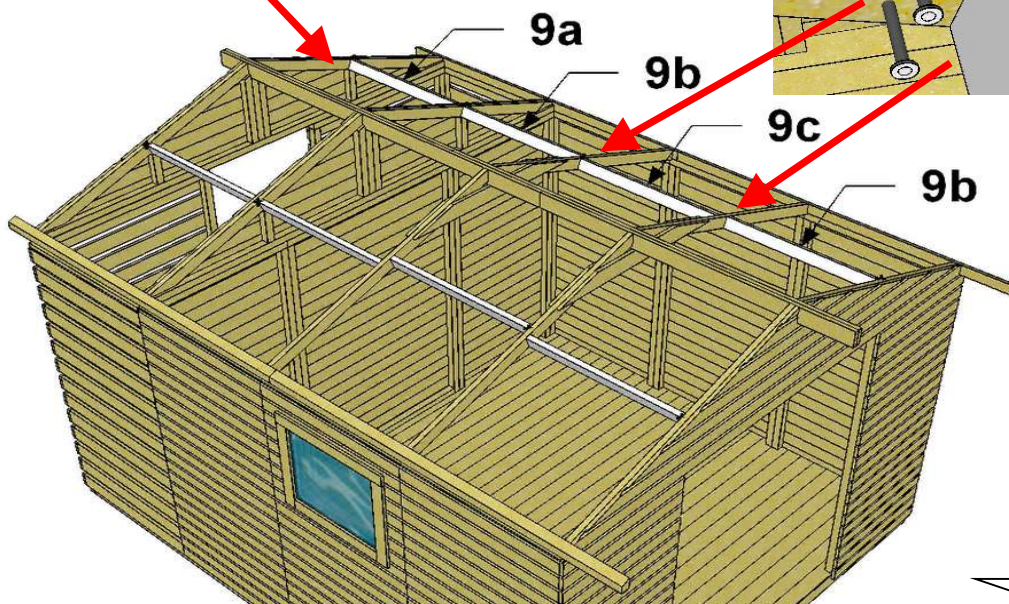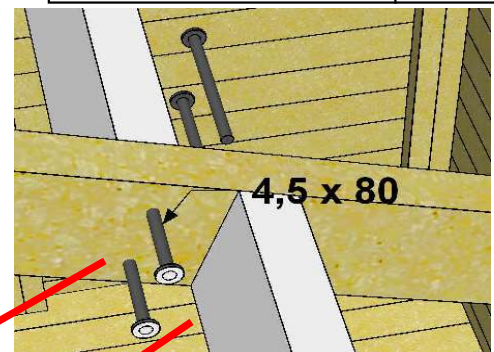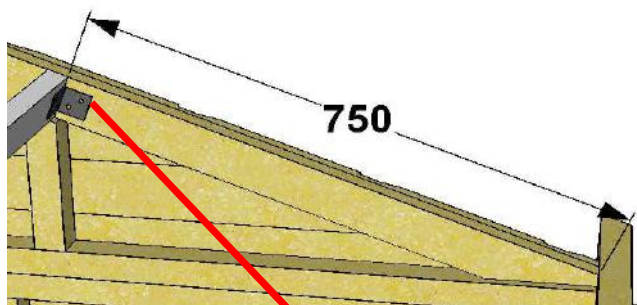


Wooden Combi Sheed Lojo

Assembly instruction

6/11




+ **9a** + **9b** + **9c**

40 x 40 x 40	10
3,5 x 25	60
4,5 x 80	16

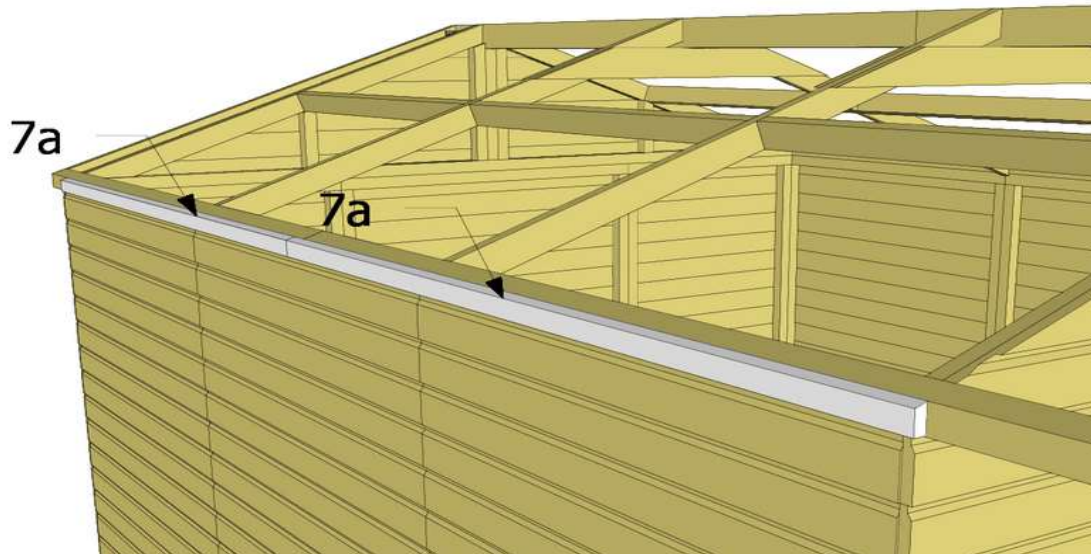

+ **7a**

3,5 x 40	12
----------	----

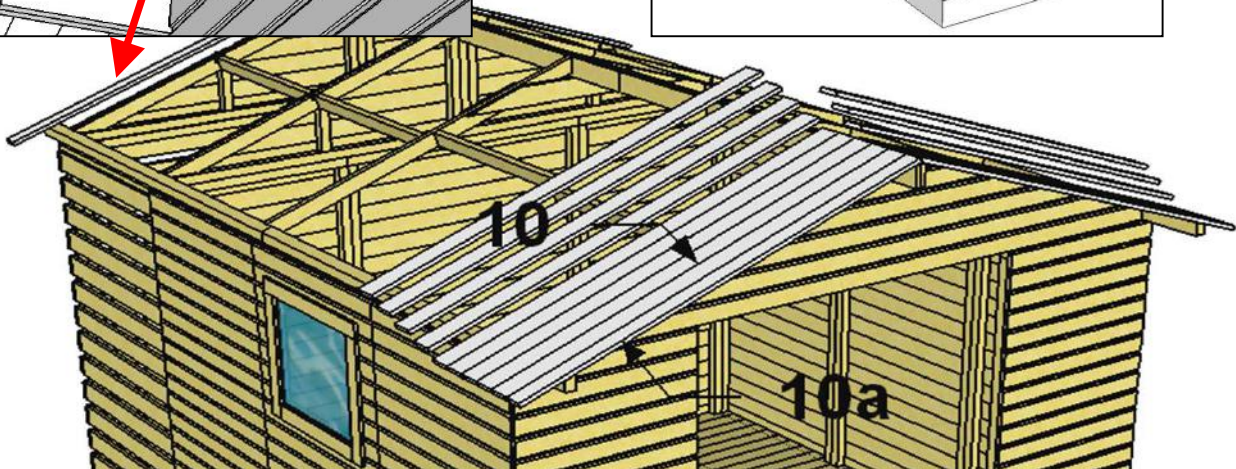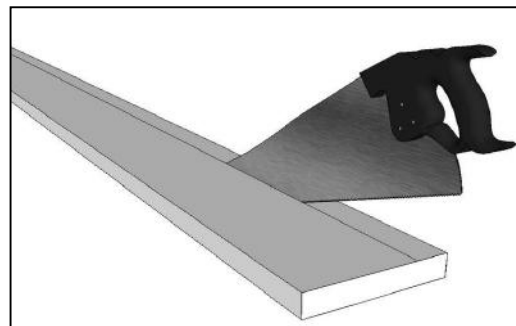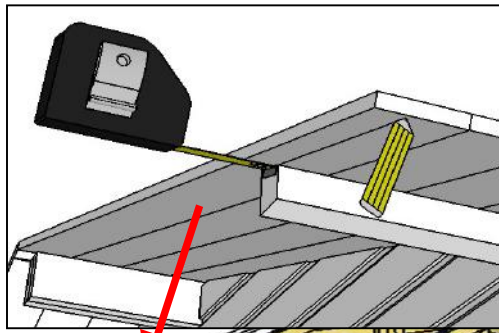


10a + **10** + **10b**

2 x 50	288
--------	-----


Wooden Combi Sheed Lojo

Assembly instruction

7/11

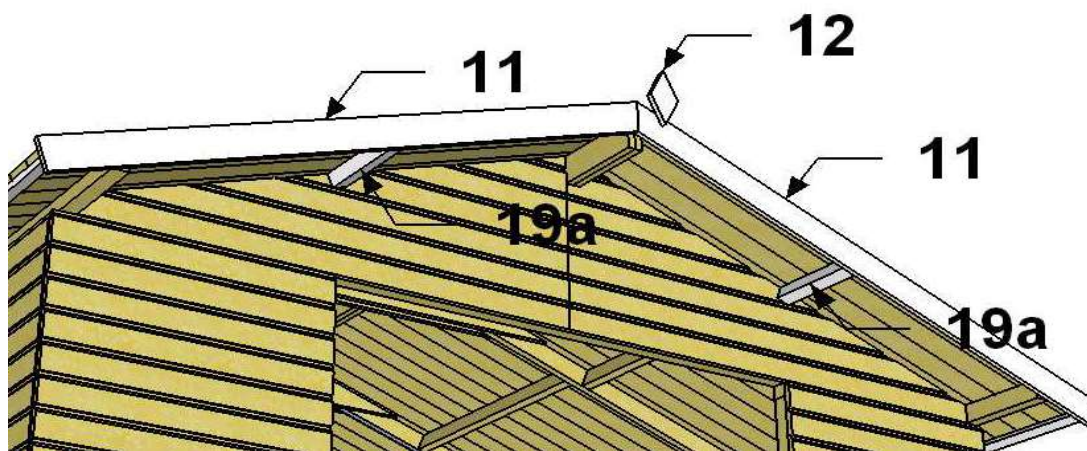


Front

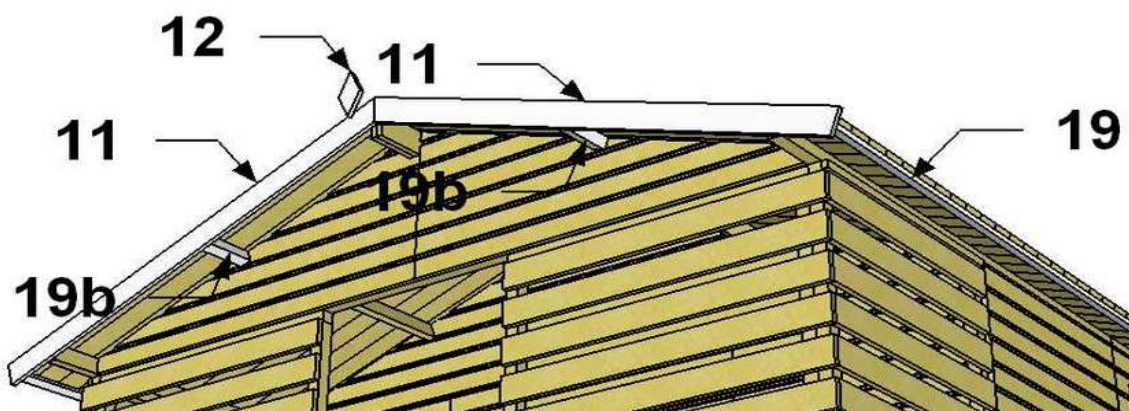

Back

11	+	12	3,5 x 40	20	
	+	19	3,5 x 30	32	
+	19a	+	19b	4,5 x 80	8


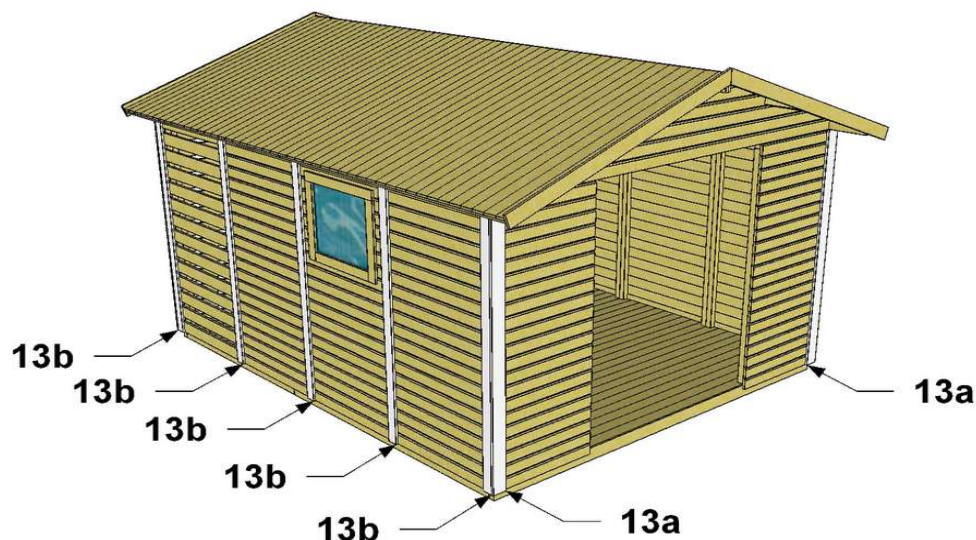


13a	+	13b	3,5 x 40	42
------------	---	------------	-----------------	-----------



Wooden Combi Sheed Lojo

Assembly instruction

Back door

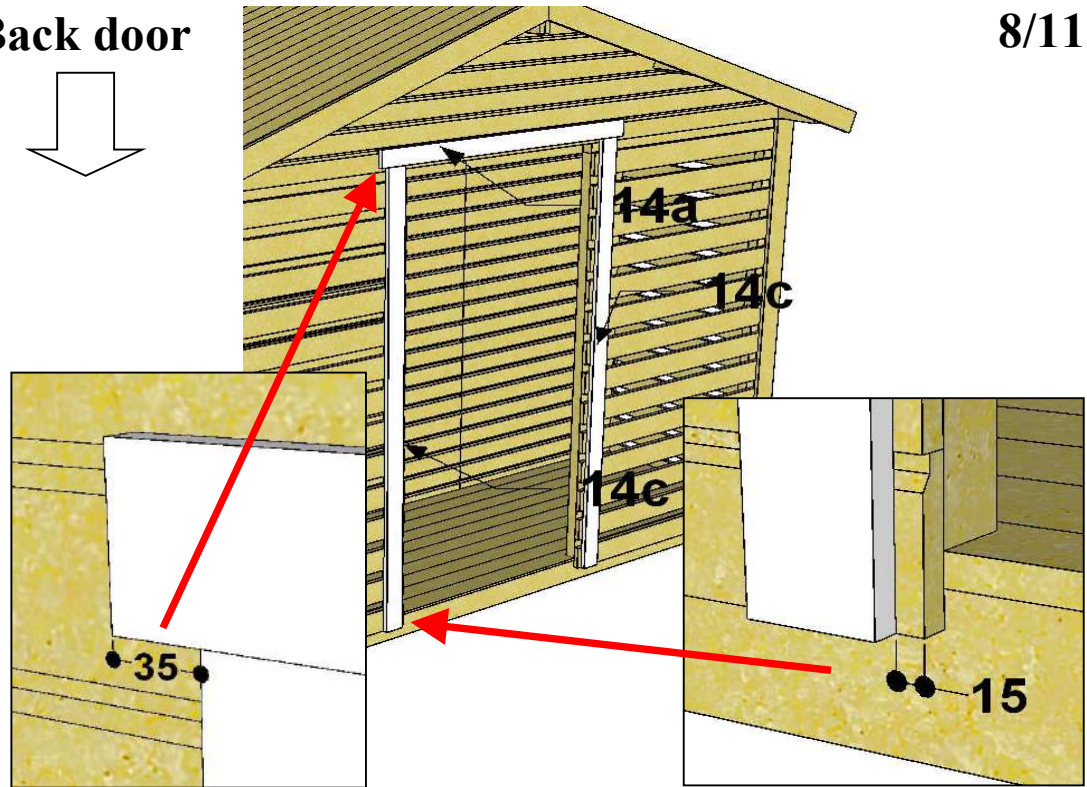

+ 14a	+ 14c	3,5 x 40	11
-------	-------	----------	----

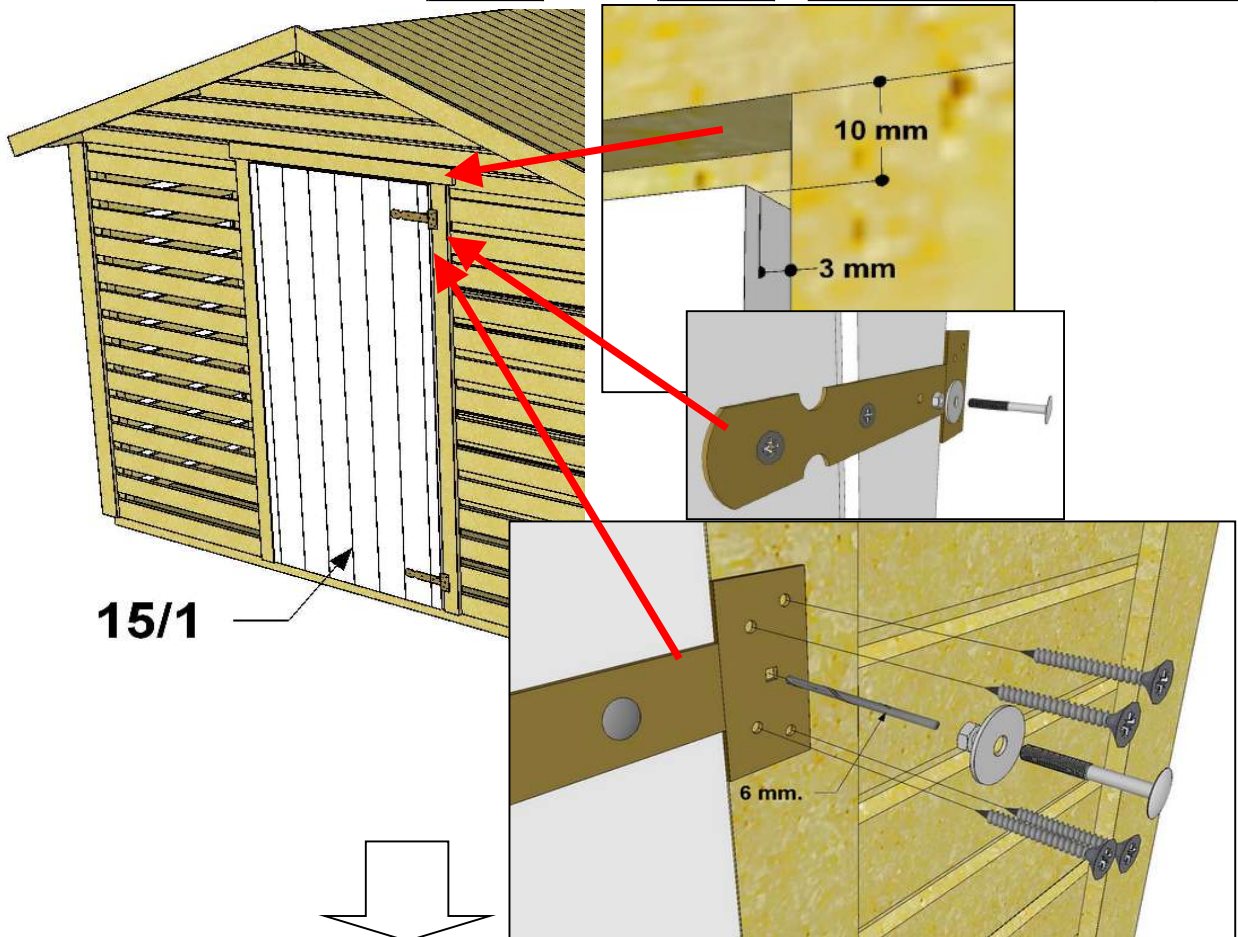



Wooden Combi Sheed Lojo

Assembly instruction


9/11

+	bolt, L=90, washer, nut	M6	à 2
		bolt L=60, washer, nut M6	à 2
+	15/1	3,5 x 40	8
+	16b	3,5 x 30	16

Front door

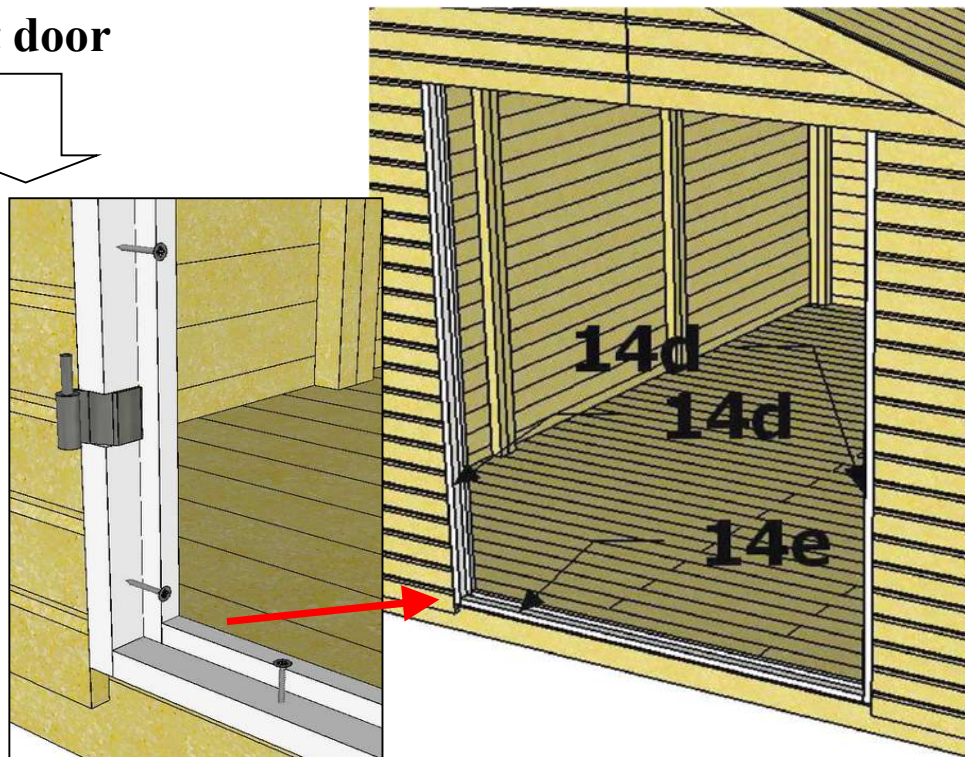

+	14d	+	14c	4 x 60	12
---	-----	---	-----	--------	----

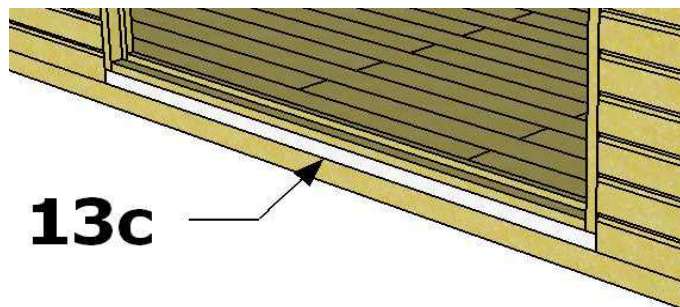


+	13c	3,5 x 50	4
---	-----	----------	---

Wooden Combi Sheed Lojo

Assembly instruction

10/11

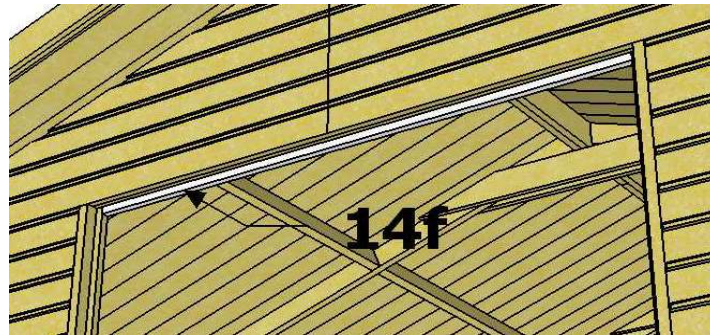


+

14f

3,5 x 50

4

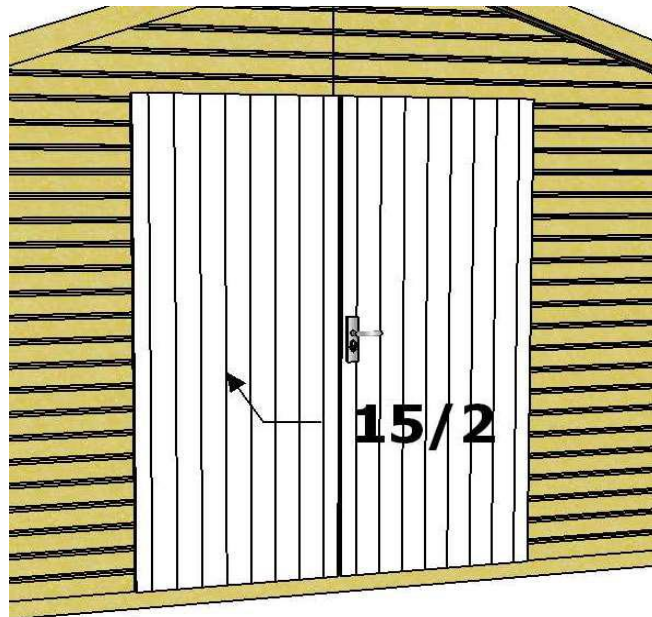


+

15/2

+

16a

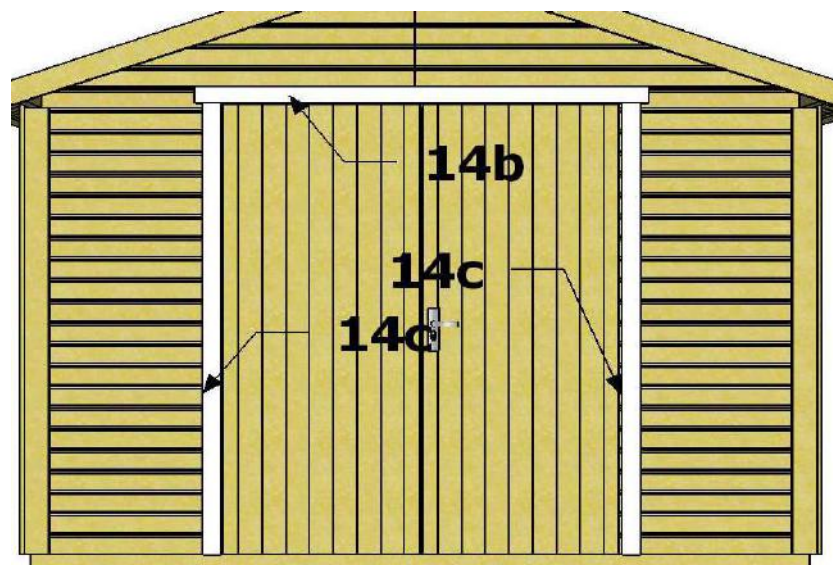

+

14c

+

14b

3,5 x 40

12

Wooden Combi Sheed Lojo


Assembly instruction

11/11



3,5 x 25

4

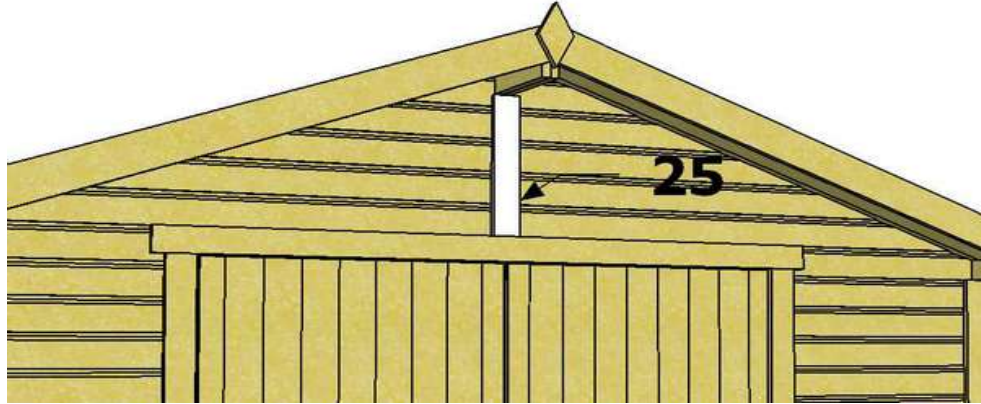

to front and back

+

25

3,5 x 40

6

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

